
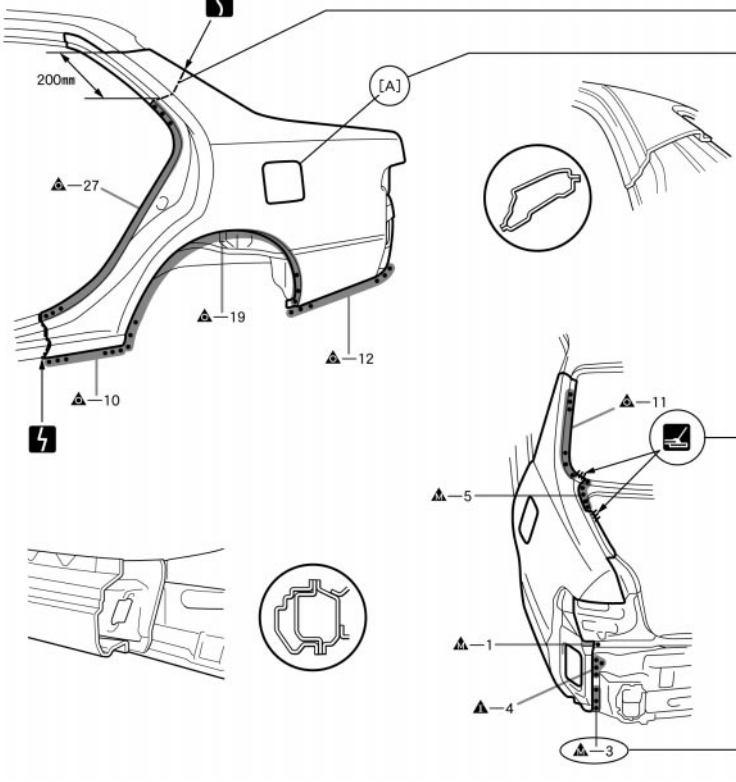


HOW TO USE THIS MANUAL

1. BODY PANEL REPLACEMENT THIS MANUAL

BP-34	BODY PANEL REPLACEMENT
<p>(A) QUARTER PANEL (CUT) REPLACEMENT</p>	
<p>(B) REMOVAL</p>	<p>(I)</p> <p>(K)</p>
<p>(D)</p>	
<p>(E)</p>	<p>(J)</p>
<p>POINT 1 Remove the [A] at the same time.</p> <p>PART NAME [A] Fuel Filler Opening Lid</p>	

(A) : REPLACEMENT PART AND METHOD
QUARTER PANEL (CUT)

	Replacement method (ASSY) ... Assembly replacement (CUT) ... Major cutting (less than 1/2 of part used) (CUT-H) ... Half cutting (about 1/2 of part used) (CUT-P) ... Partial cutting (most of part used)
	Replacement part

(B) : REMOVAL CONDITIONS

(C) : PART LOCATION

(D) : REMOVAL DIAGRAM
Describes in detail removal of the damaged part involving repair by cutting.


(E) : REMOVAL GUIDE
Provides additional information to more efficiently help you perform the removal.

BODY PANEL REPLACEMENT

BP-35

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

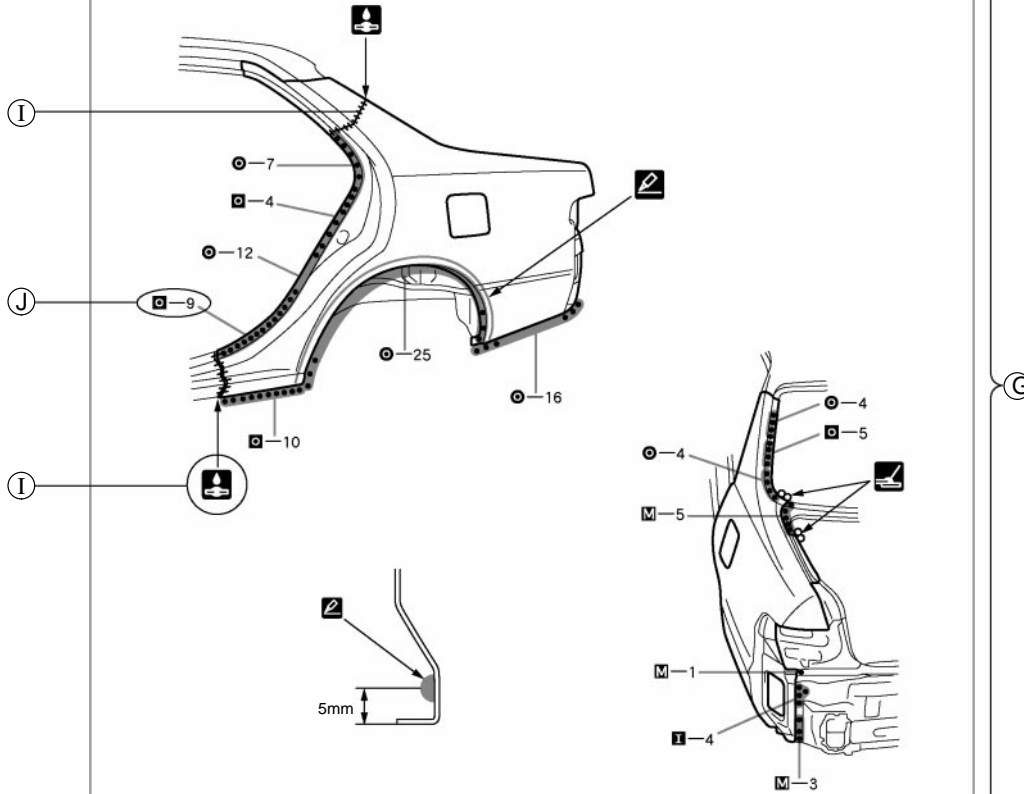

POINT

- 1 Before temporarily installing the new parts, apply body sealer to the wheel arch.
- HINT:
- 1) Apply body sealer about 5mm (0.20in.) from the flange, avoiding any oozing.
 - 2) Apply sealer evenly, about 3 - 4mm (0.12 - 0.16in.) in diameter.
 - 3) For other sealing points, refer to section PC.

PART NAME

- [A] Fuel Filler Opening Lid [B] Waterproof Rivet

(F) : INSTALLATION CONDITIONS

(G) : INSTALLATION DIAGRAM
Describes in detail installation to the new part involving repair by welding and/or cutting, but excluding painting.

(H) : INSTALLATION GUIDE
Provides additional information to more efficiently help you perform the installation.
















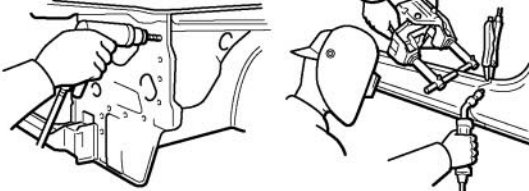
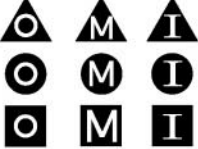



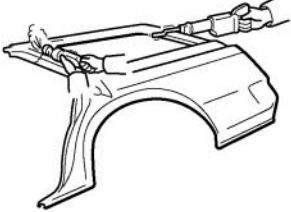



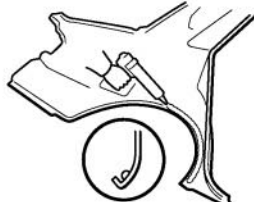
(I) : SYMBOLS
(See page IN-7)


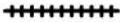


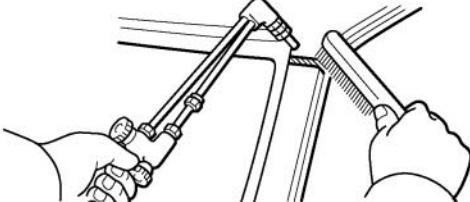(J) : ILLUSTRATION OF WELD POINTS
Weld method and panel position symbols (See page IN-9)

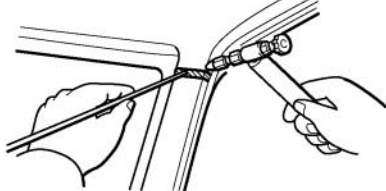(K) : PART NAME

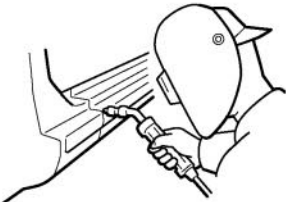2. SYMBOLS

The following symbols are used in the welding diagrams in section BP of this manual to indicate cutting areas and the types of weld required.

SYMBOLS	MEANING	ILLUSTRATION
	 CUT AND JOIN LOCATION (SAW CUT)	 
	 CUT AND JOIN LOCATION (Cut Location for Supply Parts)	
	 CUT LOCATION	
	 CUT WITH DISC SANDER, ETC.	
	 BRAZE (Removal)	
	 BRAZE (Installation)	
	 WELD POINTS	
	 SPOT WELD OR MIG PLUG WELD (See Page IN-9)	
	 CONTINUOUS MIG WELD (BUTT WELD)	
	 CONTINUOUS MIG WELD (TACK WELD)	
	 BODY SEALER	


SYMBOLS		MEANING	ILLUSTRATION
—		Assembly Mark	
	—	BODY SEALER (Flat Finishing)	
—	—	BODY SEALER (No flat Finishing)	

3. ILLUSTRATION OF WELD POINT SYMBOLS

EXAMPLE:

REMOVAL			INSTALLATION		
<p>Remove weld point and panel position</p>			<p>Weld method and panel position</p>		
SYMBOLS	MEANING	ILLUSTRATION	SYMBOLS	MEANING	ILLUSTRATION
 	Remove Weld Points		 	Spot Weld	
	(Outside)		 	MIG Plug Weld	
	(Middle)		 		
	(Inside)				
<p><i>HINT: Panel position symbols are as seen from the working posture.</i></p>				Spot MIG Weld	

PRECAUTIONS FOR REPAIRING BODY STRUCTURE PANELS

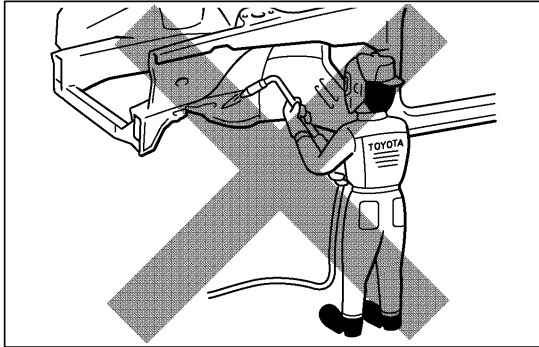

1. HEAT REPAIR FOR BODY STRUCTURE PANELS

Toyota prohibits the use of the heat repair method on body structure panels when repairing a vehicle damaged in a collision.

Panels that have high strength and rigidity, as well as a long life span for the automobile body are being sought after.


At Toyota, in order to fulfill these requirements, we use high tensile strength steel sheets and rust preventive steel sheets on the body.

High tensile steel sheets are made with alloy additives and a special heat treatment in order to improve the strength.

To prevent the occurrence of rust for a long period of time, the surface of the steel is coated with a zinc alloy.

If a body structure part is heat repaired with an acetylene torch or other heating source, the crystalline organization of the steel sheet will change and the strength of the steel sheet will be reduced.

The ability of the body to resist rust is significantly lowered as well since the rust resistant zinc coating is destroyed by heat and the steel sheet surface is oxidized.


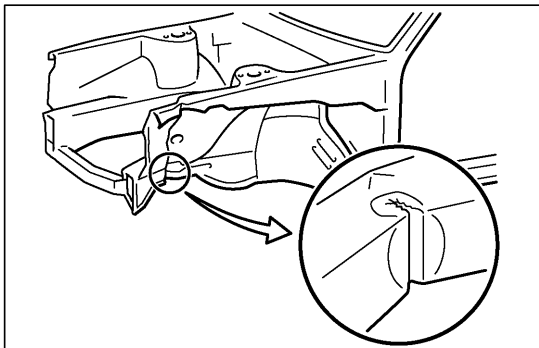


2. STRUCTURE PANEL KINKS

A sharp deformation angle on the panel that cannot be returned to its original shape by pulling or hammering is called a kink.

Since structure parts were designed to exhibit a 100% performance when they were in their original shape, if they are deformed in an accident, or if the deformed parts are repaired and reused, they become unable to exhibit the same performance as intended in the design.

It is necessary to replace the part where the kink has occurred.

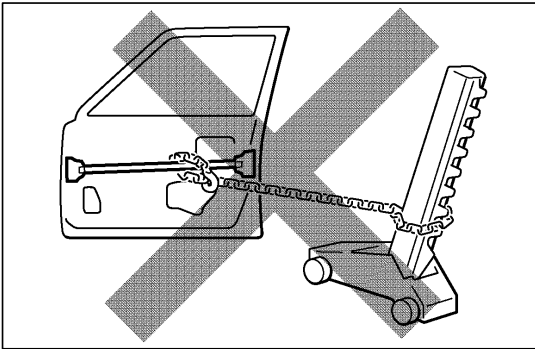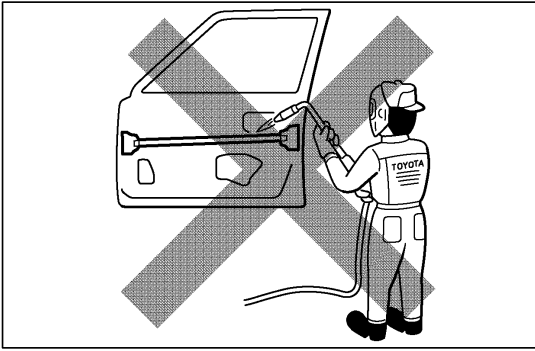

3. IMPACT BEAM REPAIR

The impact beam and bracket are necessary and important parts in maintaining a survival space for passengers in a side collision.


For impact beam, we use special high tensile strength steel.

The high tensile strength steel maintains its special crystal-line organization by heat treatment or alloy additives.

Since these parts were designed to exhibit a 100% performance when they were in their original shape, if they are deformed in an accident, or if the deformed parts are repaired and reused, they become unable to exhibit the same performance as intended in the design.

It is necessary to replace the door assembly when impact beam or bracket is damaged.


PROPER AND EFFICIENT WORK PROCEDURES

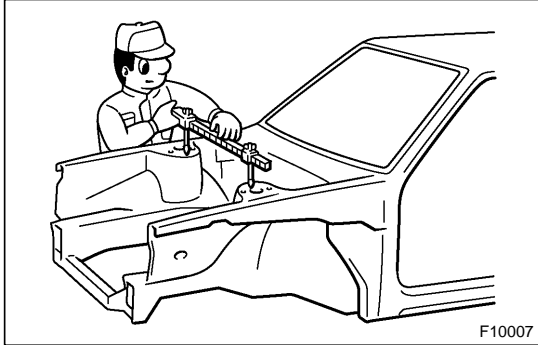

1. REMOVAL


(a) PRE-REMOVAL MEASURING

- (1) Before removal or cutting operations, take measurements in accordance with the dimension diagram. Always use a puller to straighten a damaged body or frame.

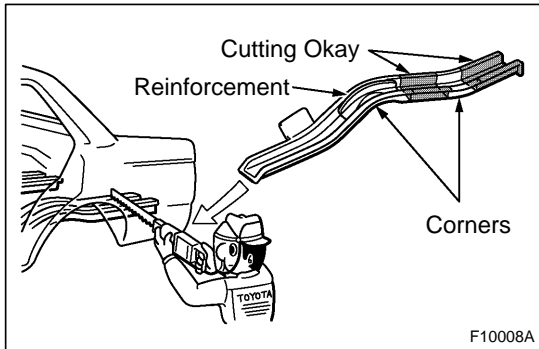

(b) CUTTING AREA


- (1) Always cut in a straight line and avoid reinforced area.

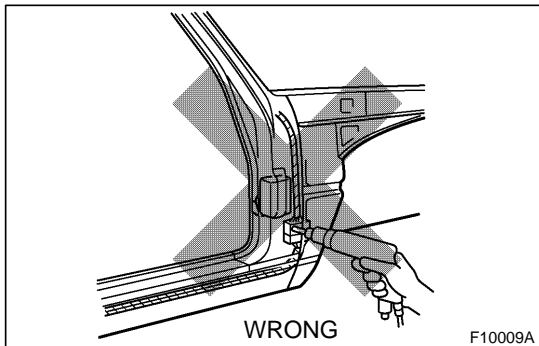

(c) PRECAUTIONS FOR DRILLING OR CUTTING

- (1) Check behind any area to be drilled or cut to insure that there are no hoses, wires, etc., that may be damaged.


HINT: See "Handling Precautions on Related Components" on page IN-15.

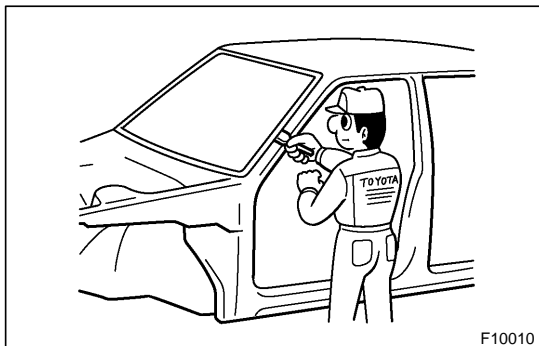

(d) REMOVAL OF ADJACENT COMPONENTS

- (1) When removing adjacent components, apply protective tape to the surrounding body and your tools to prevent damage.

HINT: See "Handling Precautions on Related Components" on page IN-15.

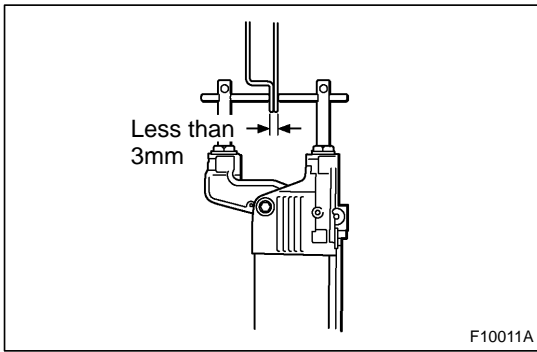


2. PREPARATION FOR INSTALLATION

(a) SPOT WELD POINTS


- (1) When welding panels with a combined thickness of over 3mm (0.12in.), use a MIG (Metal Inert Gas) welder for plug welding.

HINT: Spot welding will not provide sufficient durability for panels over 3mm (0.12in.) thick.

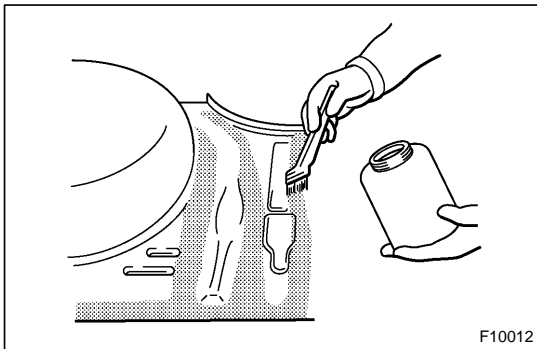

(b) APPLICATION OF WELD-THROUGH PRIMER (SPOT SEALER)

- (1) Remove the paint from the portion of the new parts and body to be welded, and apply weld-through primer.

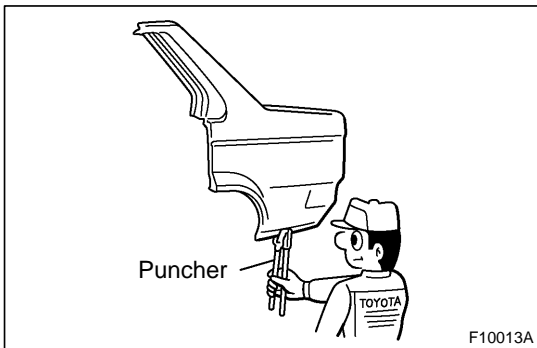


(c) MAKING HOLES FOR PLUG WELDING

- (1) For areas where a spot welder cannot be used, use a puncher or drill to make holes for plug welding.

REFERENCE:


mm (in.)

Thickness of welded portion	Size of plug hole
1.0 (0.04) under	5 (0.20) ϕ over
1.0 (0.04) - 1.5 (0.06)	6.4 (0.26) ϕ over
1.5 (0.06) over	8 (0.31) ϕ over

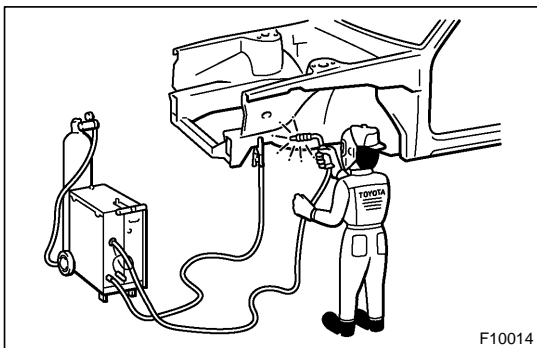


(d) SAFETY PRECAUTIONS FOR ELECTRICAL COMPONENTS

- (1) When welding, there is a danger that electrical components will be damaged by the electrical current flowing through the body.
- (2) Before starting work, disconnect the negative terminal of the battery and ground the welder near the welding location of the body.

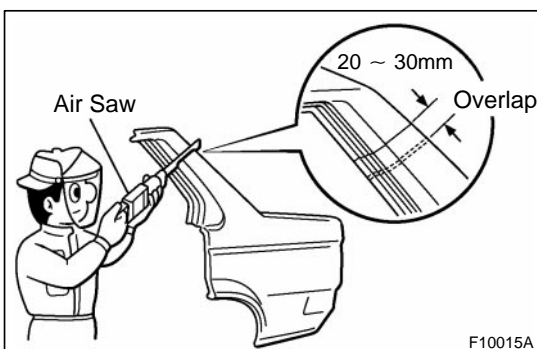

(e) ROUGH CUTTING OF JOINTS


- (1) For joint areas, rough cut the new parts, leaving 20 - 30mm (0.79 - 1.18in.) overlap.

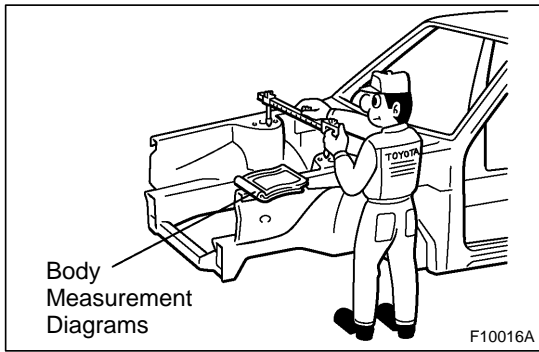

3. INSTALLATION


(a) PRE-WELDING MEASUREMENTS

- (1) Always take measurements before installing underbody or engine components to insure correct assembly. After installation, confirm proper fit.

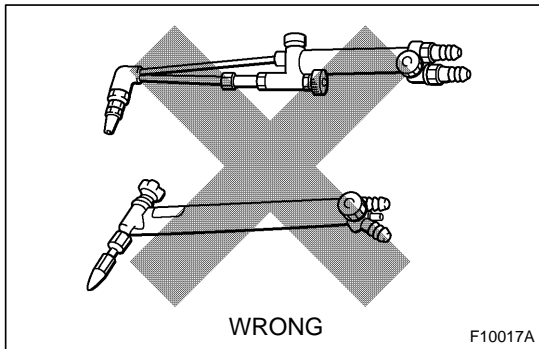


(b) WELDING PRECAUTIONS

- (1) The number of welding spots should be as follows.
Spot weld: 1.3 X No. of manufacturer's spots.
Plug weld: More than No. of manufacturer's plugs.
- (2) Plug welding should be done with a MIG (Metal Inert Gas) welder. Do not gas weld or braze panels at areas other than specified.

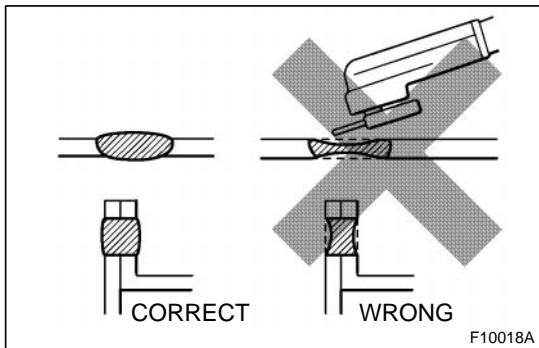


(c) POST-WELDING REFINISHING

- (1) Always check the welded spots to insure they are secure.
- (2) When smoothing out the weld spots with a disc grinder, be careful not to grind off too much as this would weaken the weld.

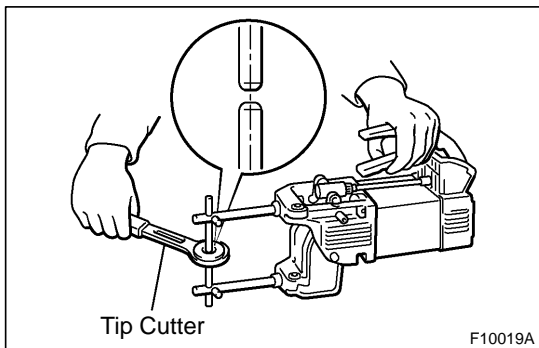


(d) SPOT WELD LOCATIONS

- (1) Try to avoid welding over previous spots.

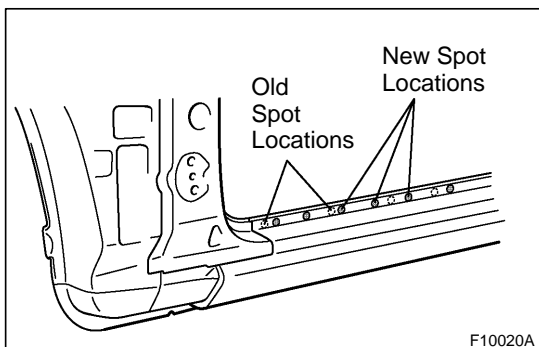

(e) SPOT WELDING PRECAUTIONS


- (1) The shape of the welding tip point has an effect on the strength of the weld.
- (2) Always insure that the seams and welding tip are free of paint.

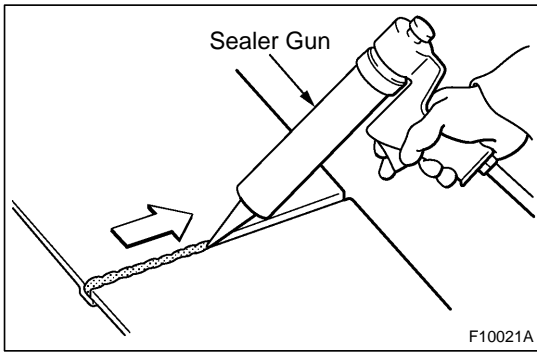

4. ANTI-RUST TREATMENT


(a) BODY SEALER APPLICATION

- (1) For water-proofing and anti-corrosion measures, always apply the body sealer to the body panel seams and hems of the doors, hoods, etc.

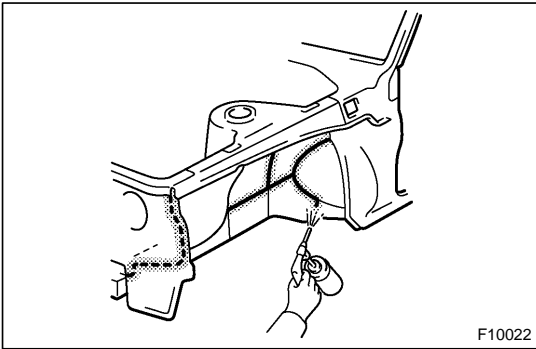

(b) UNDERCOAT APPLICATION

- (1) To prevent corrosion and protect the body from damage by flying stones, always apply sufficient undercoat to the bottom surface of the under body and inside of the wheel housings.

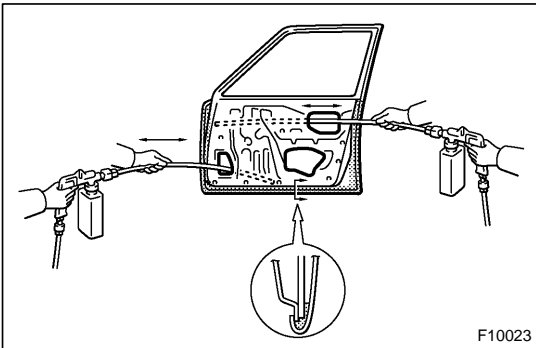

5. ANTI-RUST TREATMENT AFTER PAINTING PROCESS

(a) ANTI-RUST AGENT (WAX) APPLICATION

- (1) To preserve impossible to paint areas from corrosion, always apply sufficient anti-rust agent (wax) to the inside of the hemming areas of the doors and hoods, and around the hinges, or the welded surfaces inside the boxed cross-section structure of the side member, body pillar, etc.

6. ANTI-RUST TREATMENT BY PAINTING

REFERENCE:


Painting prevents corrosion and protect the sheet metal from damage. In this section, anti-chipping paint only for anti-corrosion purpose is described.

(a) ANTI-CHIPPING PAINT

- (1) To prevent corrosion and protect the body from damage by flying stones, etc., apply anti-chipping paint to the rocker panel, wheel arch areas, balance panel, etc.

HINT:

Depending on the model or the application area, there are cases where the application of anti-chipping paint is necessary before the second coat or after the top coat.

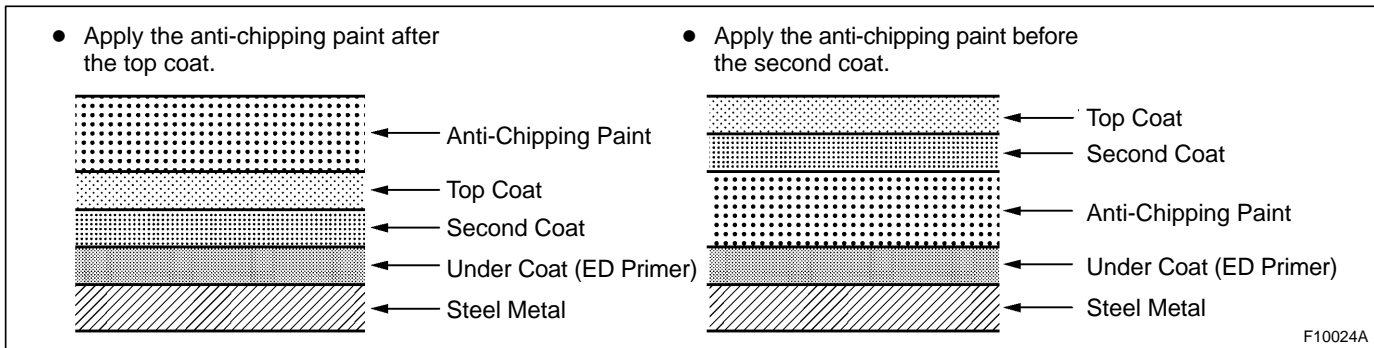

VIEWS OF THIS TEXT

Scope of the repair work explanation

- This text explains the welding panel replacement instructions from the vehicle's white body condition. We have abbreviated the explanations of the removal and reinstallation of the equipment parts up to the white body condition and of the installation, inspection, adjustment and final inspection of equipment parts after replacing the weld panel.

Section categories

- Each section has been divided as shown below.

Section Title	Contents	Examples
INTRODUCTION	Explanation of general body repair. Views of weld panel replacement instructions.	Cautionary items. Views of weld panel replacement instructions.
BODY PANEL REPLACEMENT	Instructions for replacing the weld panels from the white body condition, from which bolted parts have been removed, with individual supply parts.	Front side member replacement. Quarter panel replacement.
BODY DIMENSIONS	Body aligning measurements.	Dimension diagrams.
PAINT • COATING	Scope and type of anti-rust treatment, etc. together with weld panel replacement.	Under coat. Body sealer.

Abbreviation of contents in this text.

- The following essential procedures have been abbreviated. When actually working, conduct this work properly.
 - (1) Jack and lift operations.
 - (2) Clean and wash removed parts, if necessary.
 - (3) Visual inspection.

ABBREVIATIONS USED IN THIS MANUAL

For convenience, the following abbreviations are used in this manual.

ABS	Antilock Brake System
A/C	Air Conditioner
assy	assembly
ECT	Electronic Controlled Transmission
ECU	Electronic Control Unit
e.g.	Exempli Gratia (for Example)
Ex.	Except
FWD	Front Wheel Drive Vehicles
4WD	Four Wheel Drive Vehicles
in.	inch
LH	Left-hand
LHD	Left-hand Drive
MIG	Metal Inert Gas
M/Y	Model Year
PPS	Progressive Power Steering
RH	Right-hand
RHD	Right-hand Drive
SRS	Supplemental Restraint System
SSM	Special Service Materials
w/	with
w/o	without

FOREWORD

This repair manual has been prepared to provide essential information on body panel repair methods (including cutting and welding operations, but excluding painting) for the SCION xB.

Applicable models: NCP31 series

This manual consists of body repair methods, exploded diagrams and illustrations of the body components and other information relating to body panel replacement such as handling precautions, etc. However, it should be noted that the front fenders of the SCION model is bolted on and require no welding.

When repairing, don't cut and join areas that are not shown in this manual. Only work on the specified contents to maintain body strength.

Body construction will sometimes differ depending on specifications and country of destination. Therefore, please keep in mind that the information contained herein is based on vehicles for general destinations.

For the repair procedures and specifications other than collision-damaged body components of the SCION xB refer to the repair manuals.

If you require the above manuals, please contact your SCION Dealer.

All information contained in this manual is the most up-to-date at the time of publication. However, specifications and procedures are subject to change without prior notice.


TOYOTA MOTOR CORPORATION

GENERAL REPAIR INSTRUCTIONS

1. WORK PRECAUTIONS


(a) VEHICLE PROTECTION

- (1) When welding, protect the painted surfaces, windows, seats and carpet with heat resistant, fire-proof covers.

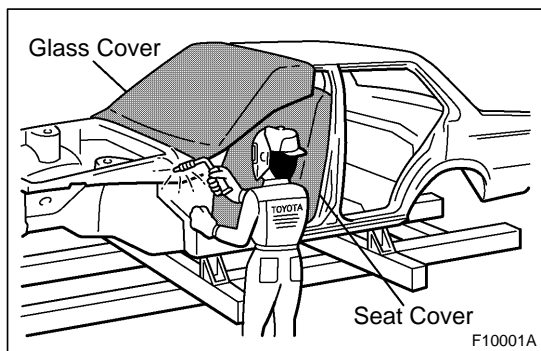


(b) SAFETY

- (1) Never stand in direct line with the chain when using a puller on the body or frame, and be sure to attach a safety cable.

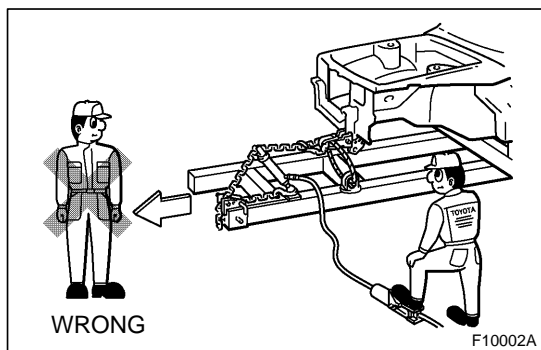


- (2) Before performing repair work, check for fuel leaks. If a leak is found, be sure to close the opening totally.
- (3) If it is necessary to use a flame in the area of the fuel tank, first remove the tank and plug the fuel line.

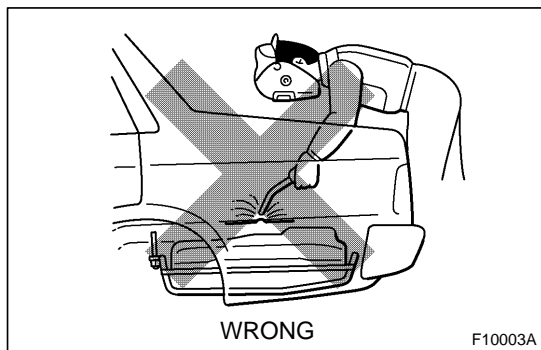

(c) SAFETY WORK CLOTHES

- (1) In addition to the usual mechanic's wear, cap and safety shoes, the appropriate gloves, head protector, glasses, ear plugs, face protector, dust-prevention mask, etc. should be worn as the situation demands.

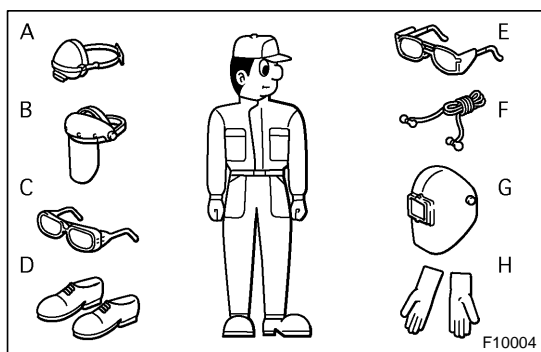

Code	Name
A	Dust-Prevention Mask
B	Face Protector
C	Eye Protector
D	Safety Shoes
E	Welder's Glasses
F	Ear Plugs
G	Head Protector
H	Welder's Gloves

2. HANDLING PRECAUTIONS OF PLASTIC BODY PARTS

- (1) The repair procedure for plastic body parts must conform with the type of plastic material.
- (2) Plastic body parts are identified by the codes in the following table.
- (3) When repairing metal body parts adjoining plastic body parts (by brazing, frame cutting, welding, painting etc.), consideration must be given to the property of the plastic.

Code	Material name	Heat* resistant temperature limit °C (°F)	Resistance to alcohol or gasoline	Notes
AAS	Acrylonitrile Acrylic Styrene	80 (176)	Alcohol is harmless if applied only for short time in small amounts (e.g., quick wiping to remove grease).	Avoid gasoline and organic or aromatic solvents.
ABS	Acrylonitrile Butadiene Styrene	80 (176)	Alcohol is harmless if applied only for short time in small amounts (e.g., quick wiping to remove grease).	Avoid gasoline and organic or aromatic solvents.
AES	Acrylonitrile Ethylene Styrene	80 (176)	Alcohol is harmless if applied only for short time in small amounts (e.g., quick wiping to remove grease).	Avoid gasoline and organic or aromatic solvents.
ASA	Acrylonitrile Styrene Acrylate	80 (176)	Alcohol is harmless if applied only for short time in small amounts (e.g., quick wiping to remove grease).	Avoid gasoline and organic or aromatic solvents.
CAB	Cellulose Acetate	80 (176)	Alcohol is harmless if applied only for short time in small amounts (e.g., quick wiping to remove grease).	Avoid gasoline and organic or aromatic solvents.
EPDM	Ethylene Propylene	100 (212)	Alcohol is harmless. Gasoline is harmless if applied only for short time in small amounts.	Most solvents are harmless but avoid dipping in gasoline, solvents, etc.
FRP	Fiber Reinforced Plastics	180 (356)	Alcohol and gasoline are harmless.	Avoid alkali.
EVA	Ethylene Acetate	70 (158)	Alcohol is harmless if applied only for short time in small amounts (e.g., quick wiping to remove grease).	Avoid gasoline and organic or aromatic solvents.
PA	Polyamide (Nylon)	80 (176)	Alcohol and gasoline are harmless.	Avoid battery acid.
PBT	Polybutylene Terephthalate	160 (320)	Alcohol and gasoline are harmless.	Most solvents are harmless.
PC	Polycarbonate	120 (248)	Alcohol is harmless.	Avoid gasoline brake fluid, wax, wax removers and organic solvents. Avoid alkali.

*Temperatures higher than those listed here may result in material deformation during repair.

Code	Material name	Heat* resistant temperature limit °C (°F)	Resistance to alcohol or gasoline	Notes
PE	Polyethylene	80 (176)	Alcohol and gasoline are harmless.	Most solvents are harmless.
PET	Polyethylene Terephthalate	75 (167)	Alcohol and gasoline are harmless.	Avoid dipping in water.
PMMA	Polymethyl Methacrylate	80 (176)	Alcohol is harmless if applied only for short time in small amounts.	Avoid dipping or immersing in alcohol, gasoline, solvents, etc.
POM	Polyoxymethylene (Polyacetal)	100 (212)	Alcohol and gasoline are harmless.	Most solvents are harmless.
PP	Polypropylene	80 (176)	Alcohol and gasoline are harmless.	Most solvents are harmless.
PPO	Modified Polyphenylene Oxide	100 (212)	Alcohol is harmless.	Gasoline is harmless if applied only for quick wiping to remove grease.
PS	Polystyrene	60 (140)	Alcohol and gasoline are harmless if applied only for short time in small amounts.	Avoid dipping or immersing in alcohol, gasoline, solvents, etc.
PUR	Polyurethane	80 (176)	Alcohol is harmless if applied only for very short time in small amounts (e.g., quick wiping to remove grease).	Avoid dipping or immersing in alcohol, gasoline, solvents, etc.
PVC	Polyvinylchloride (Vinyl)	80 (176)	Alcohol and gasoline are harmless if applied only for short time in small amounts (e.g., quick wiping to remove grease).	Avoid dipping or immersing in alcohol, gasoline, solvents, etc.
SAN	Styrene Acrylonitrile	80 (176)	Alcohol is harmless if applied only for short time in small amounts (e.g., quick wiping to remove grease).	Avoid dipping or immersing in alcohol, gasoline, solvents etc.
TPO	Thermoplastic Olefine	80 (176)	Alcohol is harmless. Gasoline is harmless if applied only for short time in small amounts.	Most solvents are harmless but avoid dipping in gasoline, solvents, etc.
TPU	Thermoplastic Polyurethane	80 (176)	Alcohol is harmless if applied only for short time in small amounts (e.g., quick wiping to remove grease).	Avoid dipping or immersing in alcohol, gasoline, solvents, etc.
TSOP	TOYOTA Super Olefine Polymer	80 (176)	Alcohol and gasoline are harmless.	Most solvents are harmless.
UP	Unsaturated Polyester	110 (233)	Alcohol and gasoline are harmless.	Avoid alkali.

*Temperatures higher than those listed here may result in material deformation during repair.

3. LOCATION OF PLASTIC BODY PARTS

Parts Name	Code
Radiator Grille	ABS
Radiator Inner Grille	TSOP
Radiator Lower Grille	TSOP
Front Bumper Cover	TSOP
Front Bumper Hole Cover	PP
Front Bumper Extension Mounting Bracket	TSOP
Front Spoiler	TSOP
Headlight	PC/PP
Cowl Top Ventilator Louver	TSOP
Side Turn Signal Light	PMMA/ABS
Outer Rear View Mirror	AAS/ABS
Front Door Outside Handle	PC/PBT
Rear Door Outside Handle	PC/PBT
Body Rocker Panel Moulding	TSOP
Rear Bumper Cover	TSOP
Rear Bumper Protector	PP
Rear Combination Light	PMMA/PP
License Plate Light	PC
Back Door Outside Handle	PA
Rear Spoiler	ABS
Rear Side Marker Light	PMMA/ABS

- Resin material differs with model.
- / Made up of 2 or more kinds of materials.

HANDLING PRECAUTIONS ON RELATED COMPONENTS

1. BRAKE SYSTEM

The brake system is one of the most important safety components. Always follow the directions and notes given in brake (32) section of the repair manual for the relevant model when handling brake system parts.

NOTICE: When repairing the brake master cylinder or TRAC system, bleed the air out of the TRAC system.

2. DRIVE TRAIN AND CHASSIS

The drive train and chassis are components that can have great effects on the running performance and vibration resistance of the vehicle. After installing components in the sections listed in the table below, perform alignments to ensure correct mounting angles and dimensions. Particularly accurate repair of the body must also be done to ensure correct alignment.

HINT: Correct procedures and special tools are required for alignment. Always follow the directions given in the repair manual for the relevant model during alignment and section DI of this section.

Component to be aligned	Section of repair manual for relevant model
Front Wheels	Front Suspension (26) section
Rear Wheels	Rear Suspension (27) section

3. COMPONENTS ADJACENT TO THE BODY PANELS

Various types of component parts are mounted directly on or adjacently to the body panels. Strictly observe the following precautions to prevent damaging these components and the body panels during handling.

- Before repairing the body panels, remove their components or apply protective covers over the components.
- Before prying components off using a screwdriver or a scraper, etc., attach protective tape to the tool tip or blade to prevent damaging the components and the body paint.
- Before removing components from the outer surface of the body, attach protective tape to the body to ensure no damage to painted areas.

HINT: Apply touch-up paint to any damaged paint surfaces.

- Before drilling or cutting sections, make sure that there are no wires, etc. on the reverse side.

4. ECU (ELECTRONIC CONTROL UNIT)

Many ECUs are mounted in this vehicle.

Take the following precautions during body repair to prevent damage to the ECUs.

- Before starting electric welding operations, disconnect the negative (-) terminal cable from the battery.

When the negative (-) terminal cable is disconnected from the battery, memory of the clock and audio systems will be cancelled. So before starting work, make a record of the contents memorized by each memory system. Then when work is finished, reset the clock and audio systems as before.

When the vehicle has tilt and telescopic steering, power seat and outside rear view mirror, which are all equipped with memory function, it is not possible to make a record of the memory contents.

So when the operation is finished, it will be necessary to explain this fact to the customer, and request the customer to adjust the features and reset the memory.

- Do not expose the ECUs to ambient temperatures above 80°C (176°F).


NOTICE: If it is possible the ambient temperature may reach 80°C (176°F) or more, remove the ECUs from the vehicle before starting work.

- Be careful not to drop the ECUs and not to apply physical shocks to them.

BACK DOOR OPENING SIDE REINFORCEMENT (ASSY)


REPLACEMENT

With the roof side inner front extension removed.

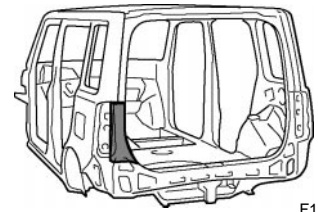

F15646A


REMOVAL

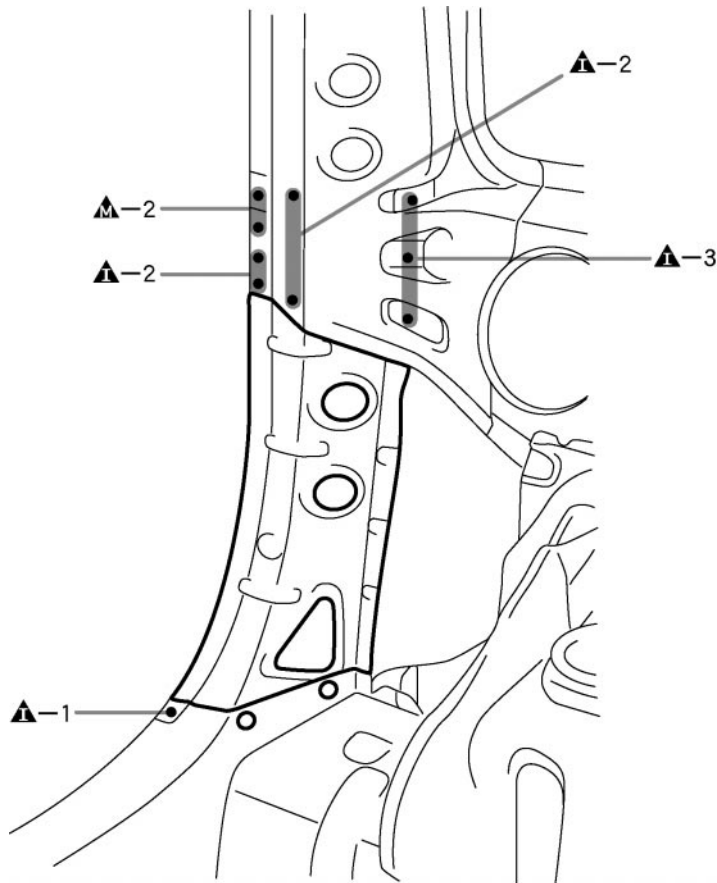

F15646

INSTALLATION


- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

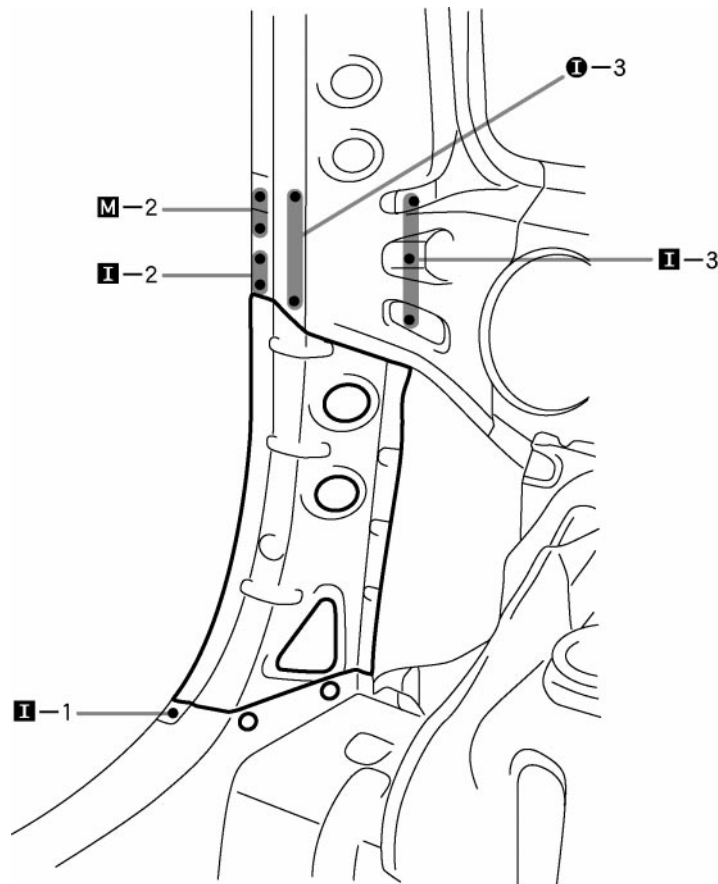

BACK DOOR OPENING TROUGH (ASSY)


REPLACEMENT

With the body lower back panel and quarter panel removed.

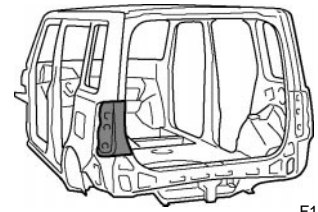

F15642A


REMOVAL

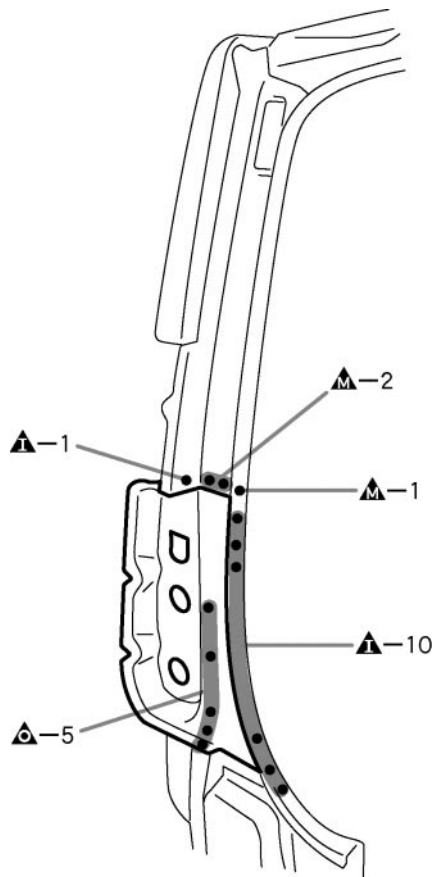

F15642

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

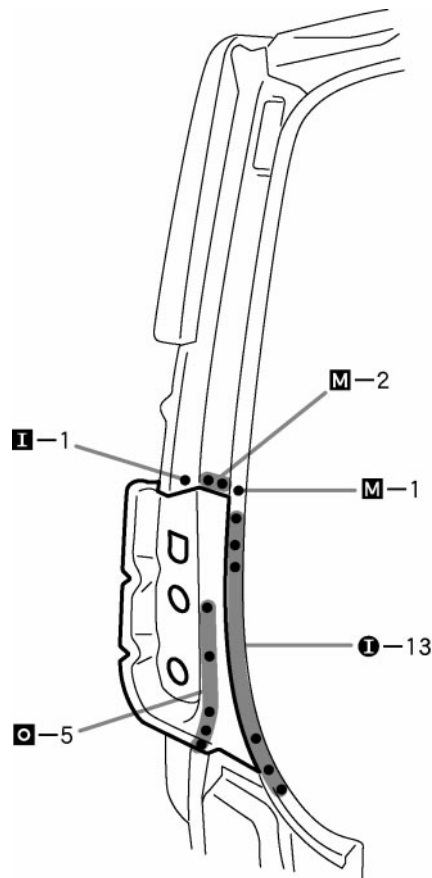


F15643

POINT

- 1 Inspect the fitting of the back door and rear combination light, etc., before welding, since this affects the appearance of the finish.


BODY LOWER BACK PANEL (ASSY)

REPLACEMENT

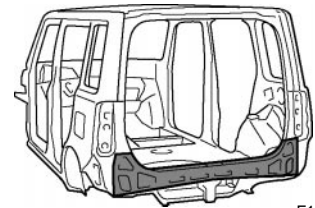


F15640A

REMOVAL

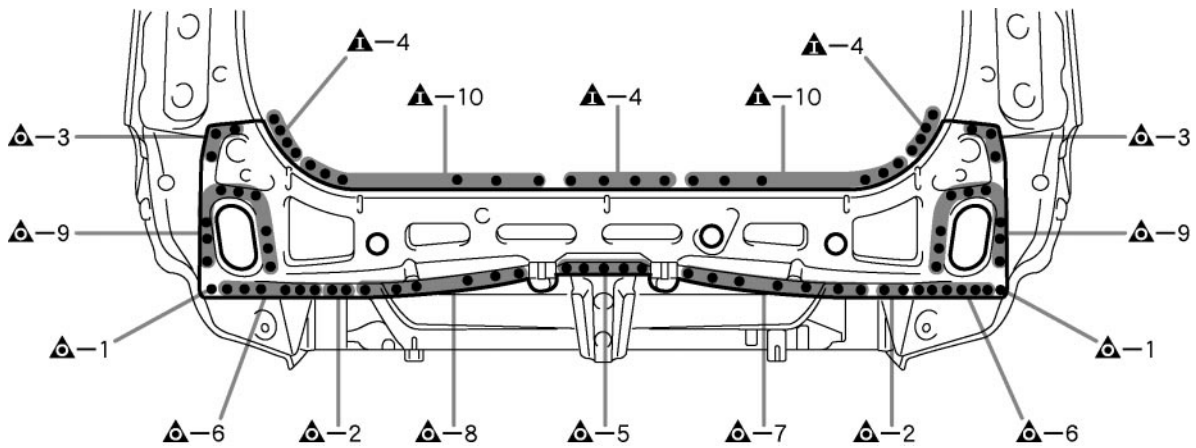

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

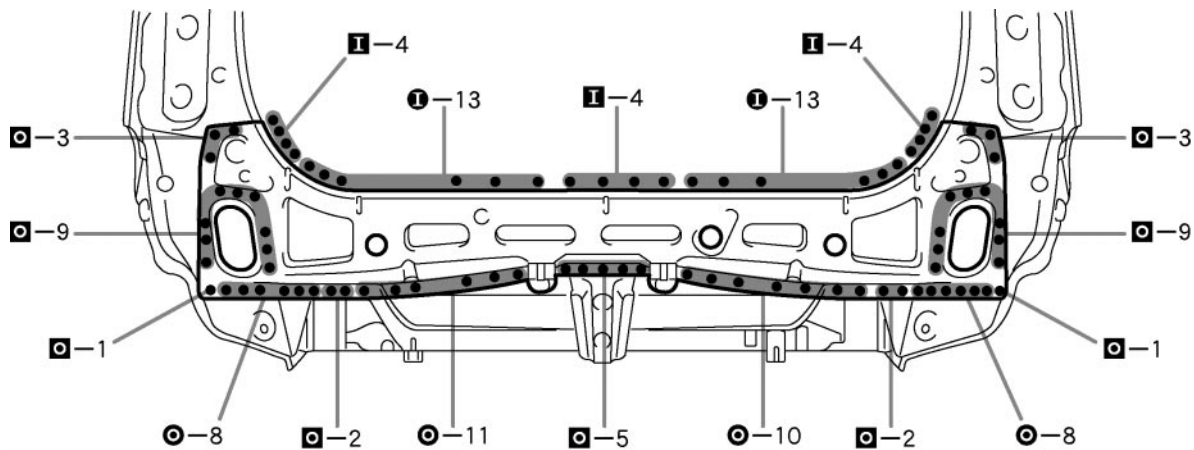

F15641

POINT

- 1 Inspect the fitting of the back door and rear combination light, etc., before welding, since this affects the appearance of the finish.


CENTER BODY PILLAR (CUT)

REPLACEMENT



F15626A

REMOVAL

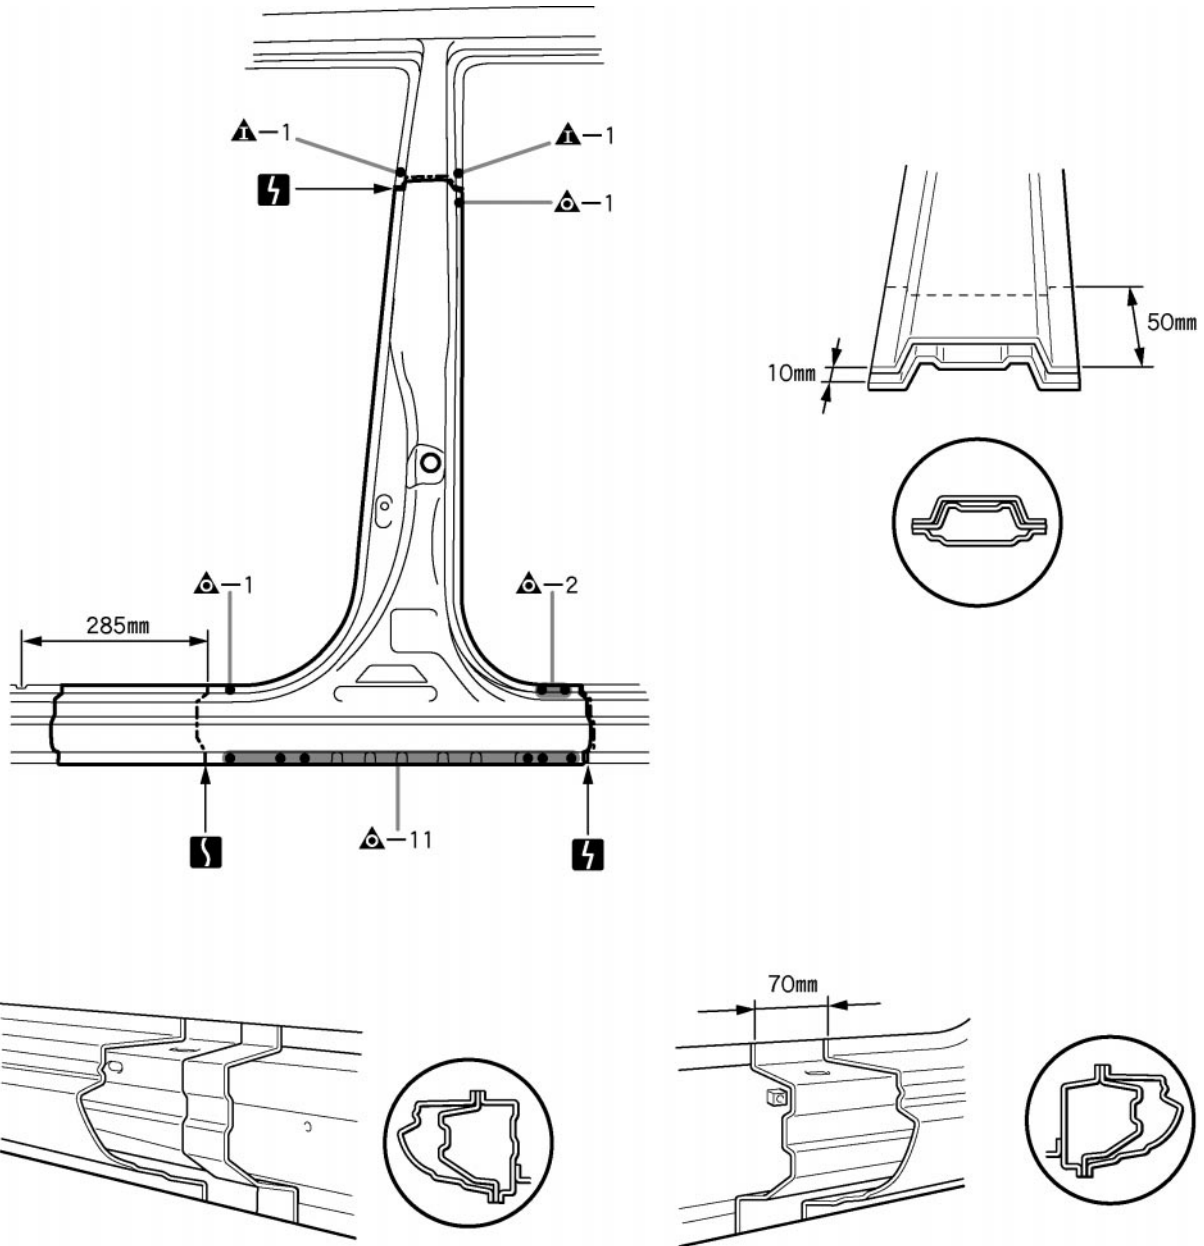



F15626

10mm (0.39in.)

50mm (1.97in.)

70mm (2.76in.)

285mm (11.22in.)

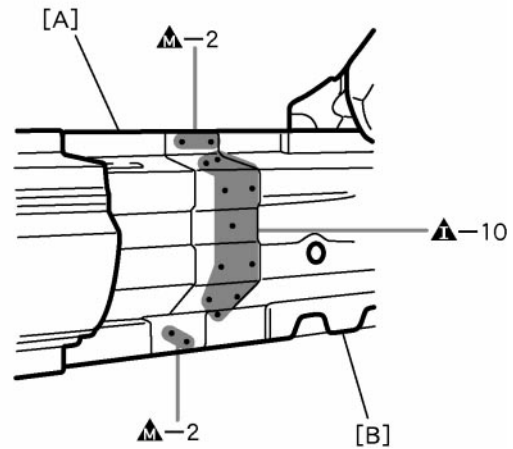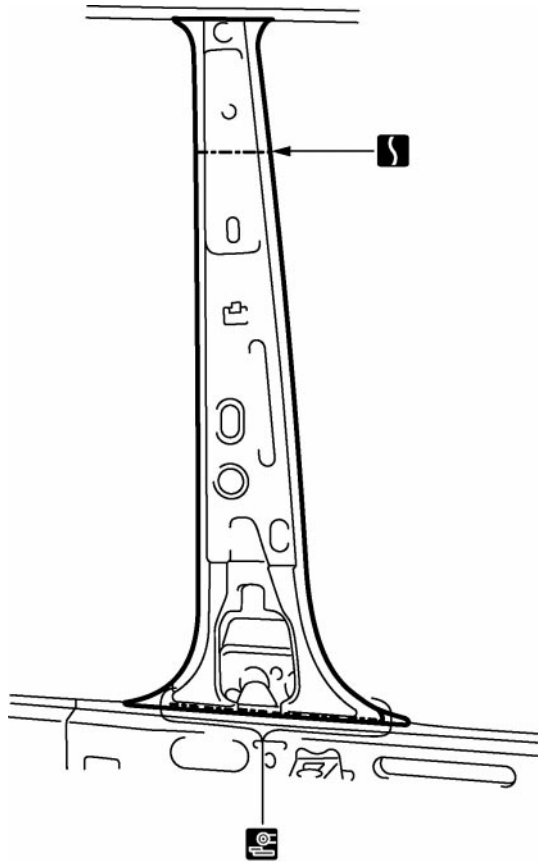

F15627

POINT





1. Leave the [A] to the vehicle and remove the [B].

PART NAME

[A] Rocker Panel Reinforcement No.1 [B] Rocker Panel Reinforcement No.4

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

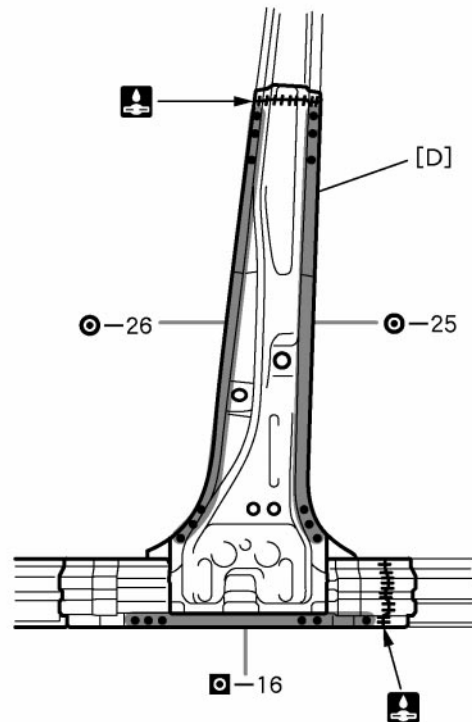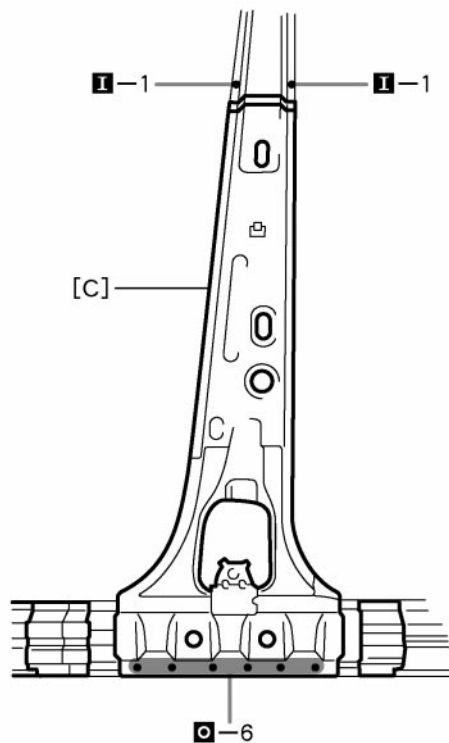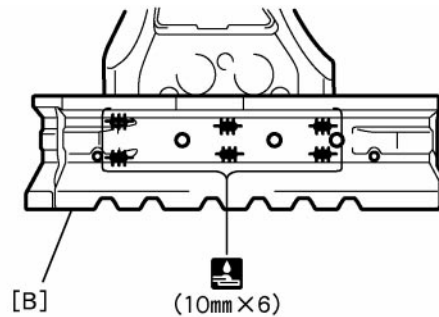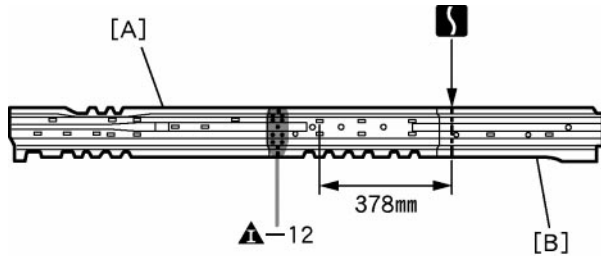

F15628

POINT


- 1 Remove the [B] from [A].
- 2 Before temporarily installing the new parts, weld the [B], [C] and [D] with standard points.
- 3 Cut the outer pillar section and rocker section and butt weld their reinforcements before installing the outer pillar.

PART NAME

[A] Rocker panel No.1 Reinforcement [B] Rocker Panel No.4 Reinforcement
 [C] Center Body Inner Pillar [D] Center Body Pillar Upper Reinforcement

10mm (0.39in.)

378mm (14.89in.)

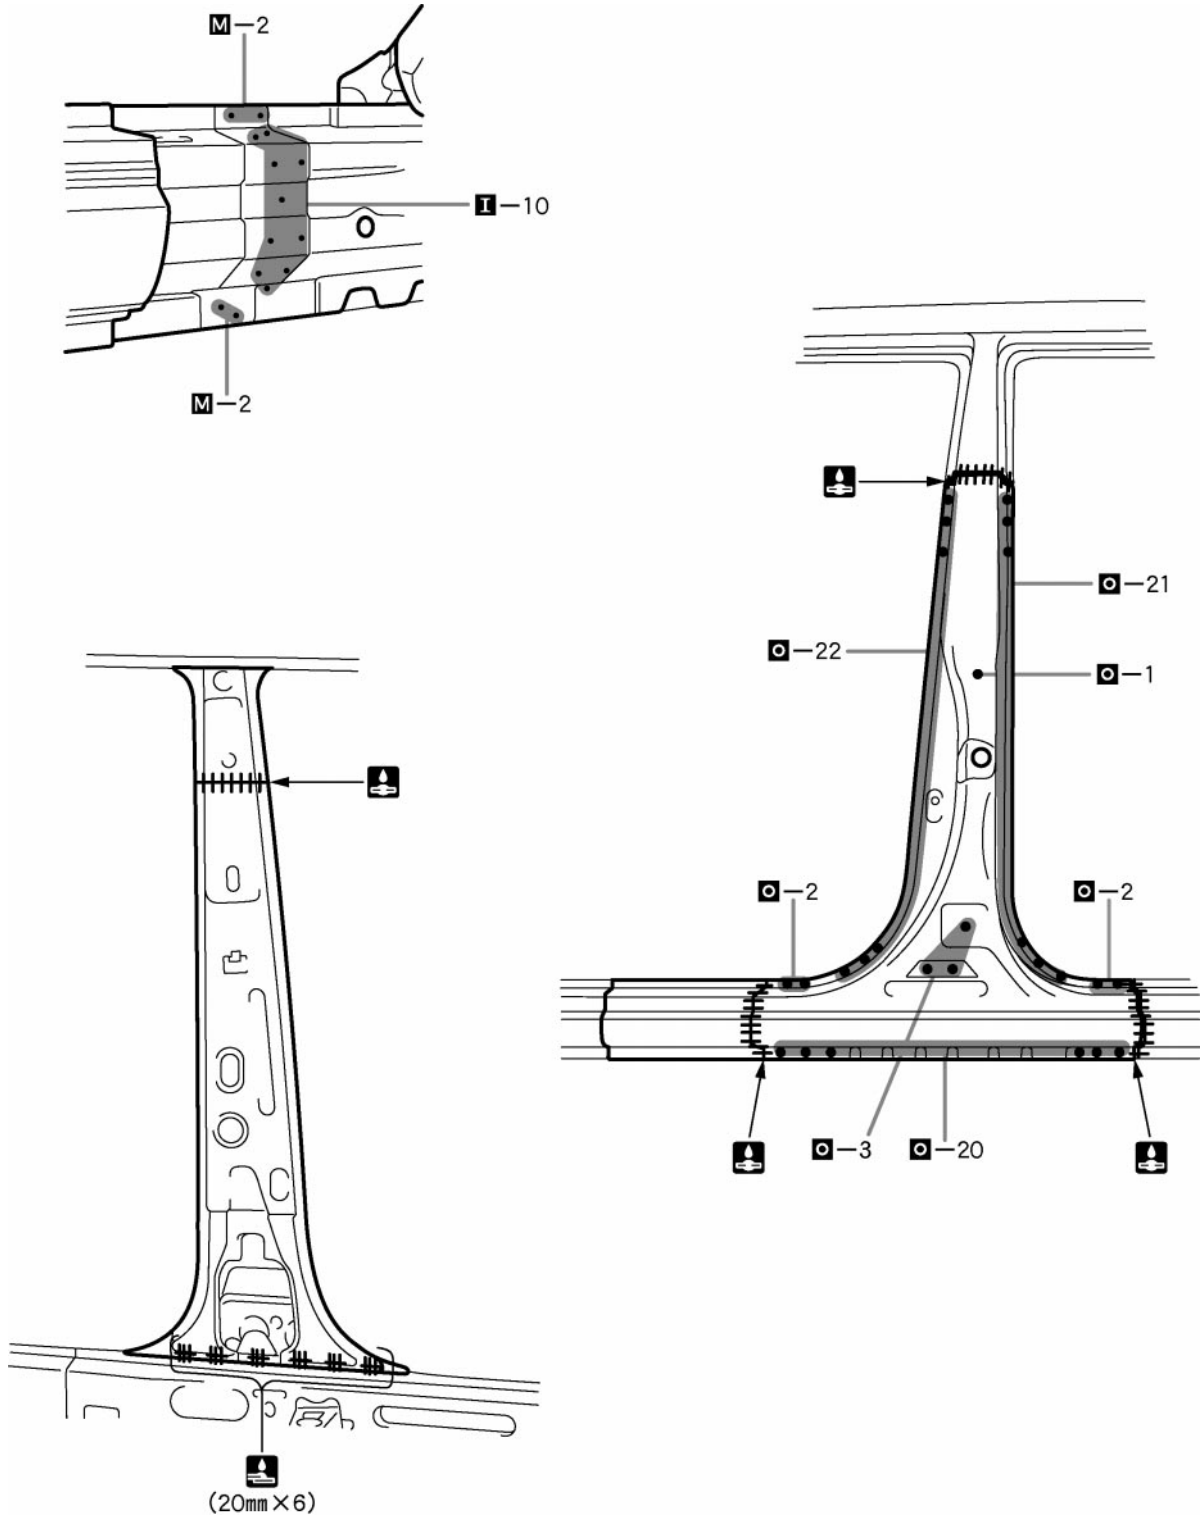

F15629

POINT

- 1 Inspect the fitting of the front door and rear door, etc., before welding, since this affects the appearance of the finish.
- 2 After welding the reinforcement to the vehicle side, install the outer panel.

20mm (0.79in.)


COWL TOP SIDE PANEL (ASSY)

REPLACEMENT




F15611A

REMOVAL

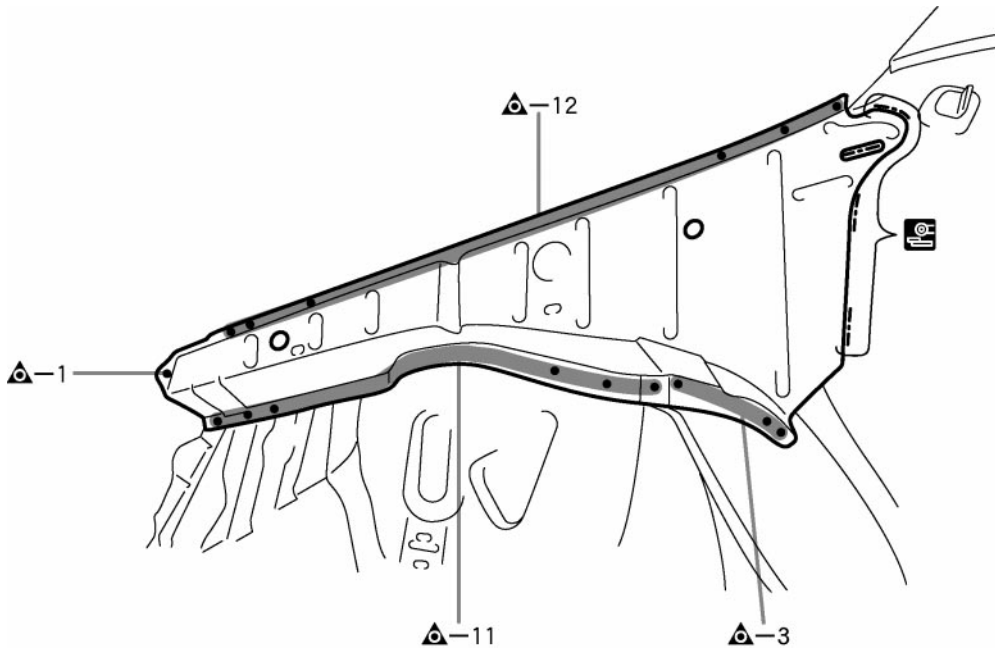

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

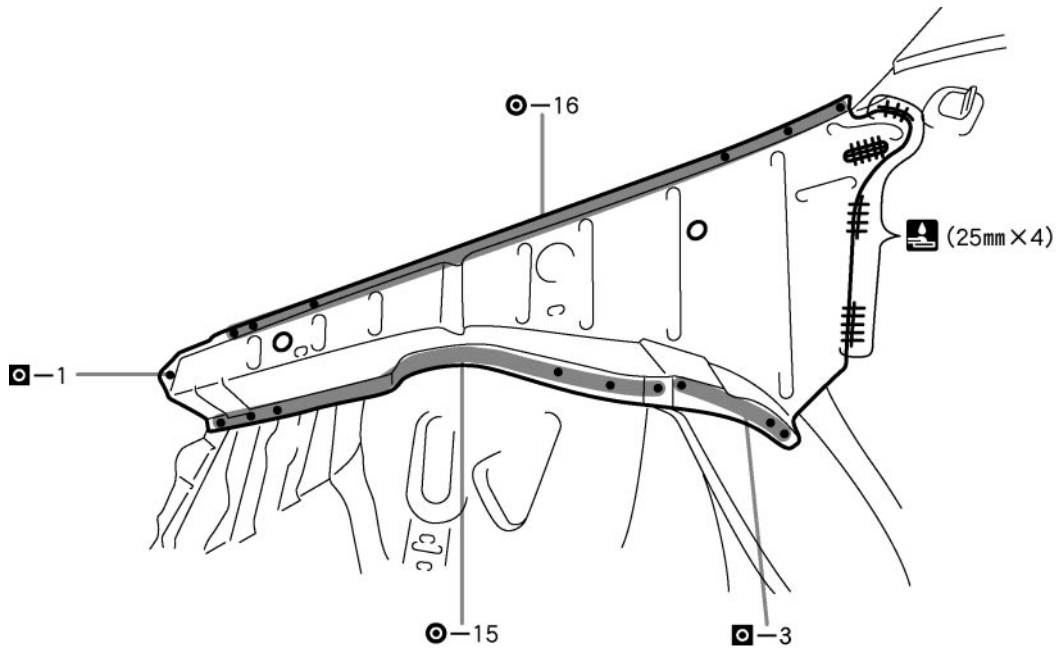

F15612

25mm (0.98in.)

FRONT FENDER APRON (ASSY)


REPLACEMENT

With the radiator upper support and cowl top side panel removed.





F15615A


REMOVAL

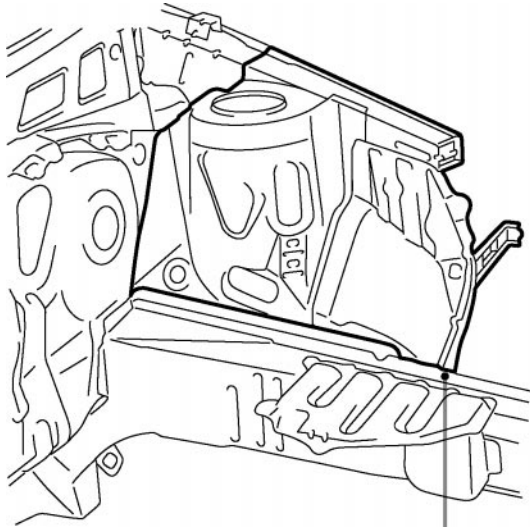

RH : ▲-2
LH : ▲-1

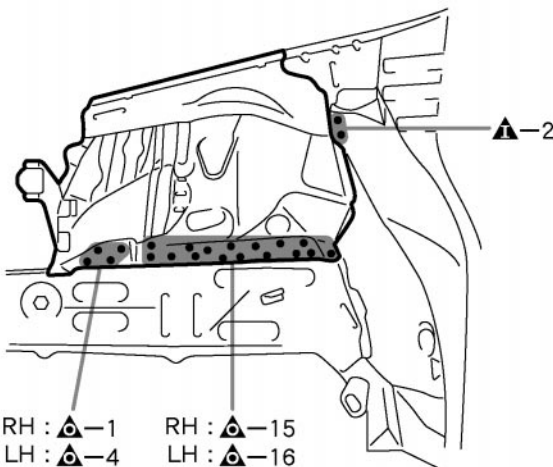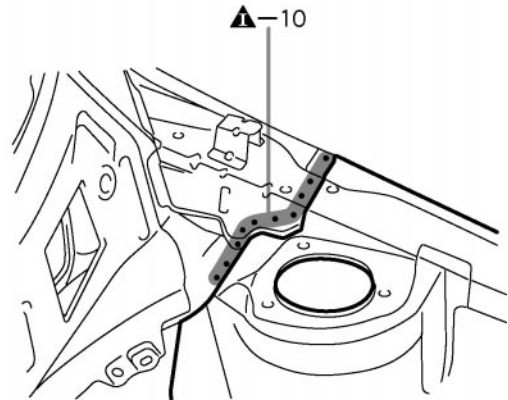


RH : ▲-1 RH : ▲-15
LH : ▲-4 LH : ▲-16

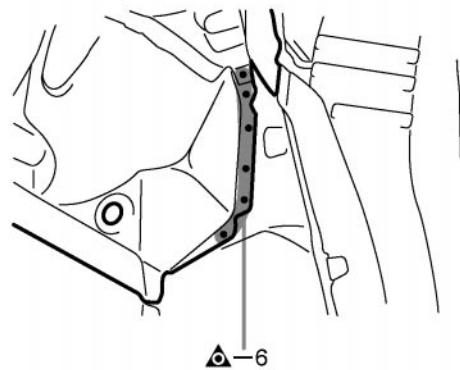



F15615

INSTALLATION


- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

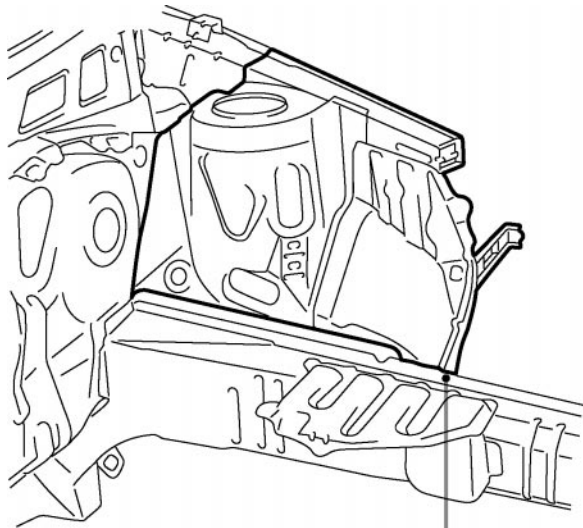

RH : 1-2
LH : 1-1

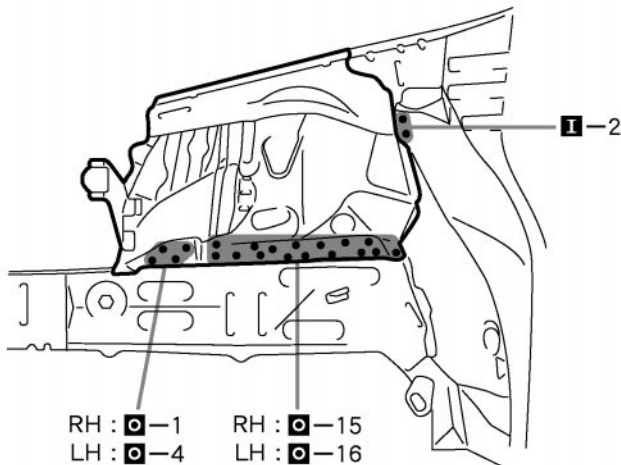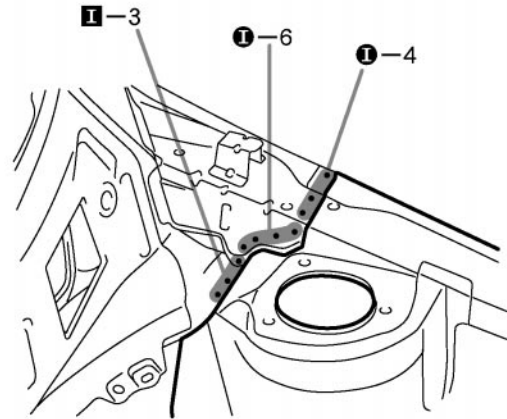

RH : 2-1 RH : 2-15
LH : 2-4 LH : 2-16

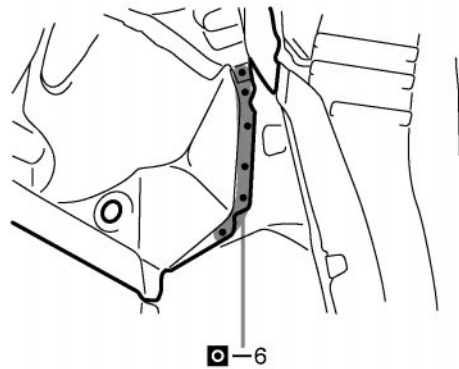

2-6

F15616

POINT

- 1 Inspect the fitting of the front fender and hood, etc. before welding, since this affects the appearance of the finish.
- 2 Make sure each measurement is correct, as this parts affects the front wheel alignment.

FRONT SIDE MEMBER (ASSY)




REPLACEMENT

With the radiator side support and front fender apron removed.



F15619A





REMOVAL

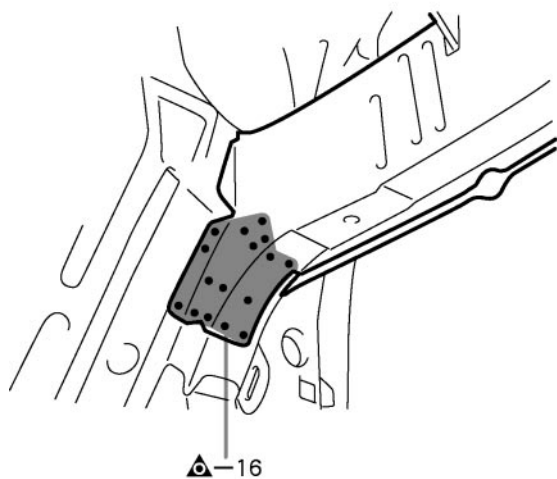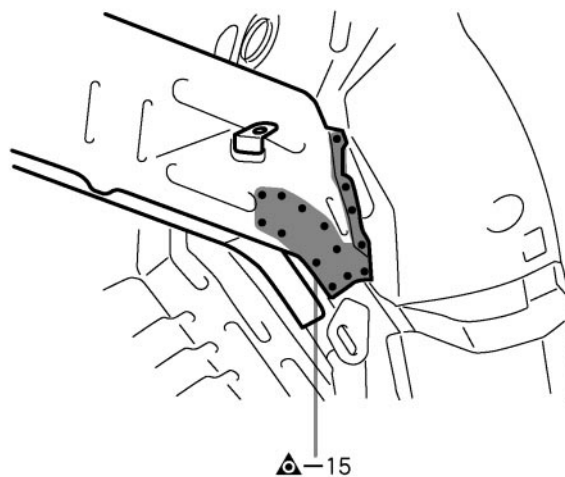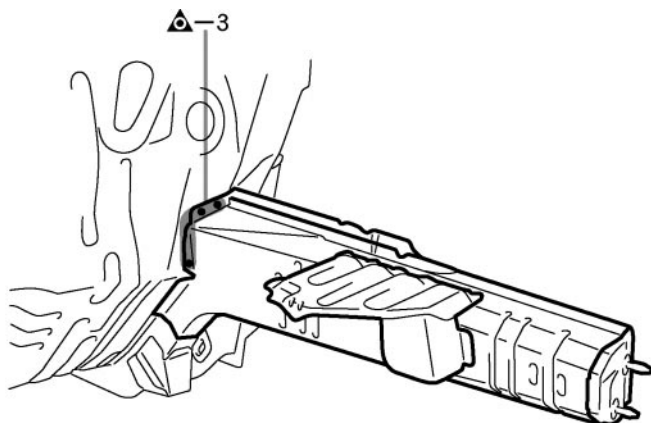

F15619

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

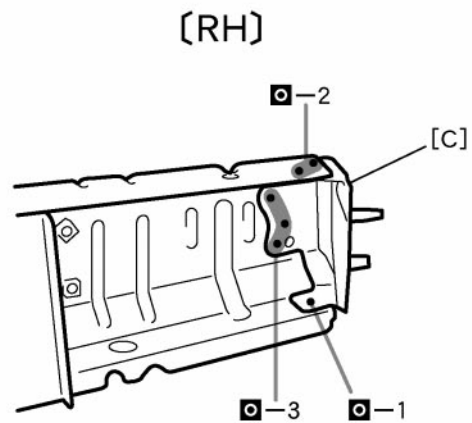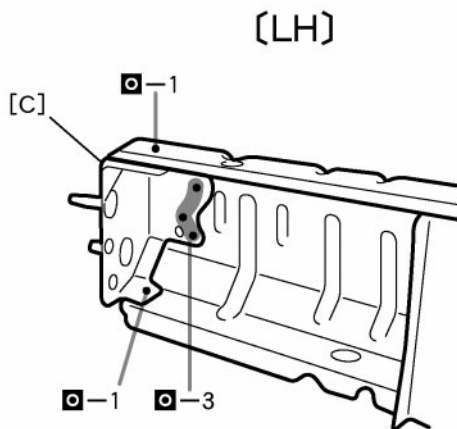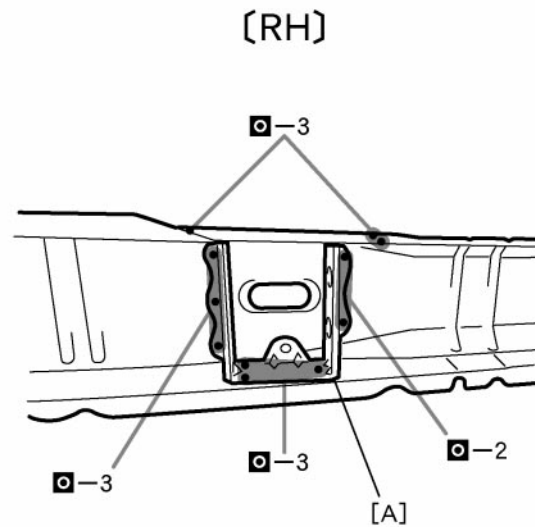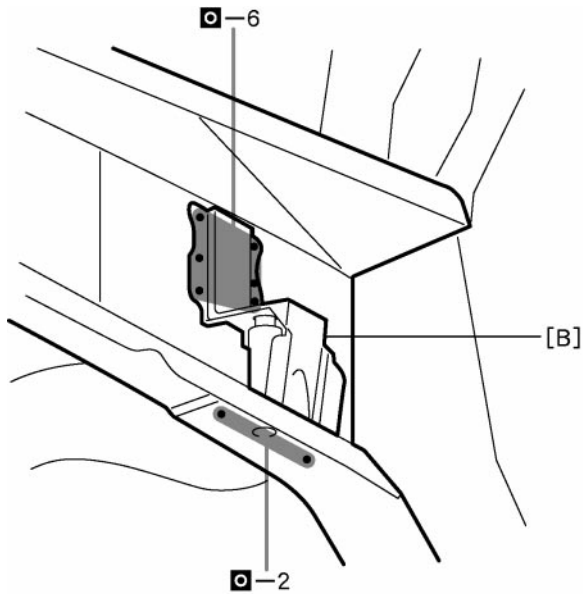

F15620

POINT


- 1 Make sure each measurement is correct, as this parts affects the front wheel alignment.

PART NAME

[A] Front Side Member No.3 Reinforcement (RH only)

[B] Front Suspension Member Mounting Front Bracket

[C] Front Bumper Arm

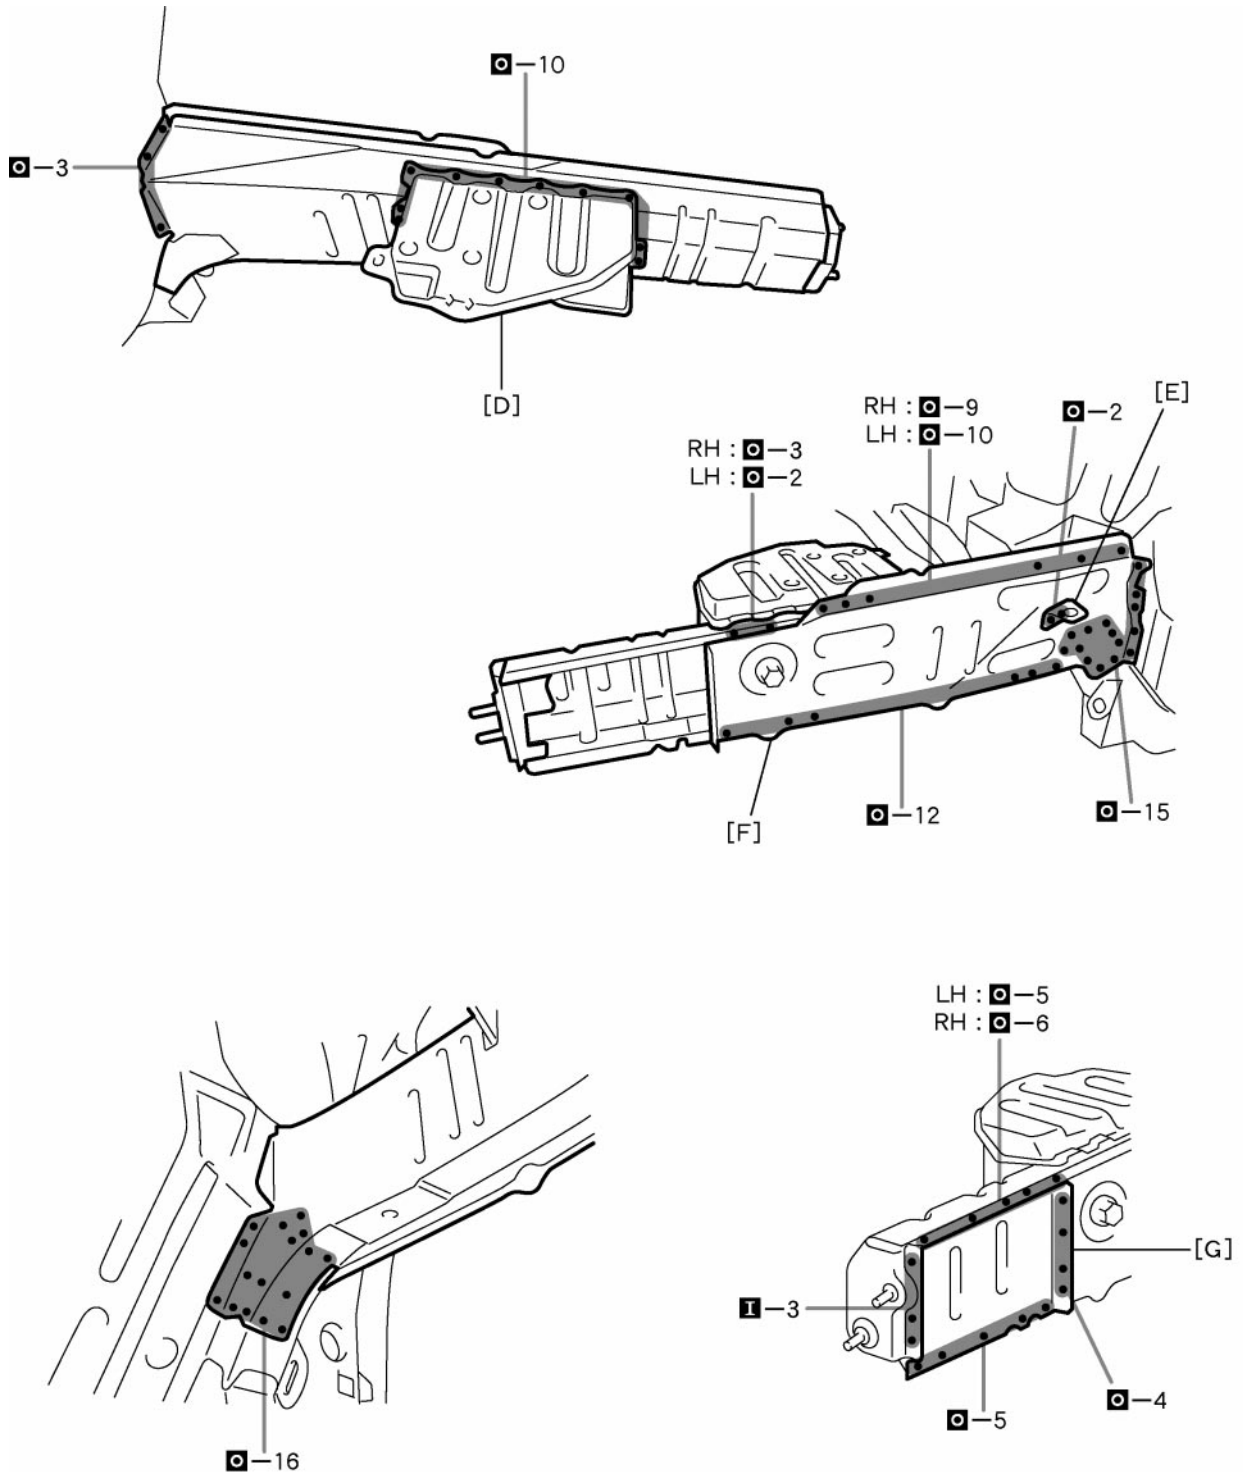

F15621

PART NAME

- [D] Battery Support [E] Flexible Hose No.1 Bracket [F] Front Side Member Outer Plate
 [G] Front Bumper Mounting Reinforcement (RH: Front Side Member Front Plate)

FRONT APRON TO COWL SIDE UPPER MEMBER (ASSY)





F15613A

REPLACEMENT

With the front fender front apron and cowl top side panel removed.



REMOVAL

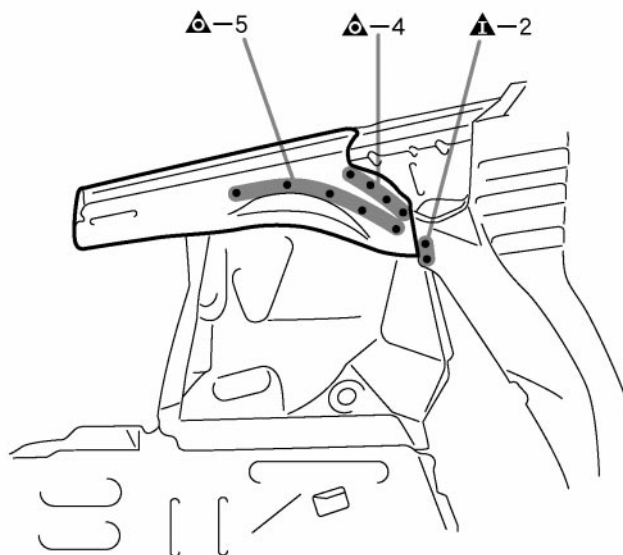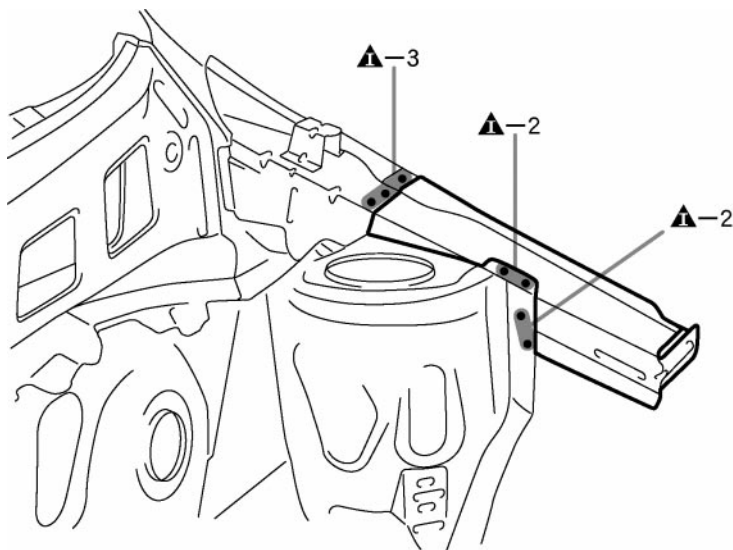

F15613

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

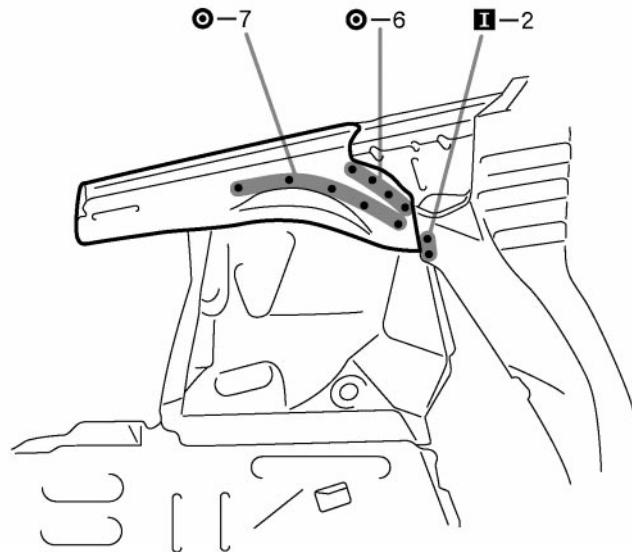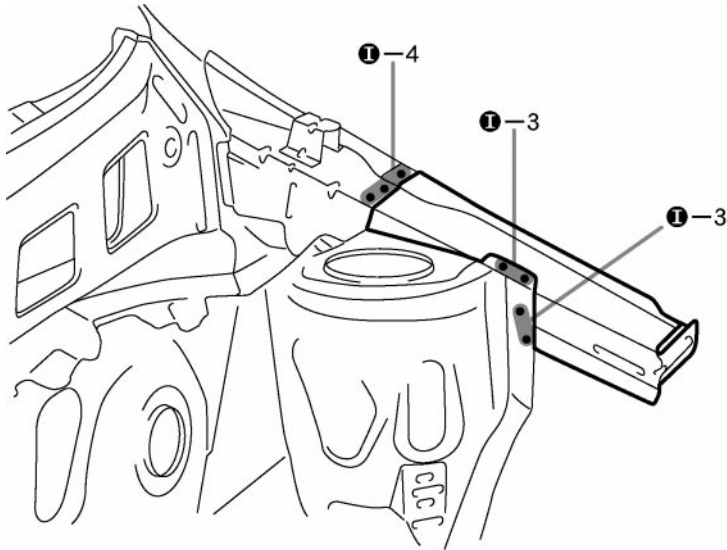

F15614

POINT

- 1 Inspect the fitting of the front fender and hood, etc. before welding, since this affects the appearance of the finish.

FRONT BODY PILLAR (CUT)


REPLACEMENT

With the cowl top side panel removed.



F15622A

REMOVAL


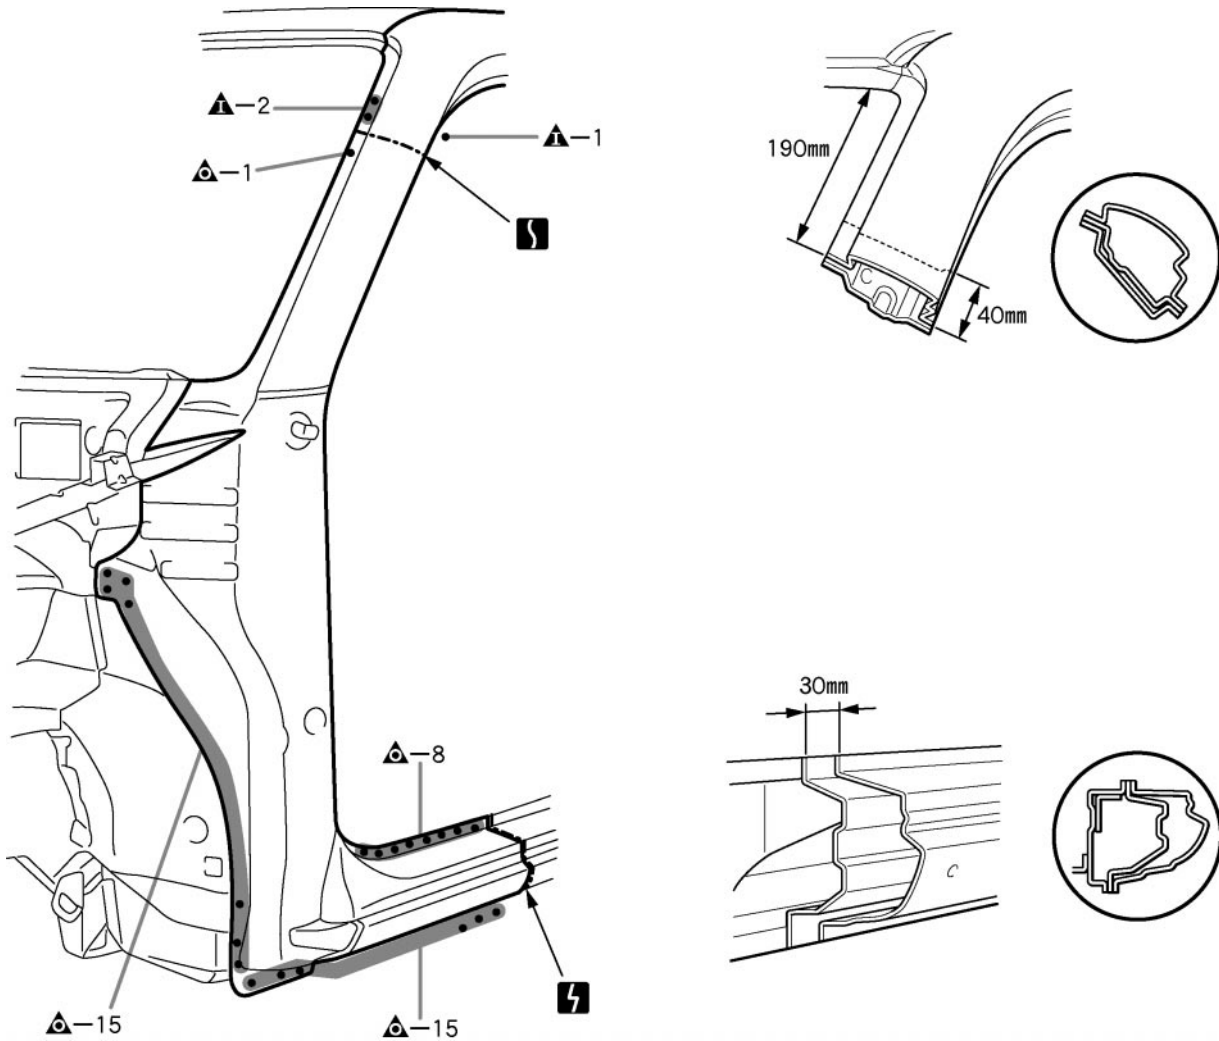


F15622

30mm (1.18in.)


40mm (1.57in.)

190mm (7.48in.)

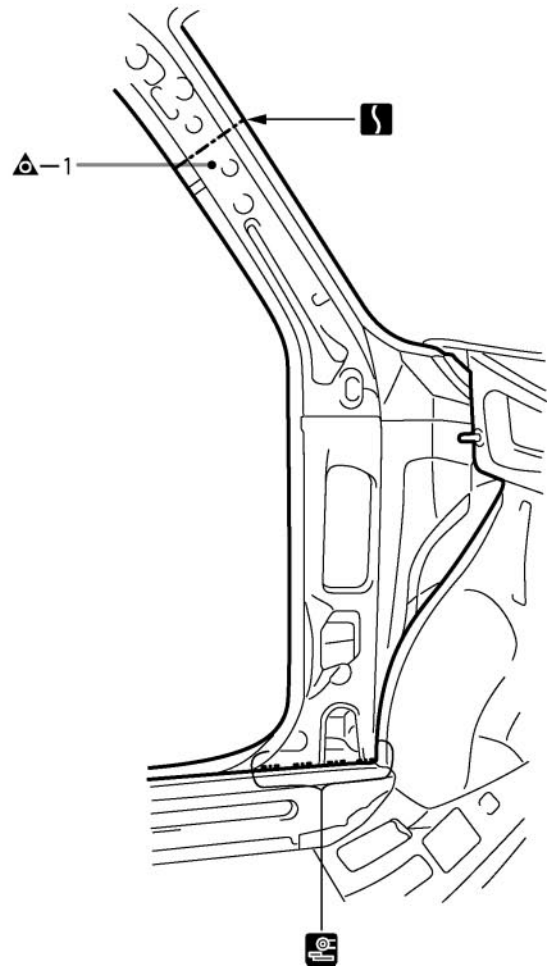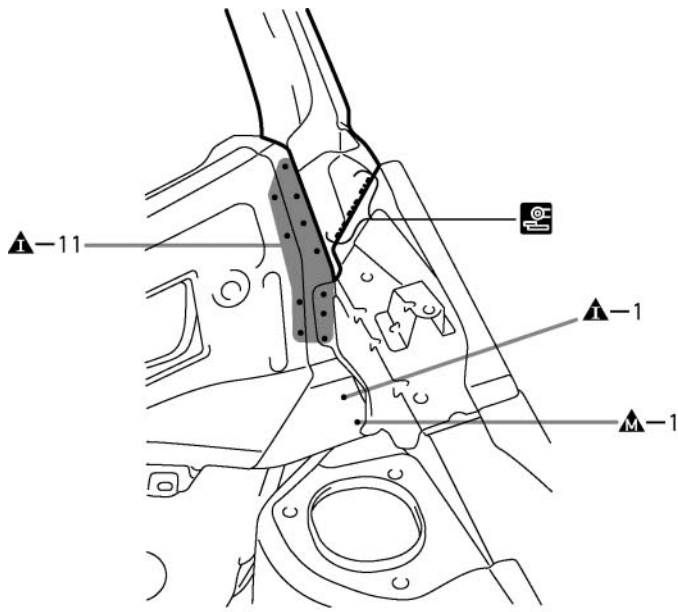

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

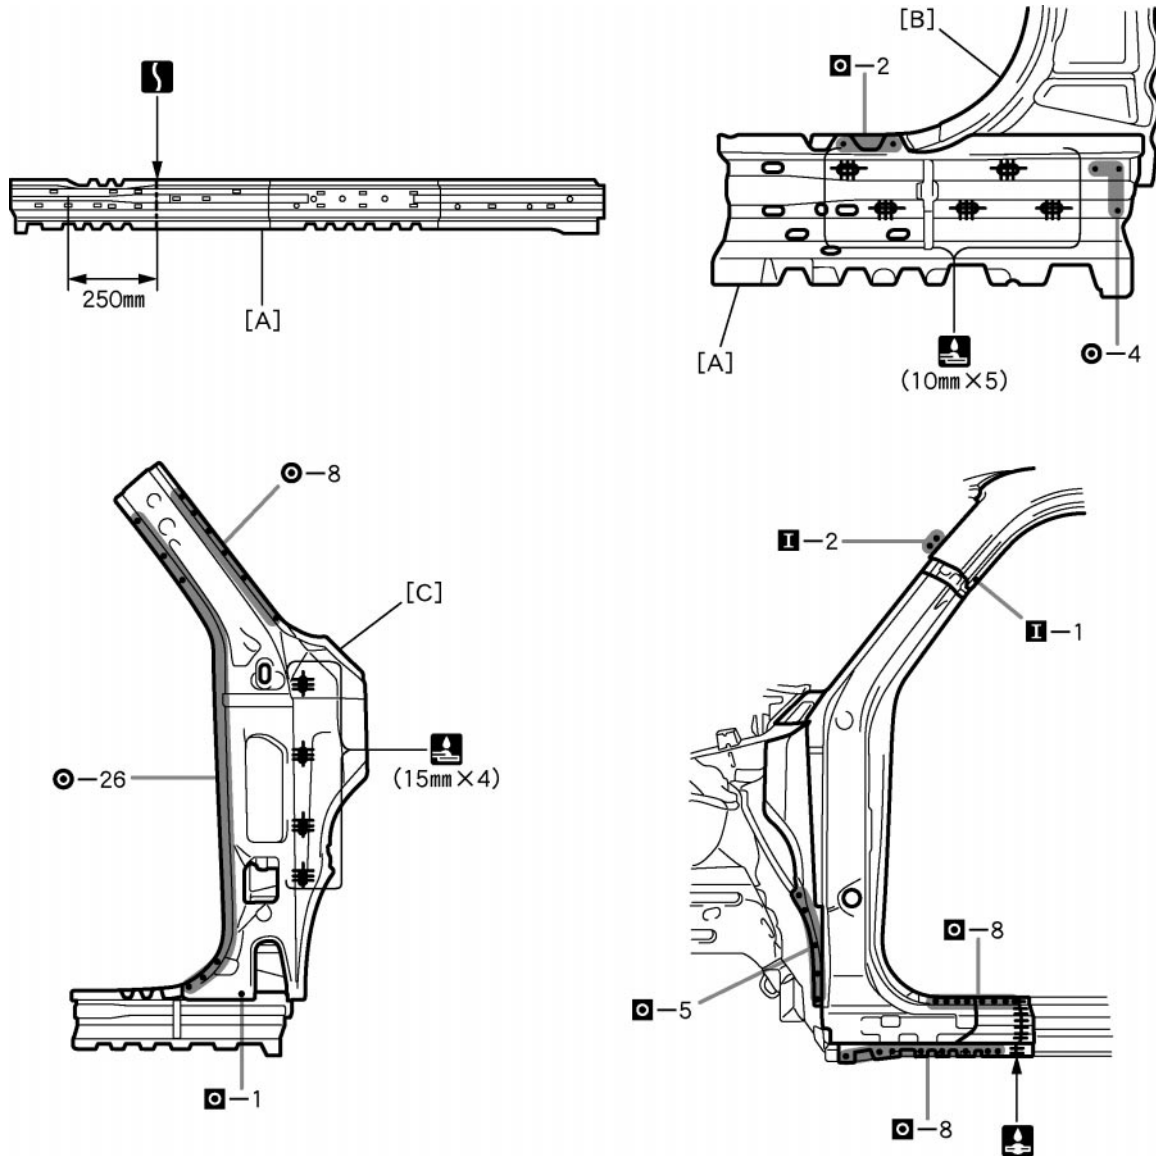

F15624

POINT


- 1 Before temporarily installing the new parts, weld the [A], [B] and [C] with standard points.
- 2 Cut the outer pillar section and rocker section and butt weld their reinforcements before installing the outer panel.

PART NAME

- [A] Rocker Outer Reinforcement [B] Front Body Pillar Lower Reinforcement
 [C] Front Body Inner Pillar

10mm (0.39in.)

15mm (0.59in.)

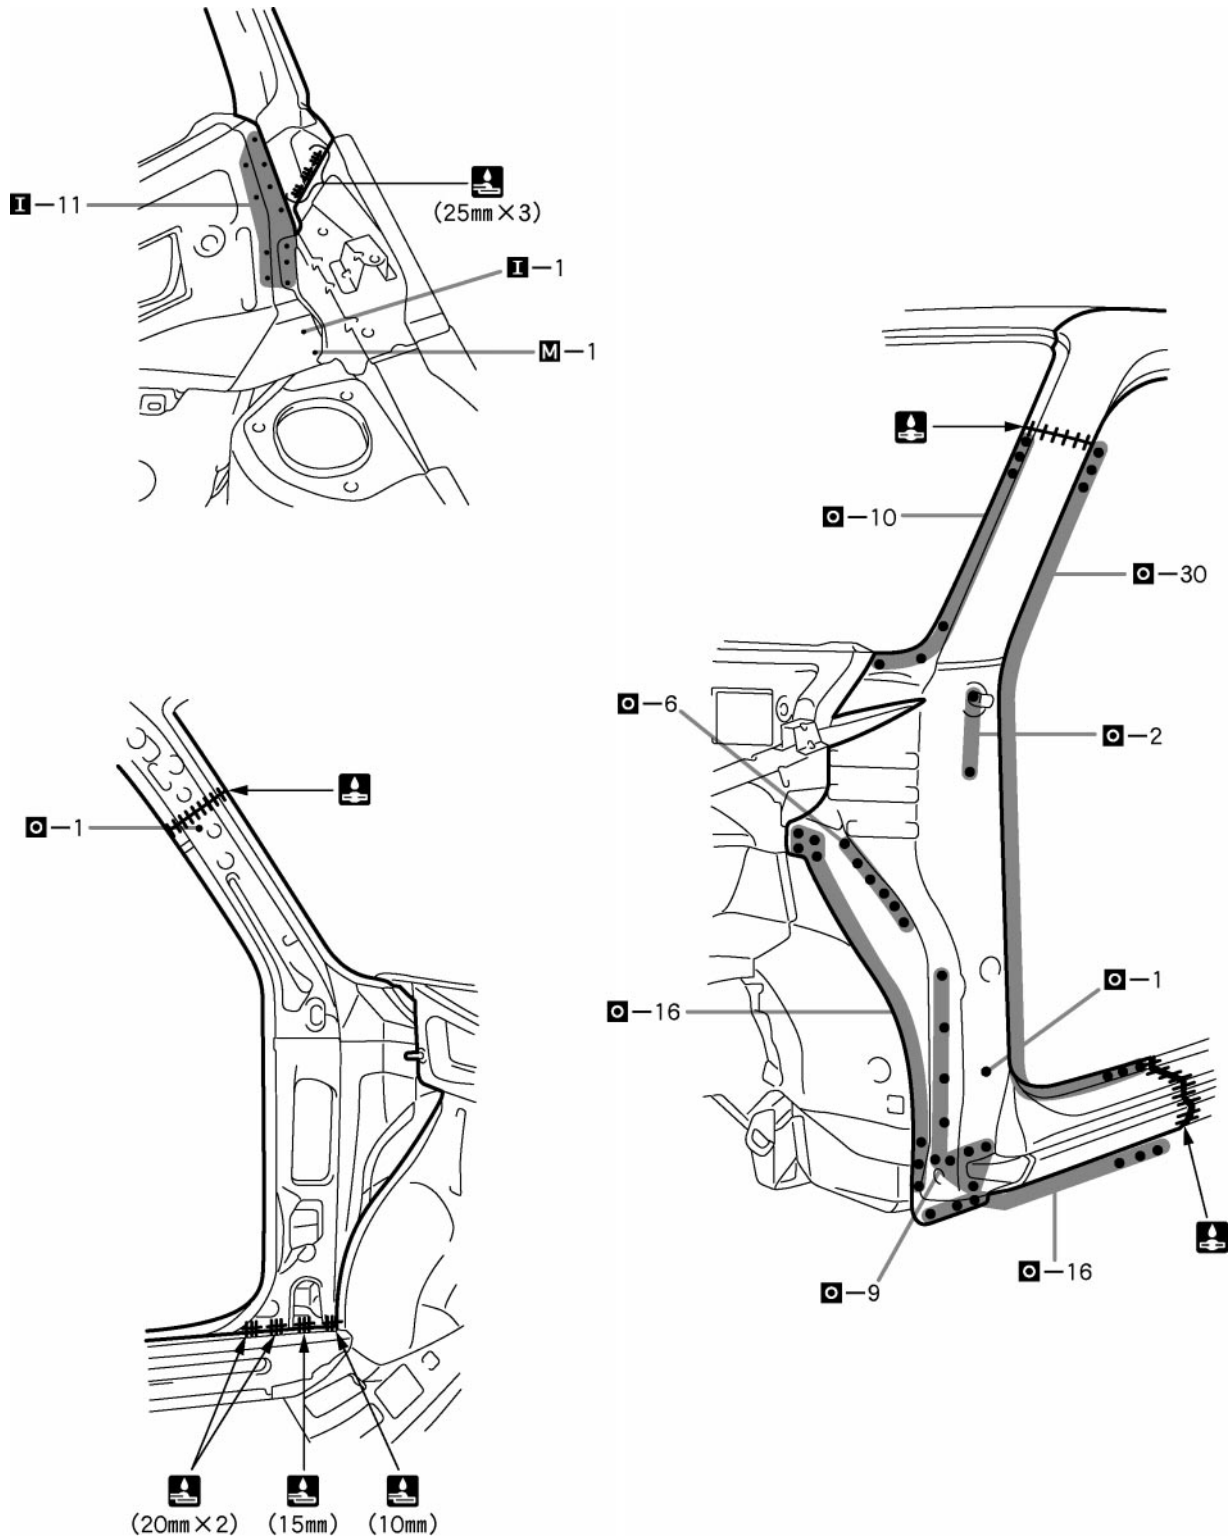

F15625

POINT

1 Inspect the fitting of the front door, front fender and windshield glass, etc., before welding, since this affects the appearance of the finish.

10mm (0.39in.)

15mm (0.59in.)

20mm (0.79in.)

25mm (0.98in.)

FRONT FENDER FRONT APRON (ASSY)



REPLACEMENT

With the radiator upper support removed.



F15609A


REMOVAL

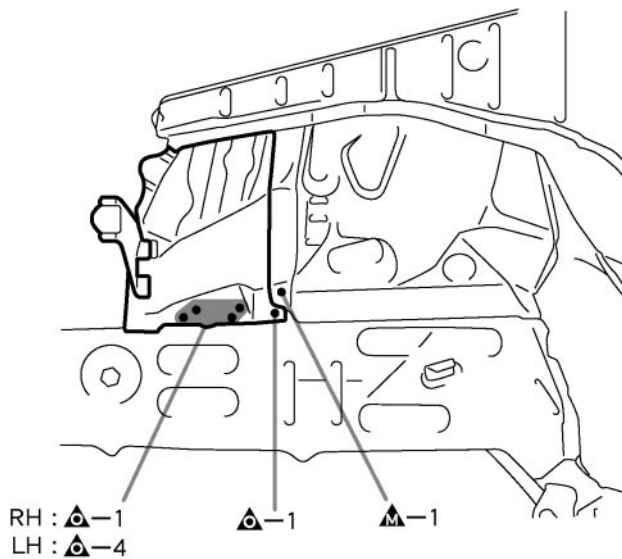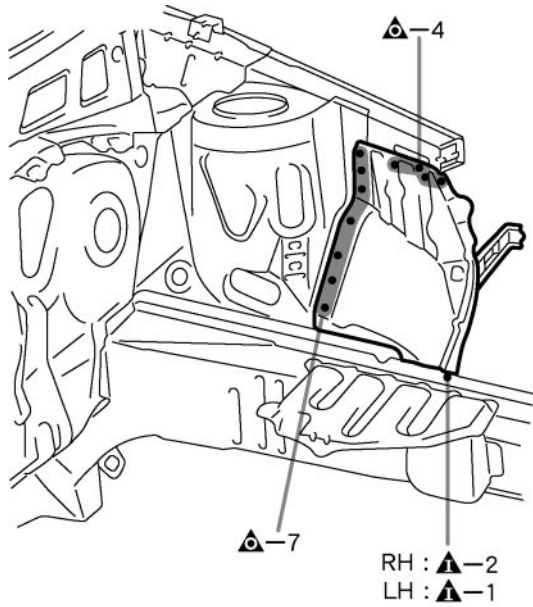

F15609

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

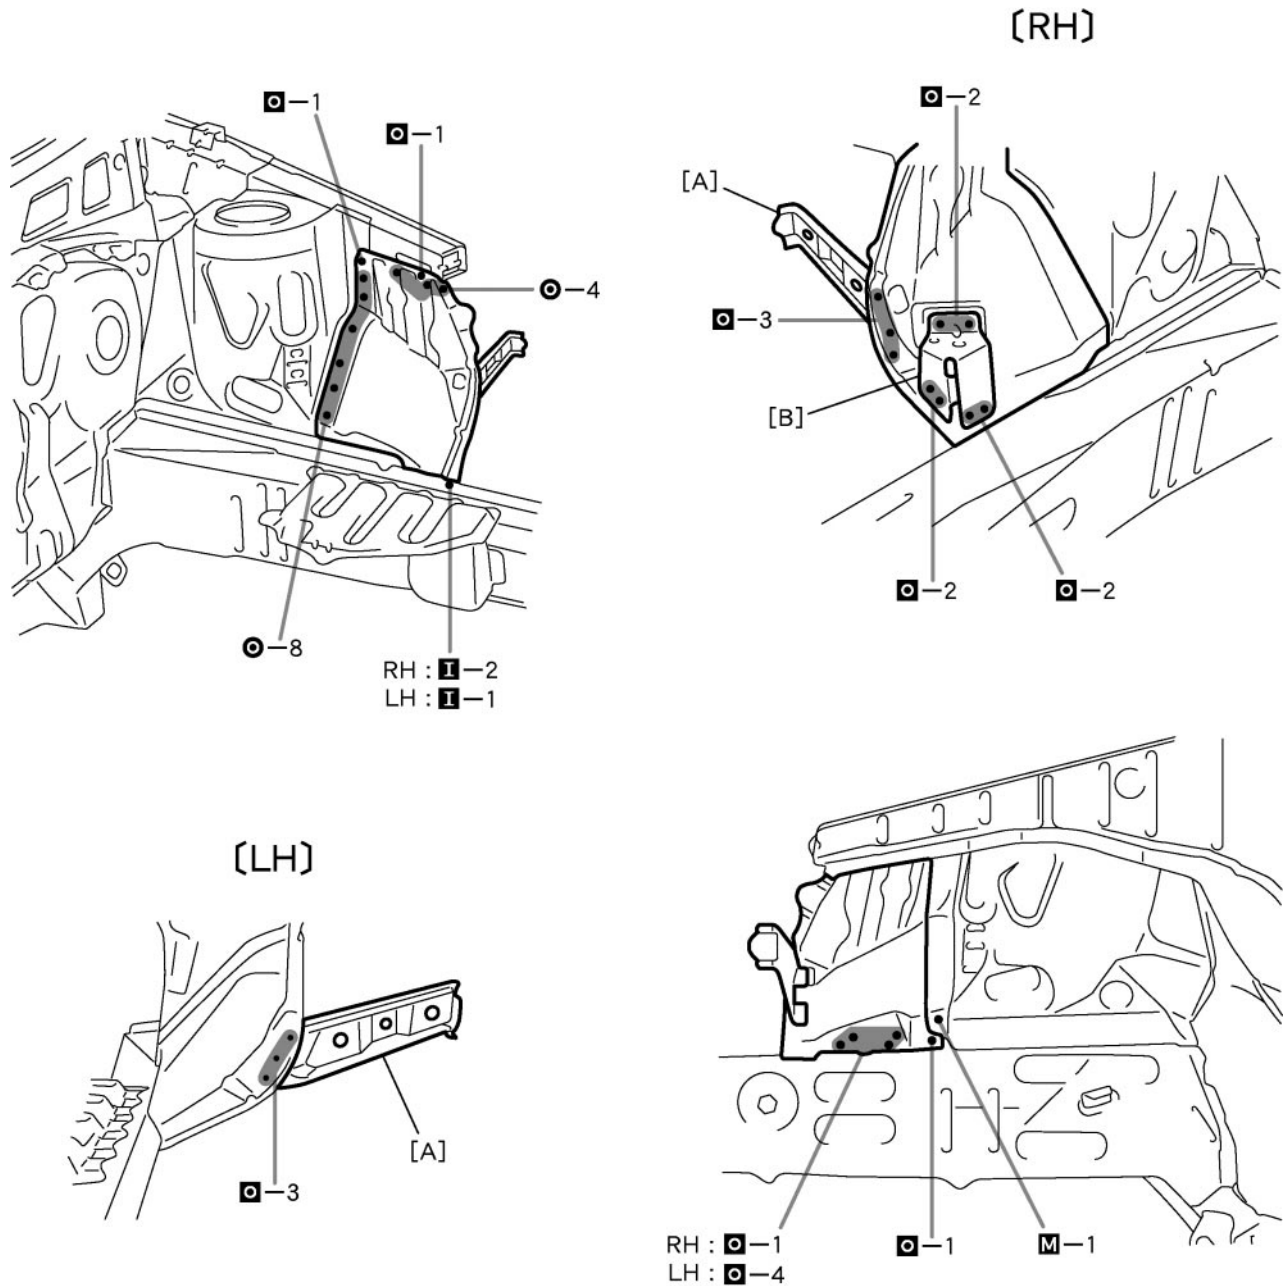

F15610

POINT

- 1 Inspect the fitting of the front fender and hood, etc. before welding, since this affects the appearance of the finish.

PART NAME

- [A] Front Fender Mounting Bracket [B] Engine Front Support Retainer (RH Only)

FRONT SIDE MEMBER (CUT-P)


REPLACEMENT

With the radiator side support removed.



F15617A

REMOVAL

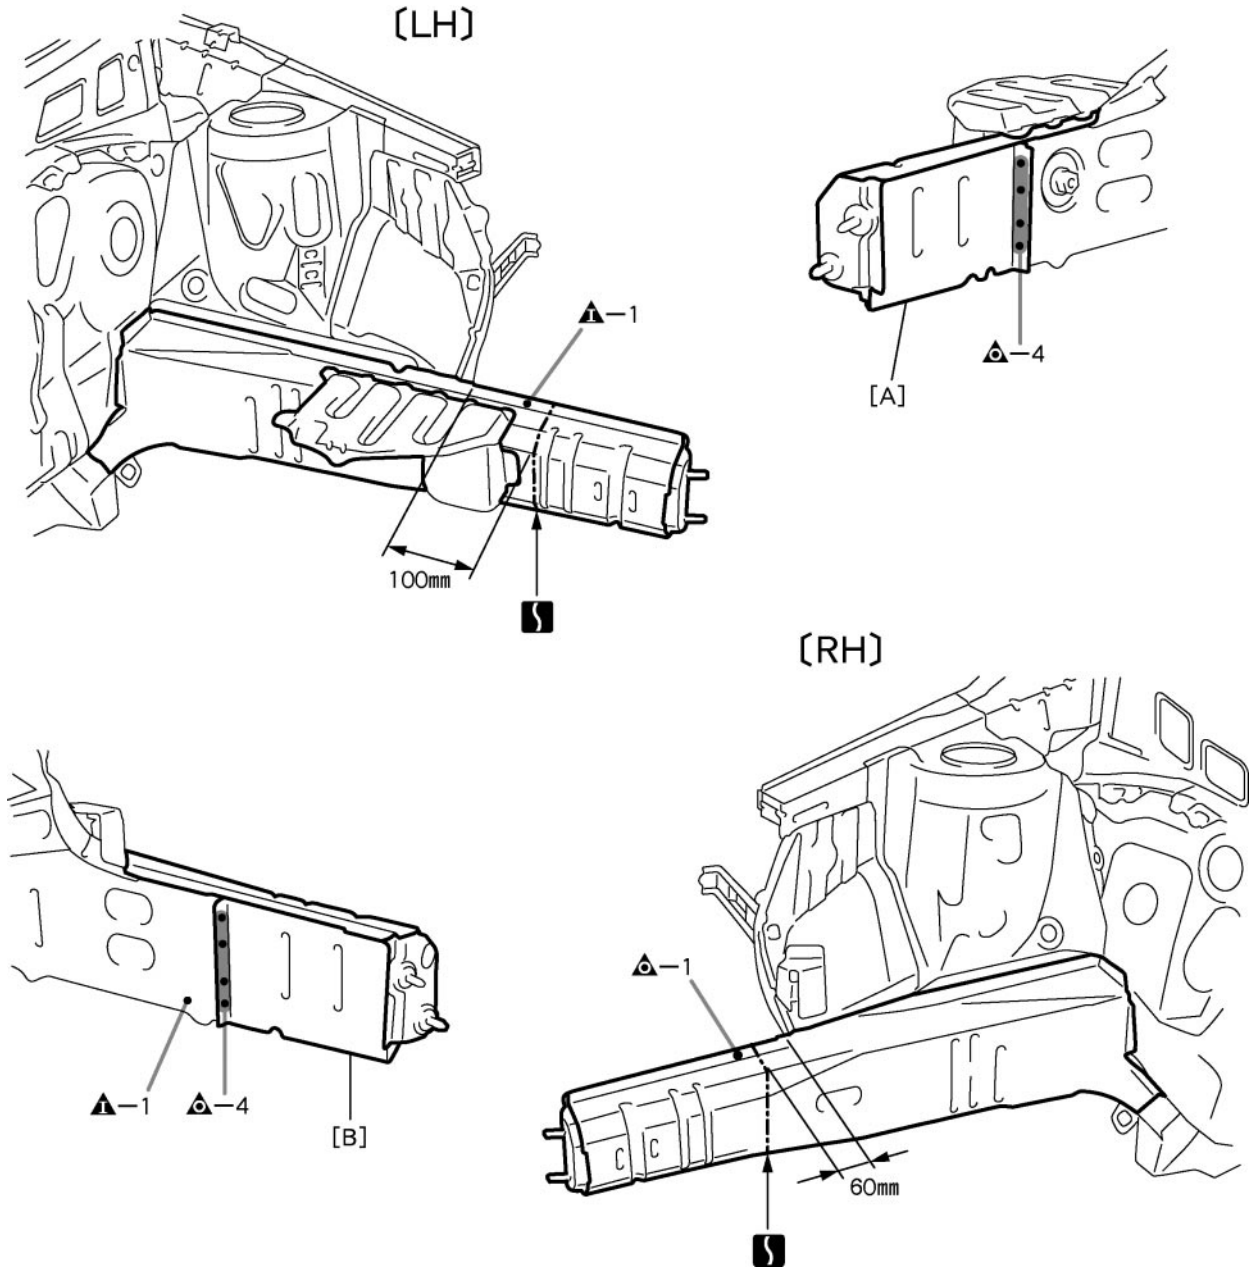

F15617

POINT

1 Remove the [A] or [B] at the same time.


PART NAME

[A] Front Bumper Mounting Reinforcement
60mm (2.36in.)

[B] Front Side Member Front Plate
100mm (3.94in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

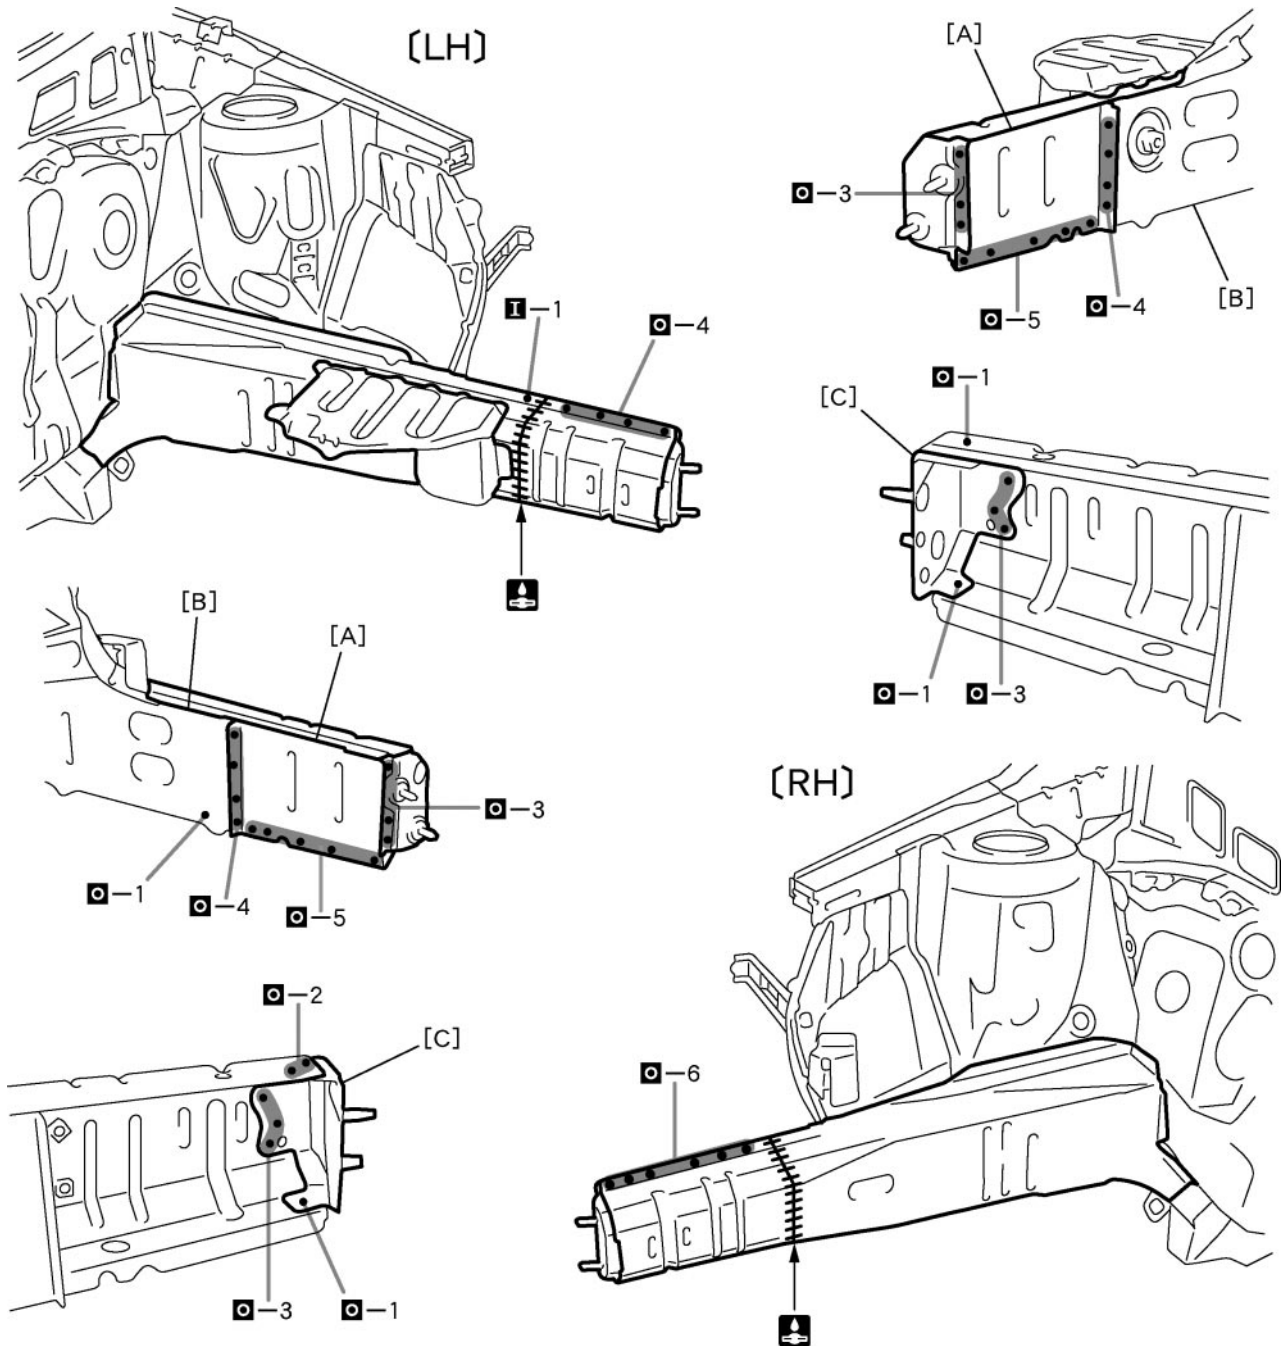

F15618

PART NAME

- [A] Front Bumper Mounting Reinforcement (RH: Front Side Member Front Plate)
 [B] Front Side Member Outer Plate [C] Front Bumper Arm


QUARTER PANEL (CUT)

REPLACEMENT



F15633A



REMOVAL

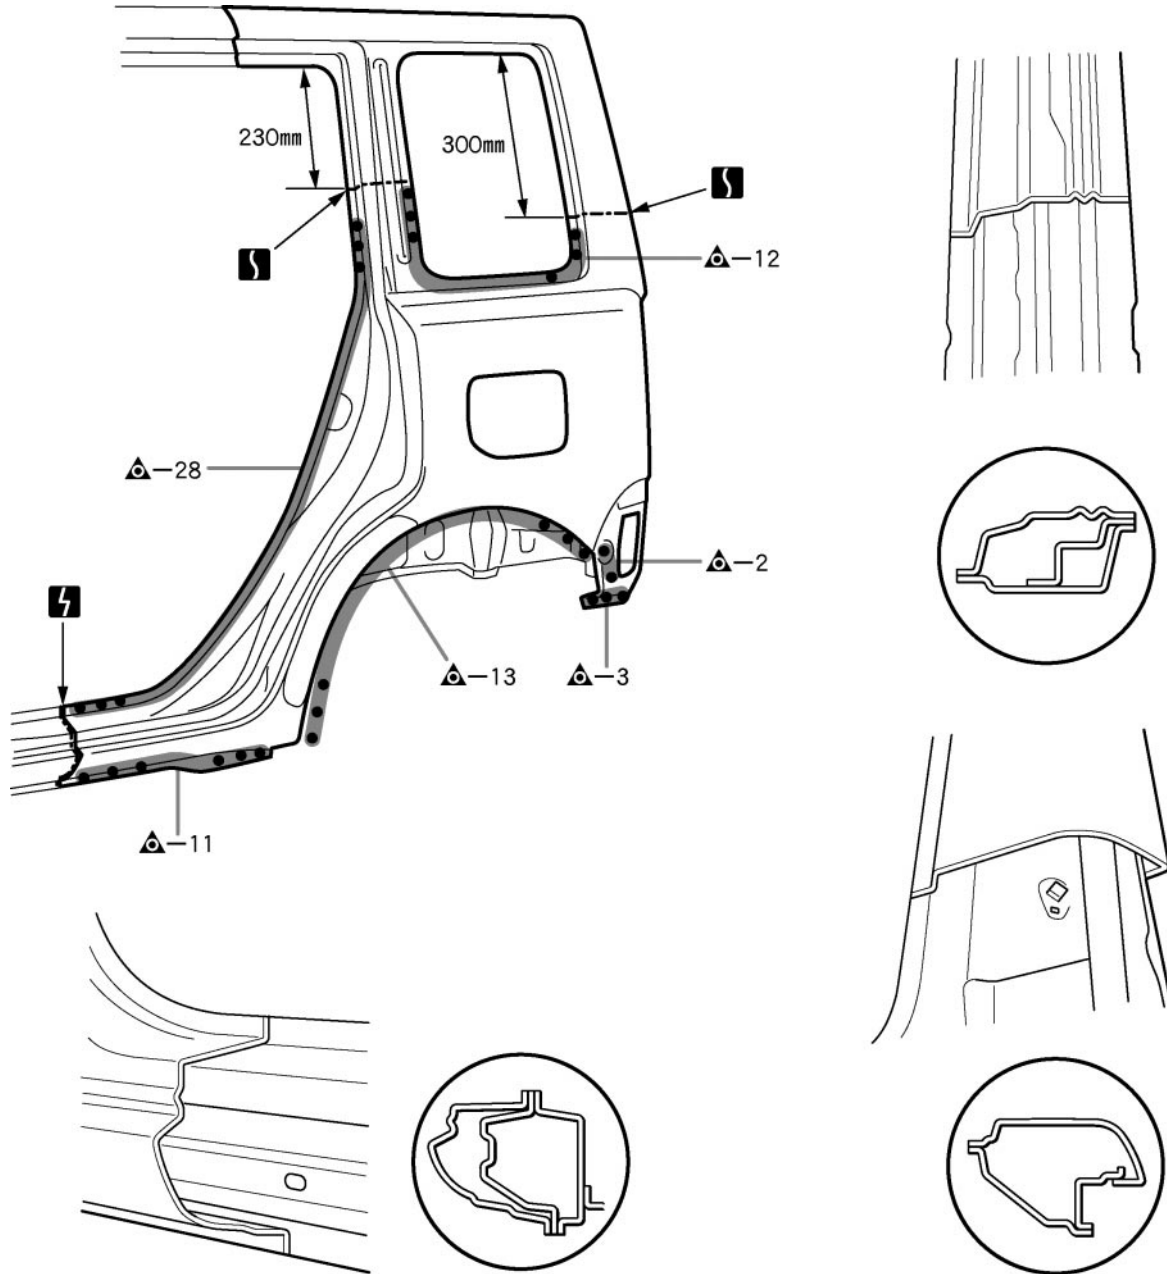

F15633

230mm (9.06in.)

300mm (11.8in.)

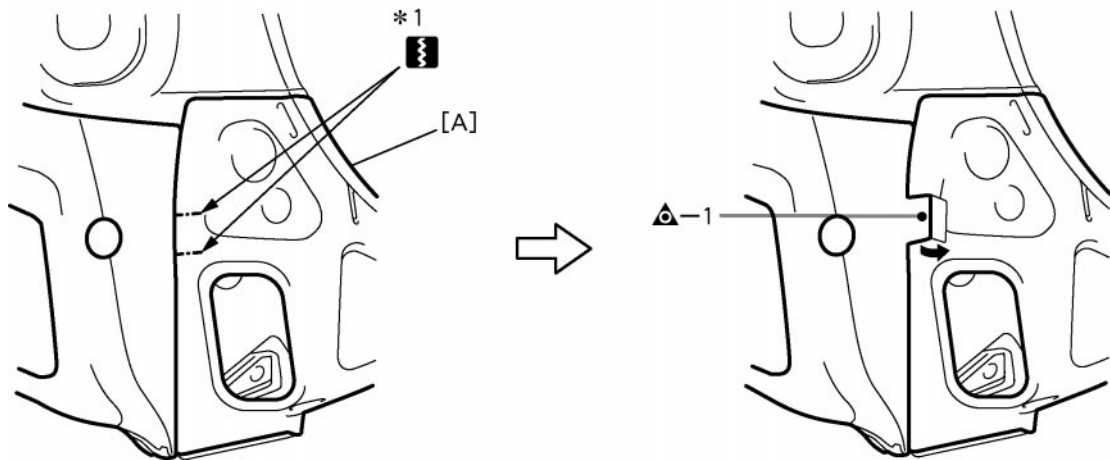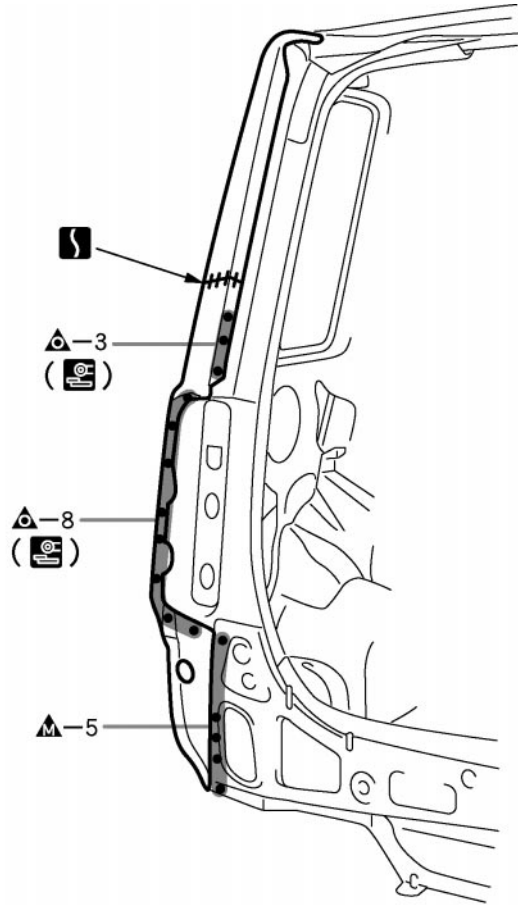

F15634

POINT


1 *1: Make an incision in the [A] and bend it this side.

PART NAME

[A] Body Lower Back Panel

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

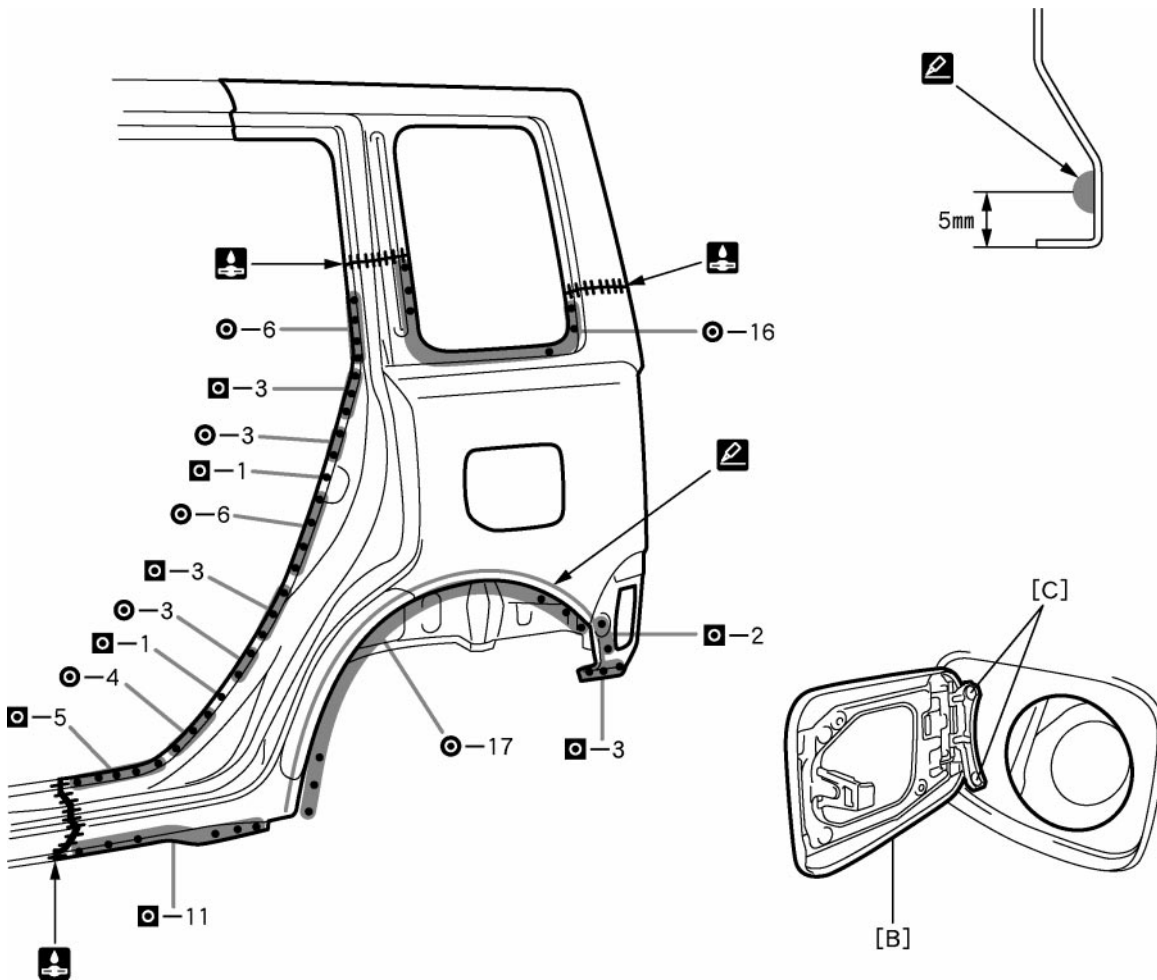



F15635

POINT

- 1 Before temporarily installing the new parts, apply sealer to wheel arch.
HINT:
 - 1) Apply body sealer about 5mm (0.20in.) from the flange, avoiding any oozing.
 - 2) Apply sealer evenly, about 3 - 4mm (0.12 - 0.16in.) in diameter.
- 2 Inspect the fitting of the rear door, back door and rear combination light, etc., before welding, since this affects the appearance of the finish.

PART NAME

[B] Fuel Filler Opening Lid [C] Waterproof Rivets

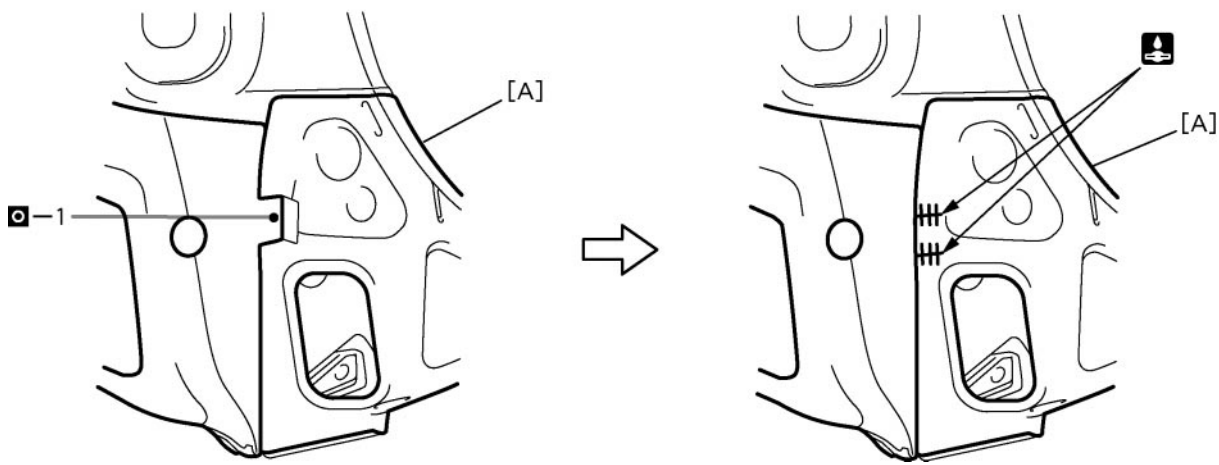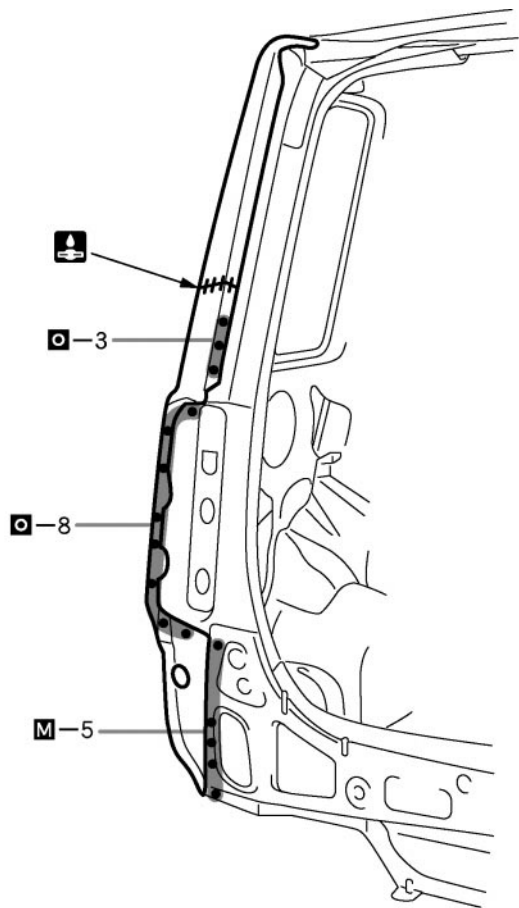

F15636


PART NAME

[A] Body Lower Back Panel

QUARTER WHEEL HOUSING OUTER PANEL (ASSY)


REPLACEMENT

With the quarter panel removed.

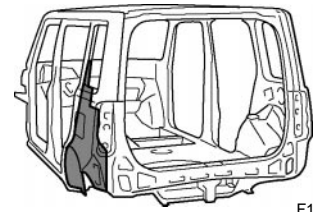

F15637A

REMOVAL

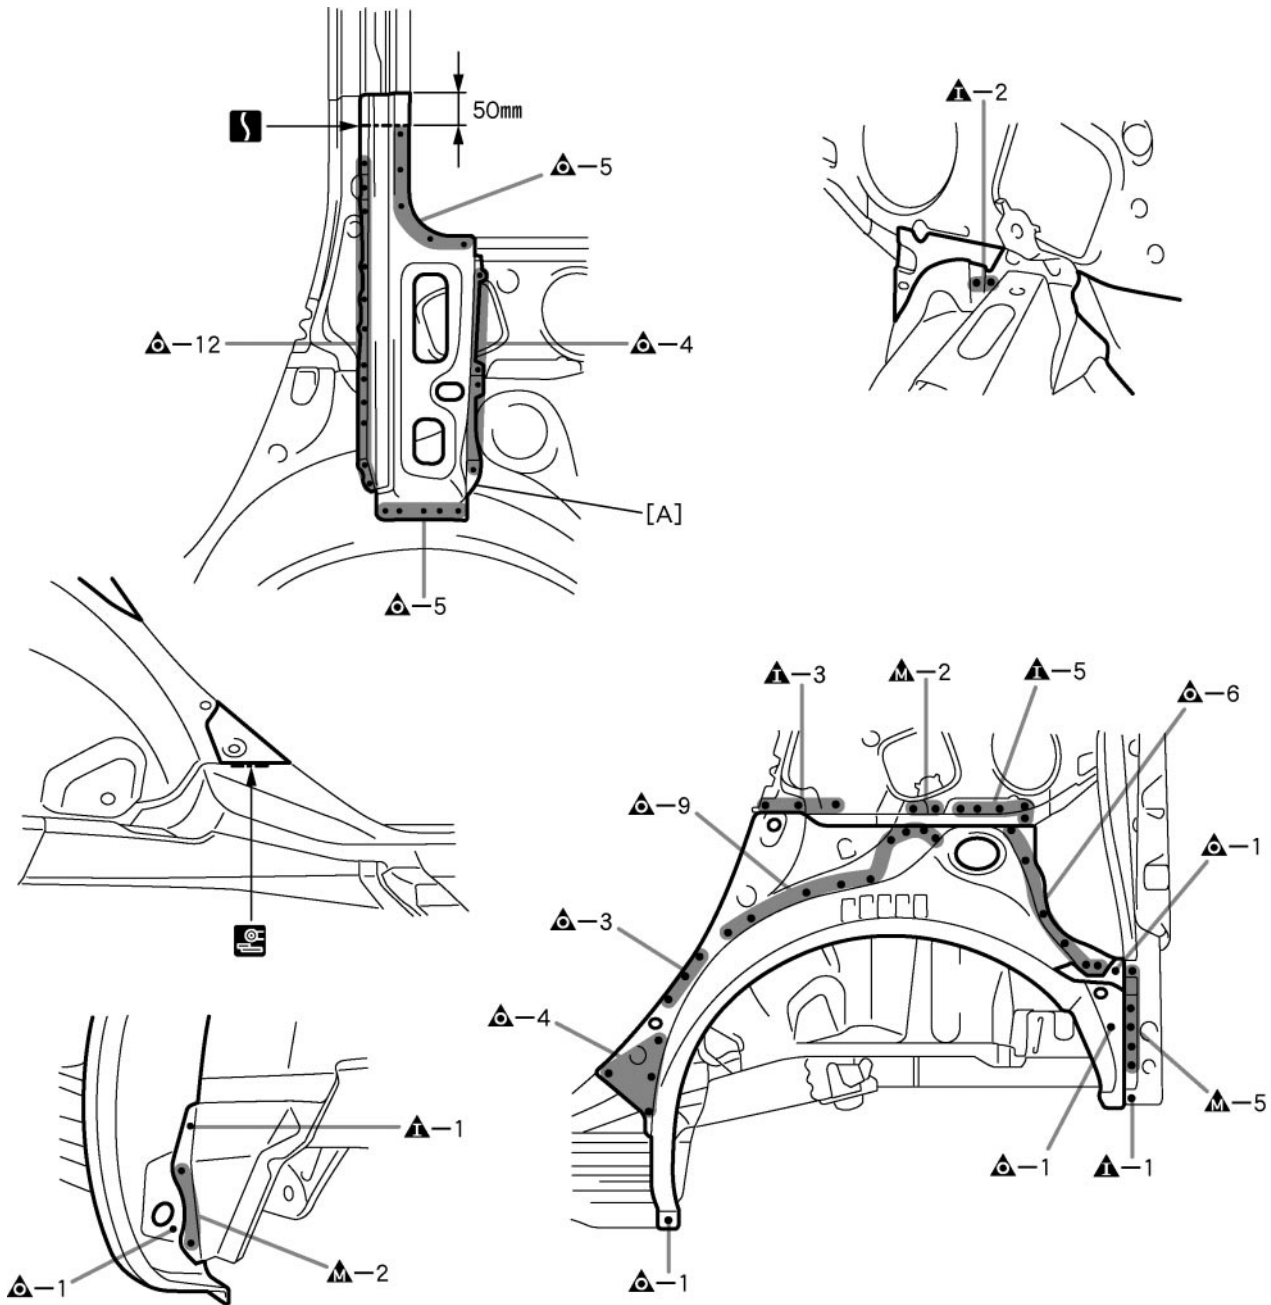

F15637

POINT

1 After removing [A], remove the quarter wheel housing outer panel.


PART NAME

[A] Roof Side Outer Panel

50mm (1.97in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

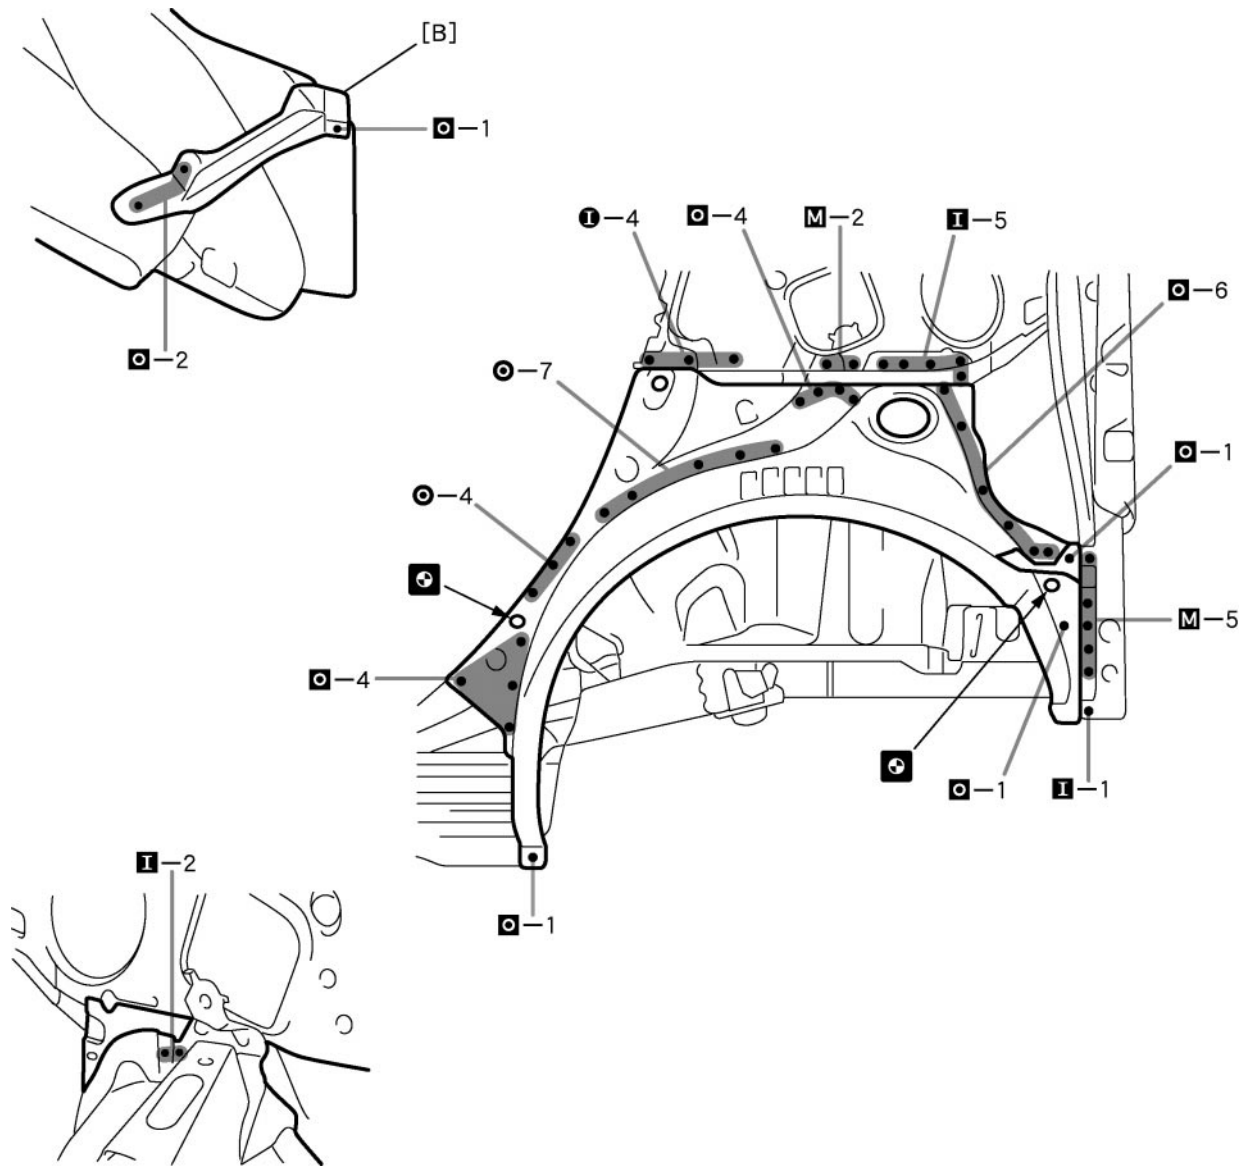




F15638

POINT

1 Determine the position of the new parts by assembly marks of the inner and outer panels.

PART NAME

[B] Quarter Wheel Housing Center Gusset

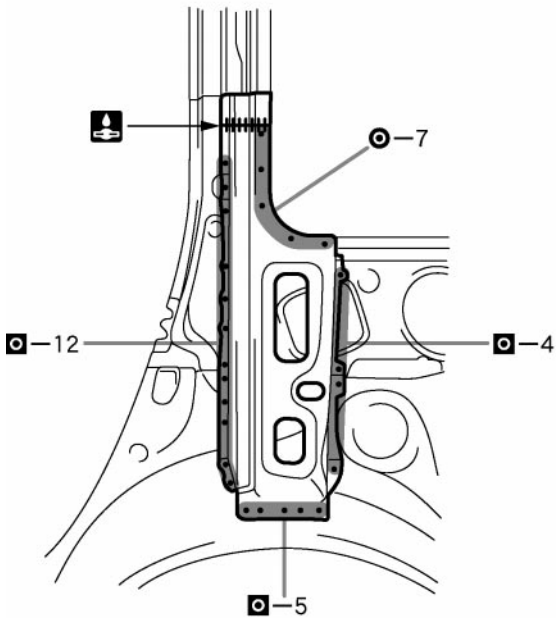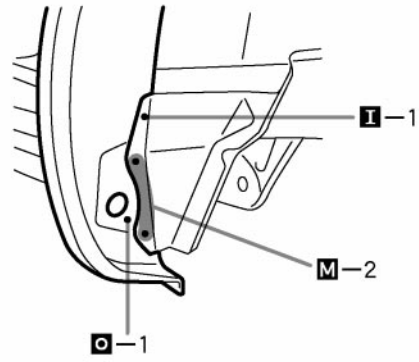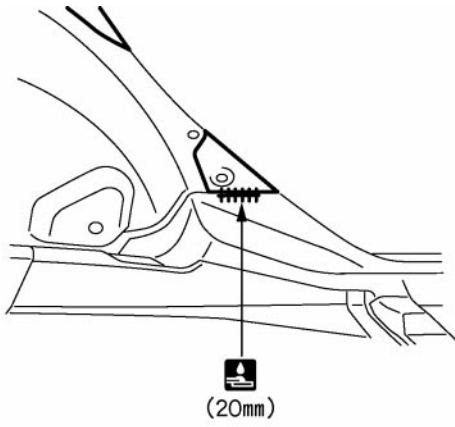

RADIATOR SIDE SUPPORT (ASSY)



REPLACEMENT

With the radiator upper support removed.



F15603A


REMOVAL

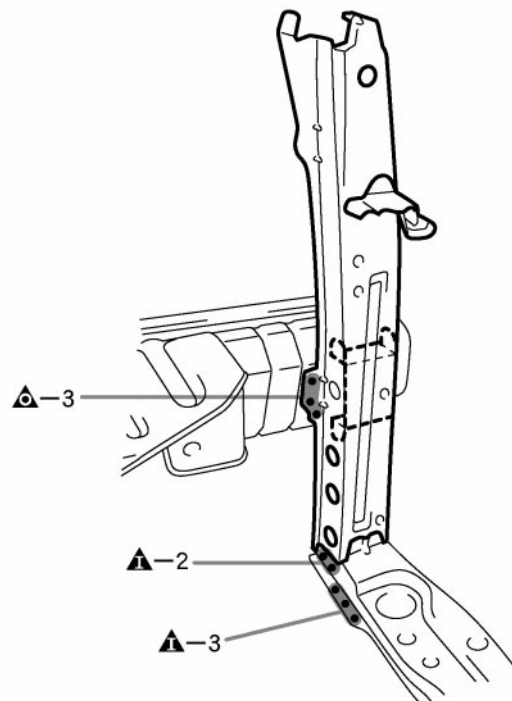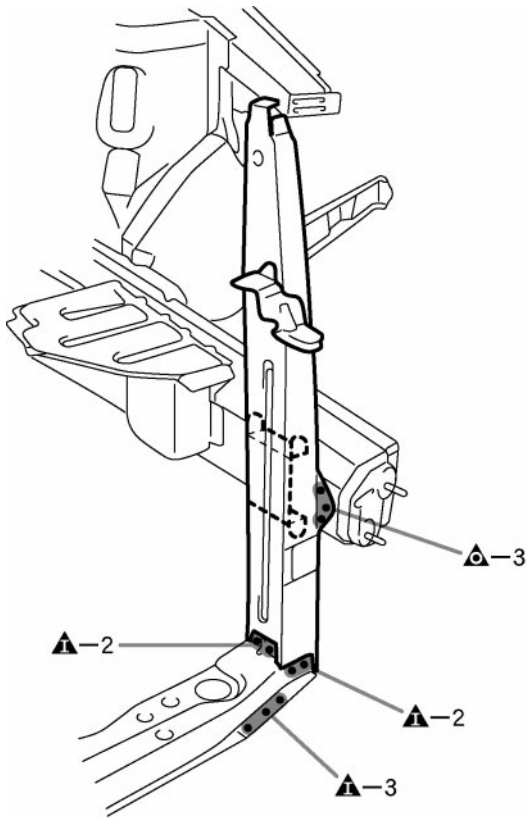

F15603

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

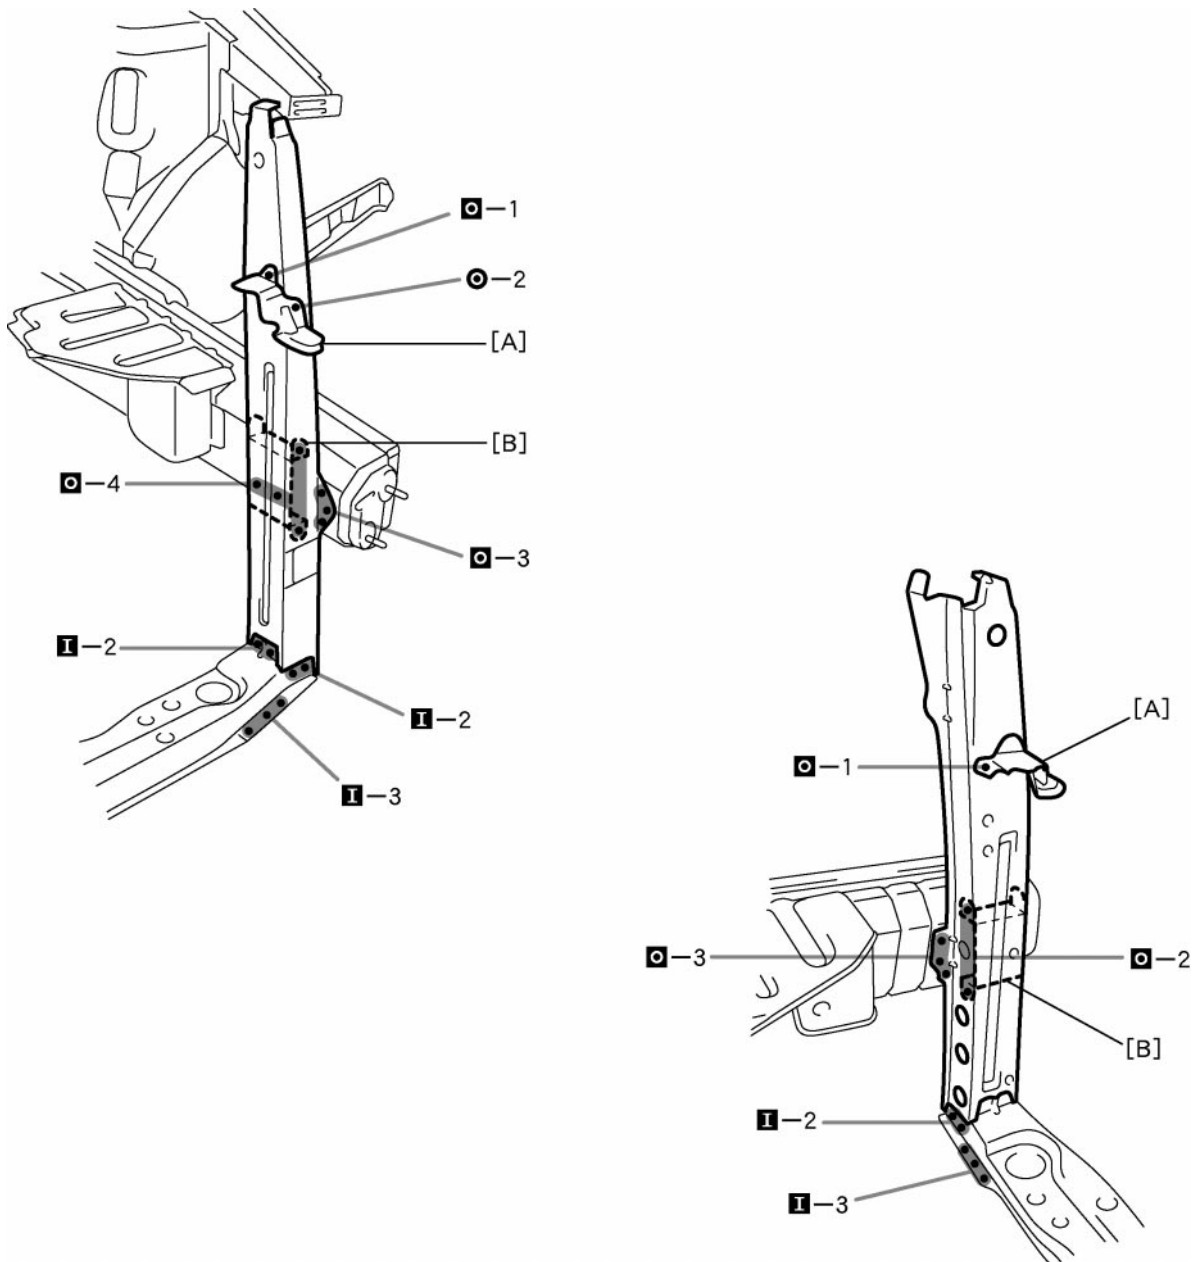

F15604

PART NAME

[A] Front Bumper Side Mounting Bracket [B] Radiator Support Reinforcement




RADIATOR LOWER SUPPORT (ASSY)

REPLACEMENT



F15605A




REMOVAL

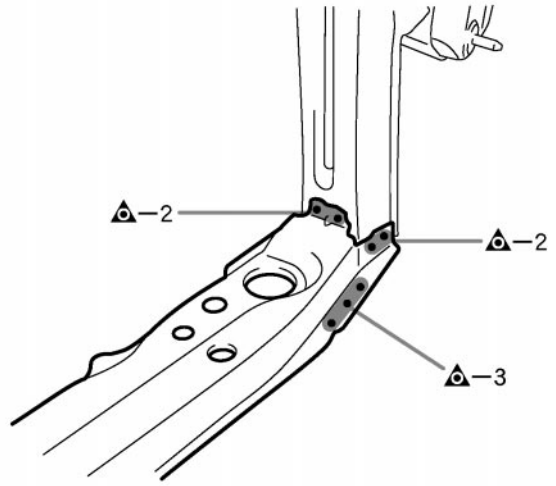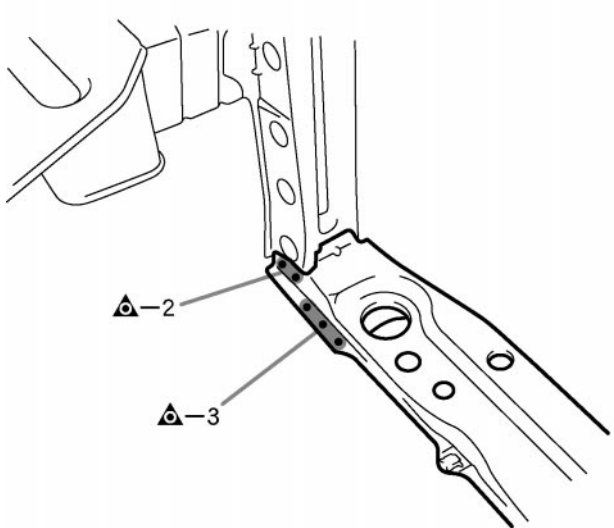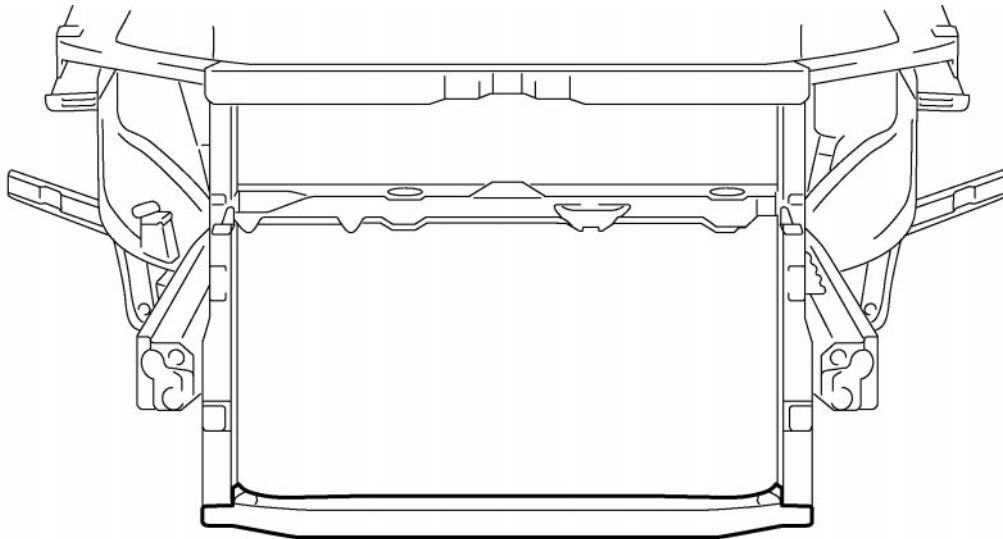

F15605

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

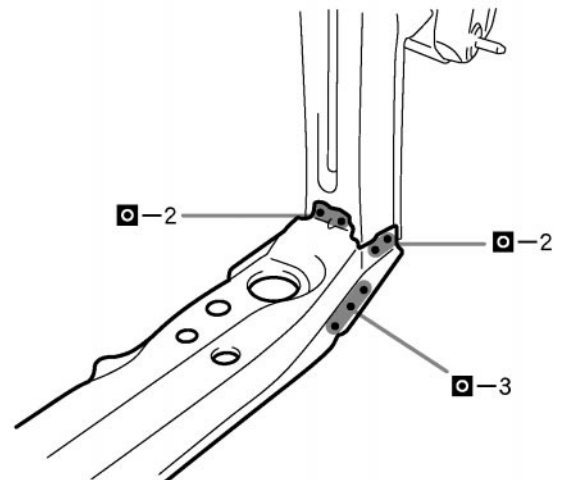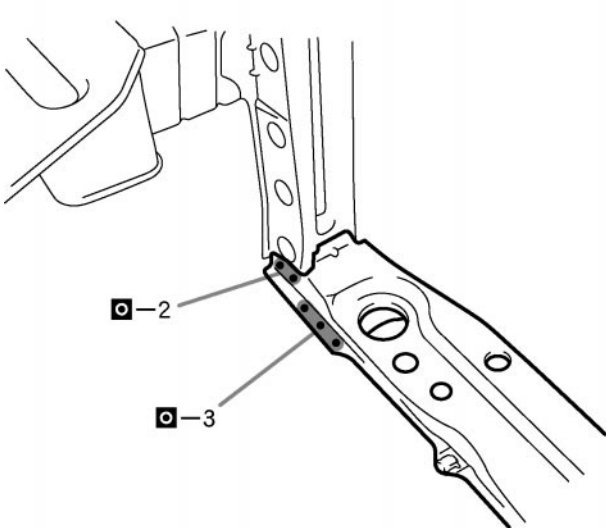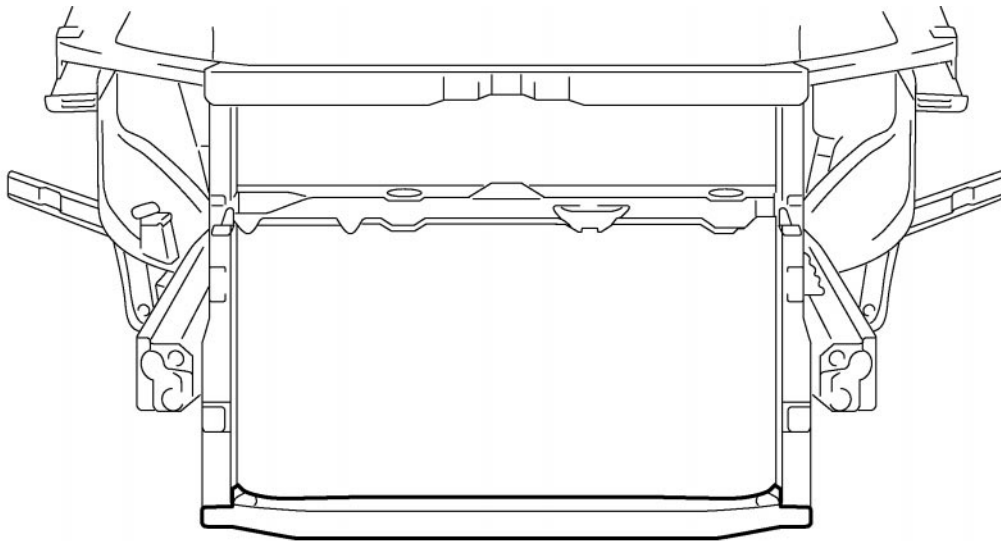



RADIATOR SUPPORT (ASSY)

REPLACEMENT



F15607A



REMOVAL

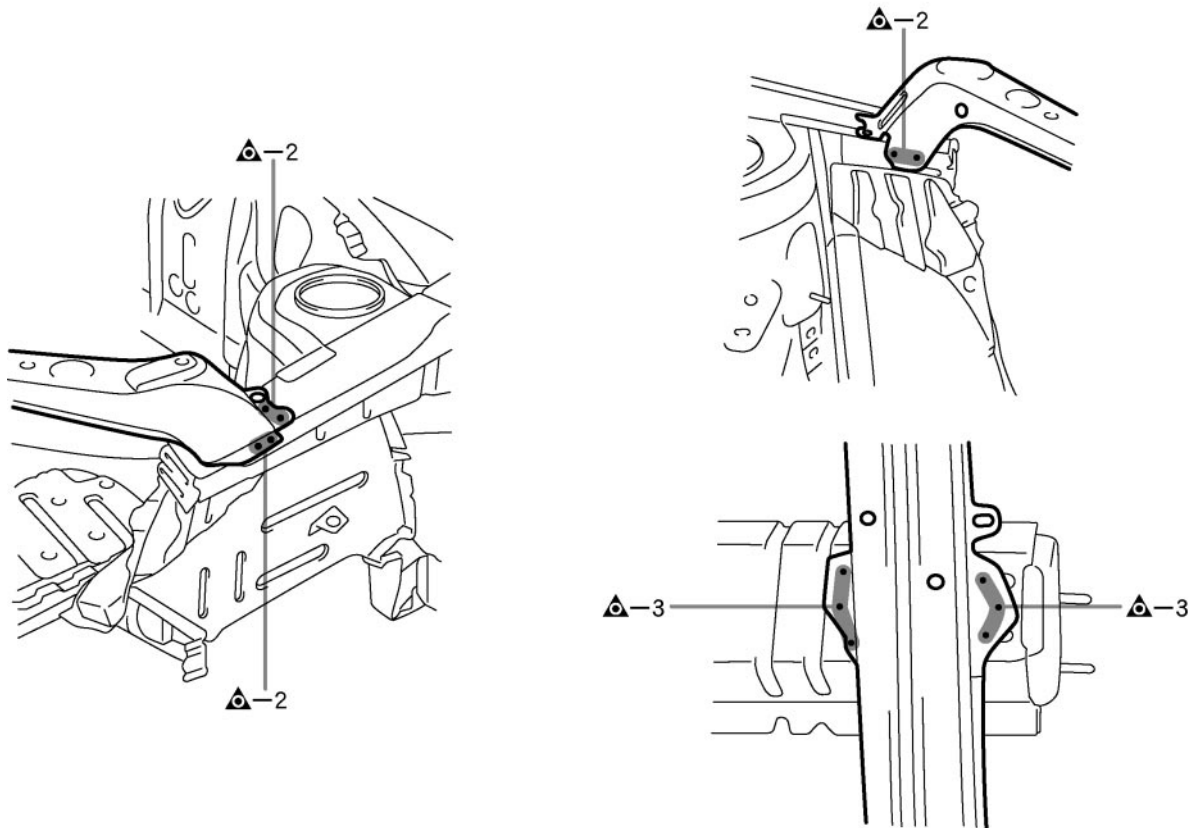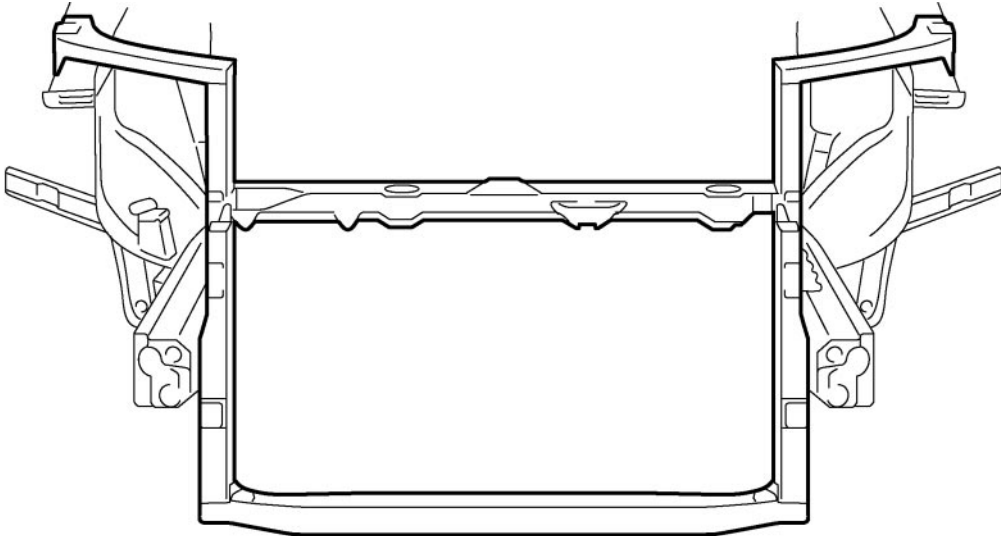

F15607

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

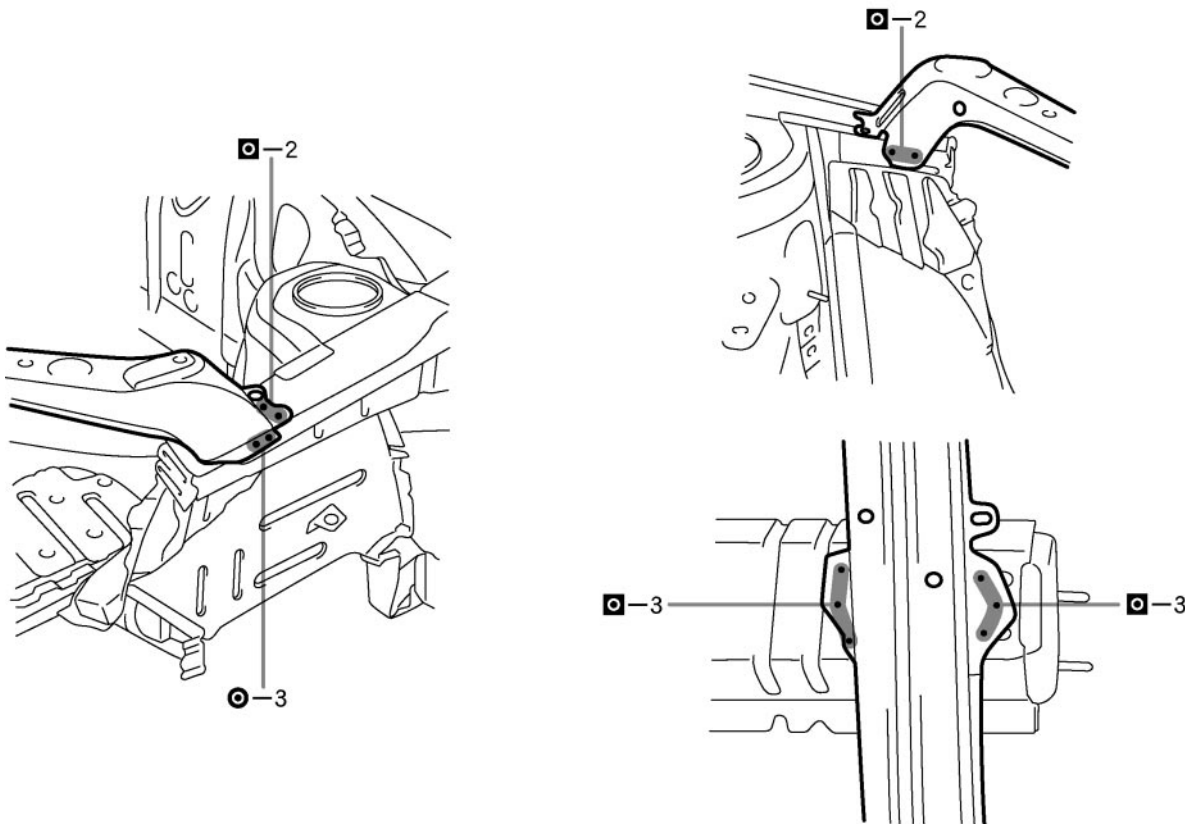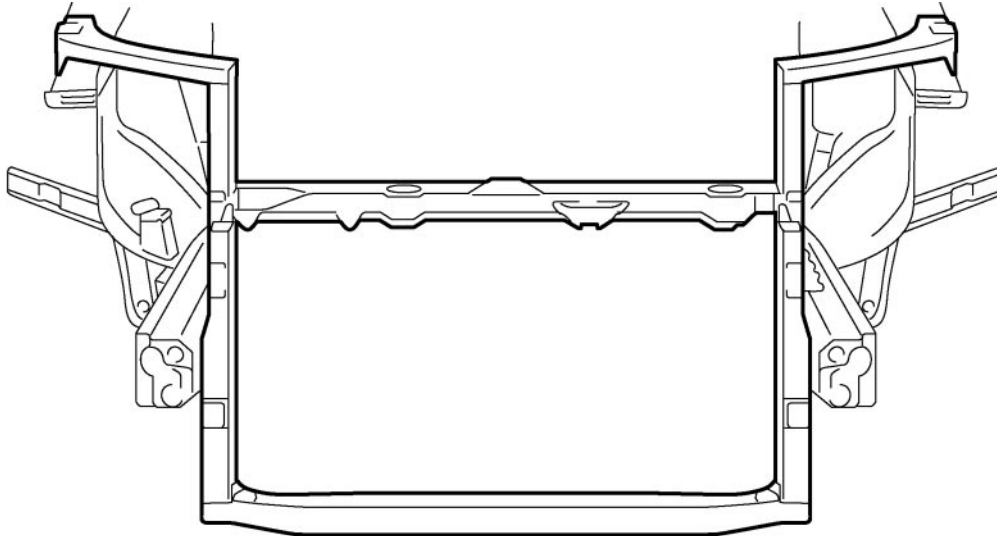



RADIATOR UPPER SUPPORT (ASSY)

REPLACEMENT



F15601A



REMOVAL

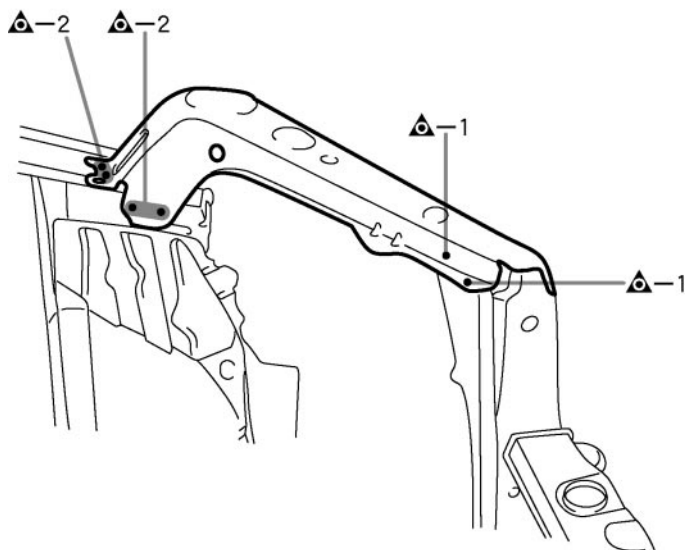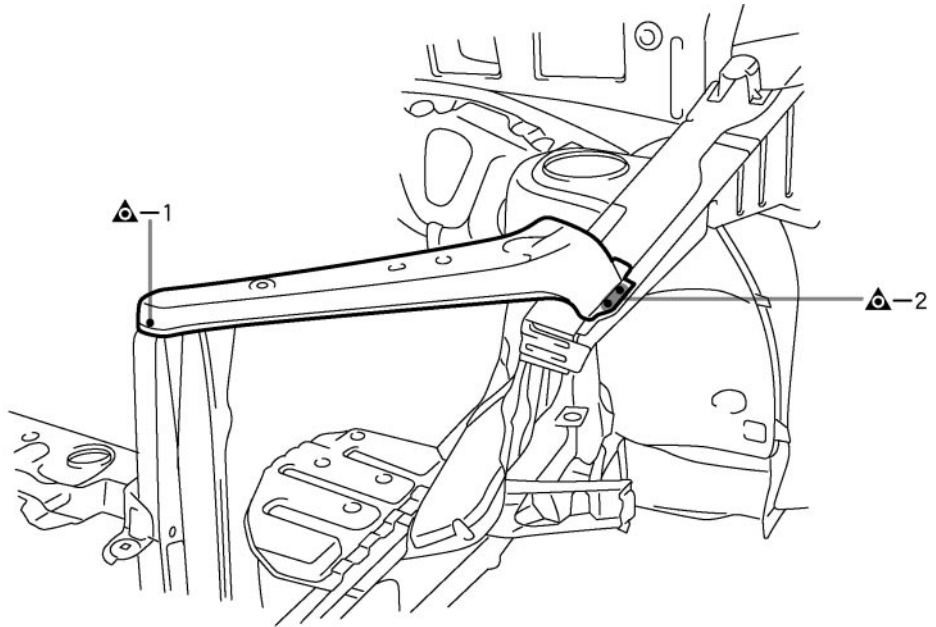

F15601

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

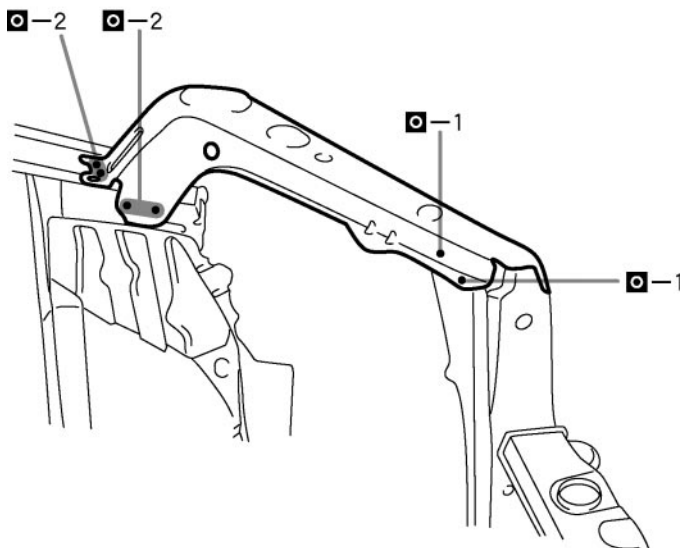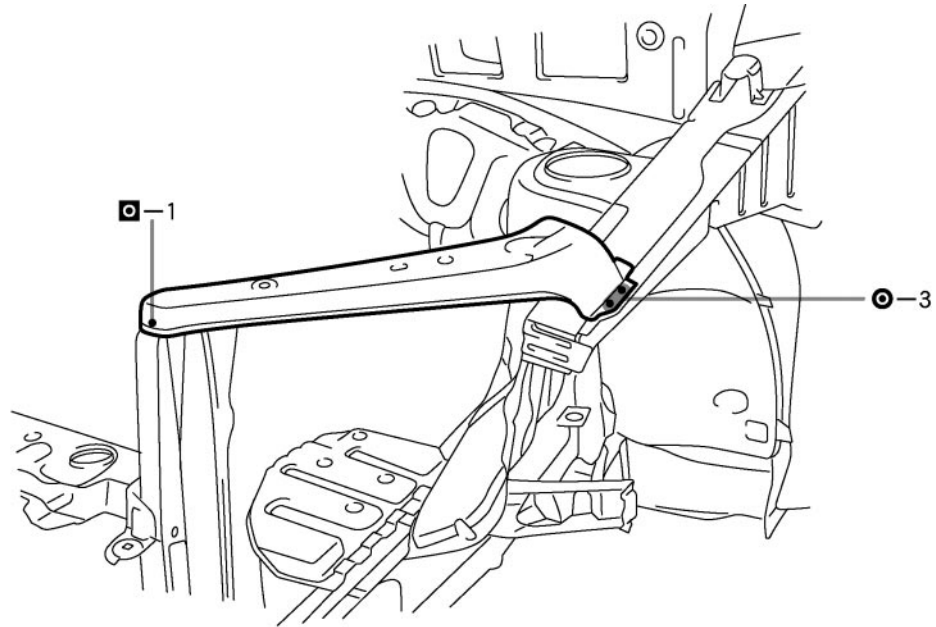



REAR DOOR OUTER PANEL (ASSY)

REPLACEMENT



F15678a

REMOVAL

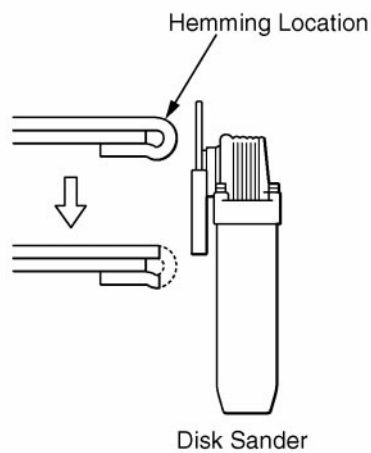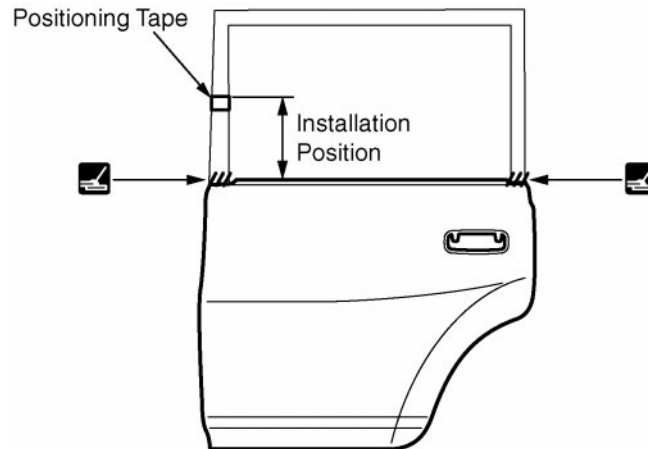






F15678

POINT

- 1 Before removing the outer panel, mark the installation position with a tape.
- 2 Before removing the outer panel, establish its exact position in relation to the window frame using a reference marker, etc.
- 3 After grinding off the hemming location, remove the outer panel.

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

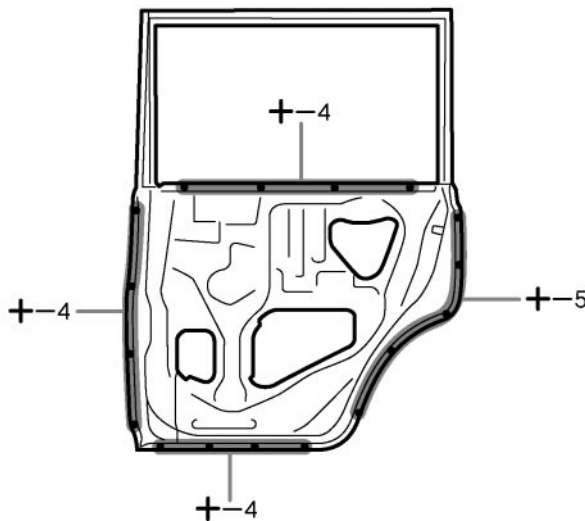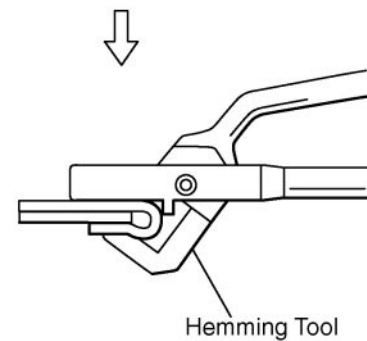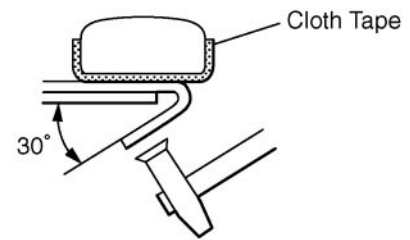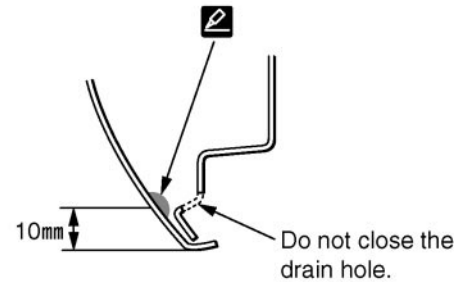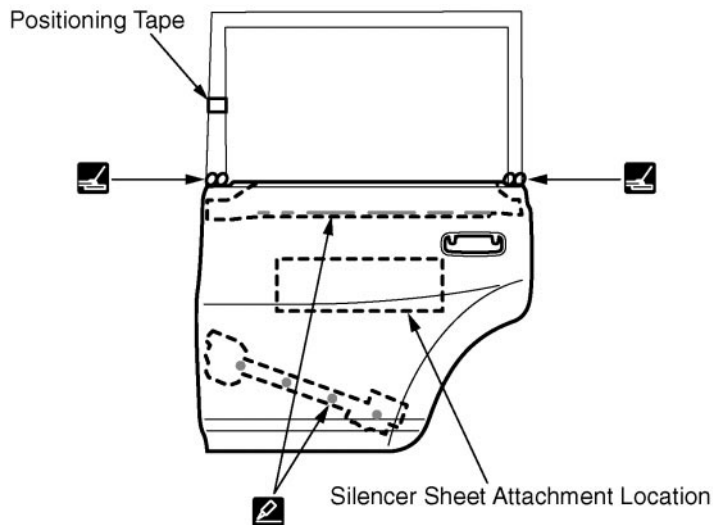

F15679


POINT

- 1 Before temporarily installing the new parts, apply body sealer to the reinforcement, side impact protection beam and back side of the new parts.
HINT:
 - 1) Apply sealer evenly about 10mm (0.39in.) from the flange and 3mm (0.12in.) in diameter to the outer panel and apply just enough sealer for the reinforcement and side impact protection beam to make contact.
- 2 Bend the flange hem about 30° with a hammer and dolly, then fasten tightly with a hemming tool.
HINT:
 - 1) Perform hemming in three steps, being careful not to warp the panel.
 - 2) If a hemming tool cannot be used, hem with a hammer and dolly.

REAR FLOOR NO.5 CROSSMEMBER (CUT)



REPLACEMENT

With the roof side inner front extension removed.

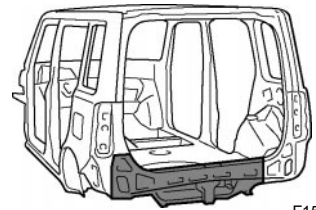

F15650A

REMOVAL

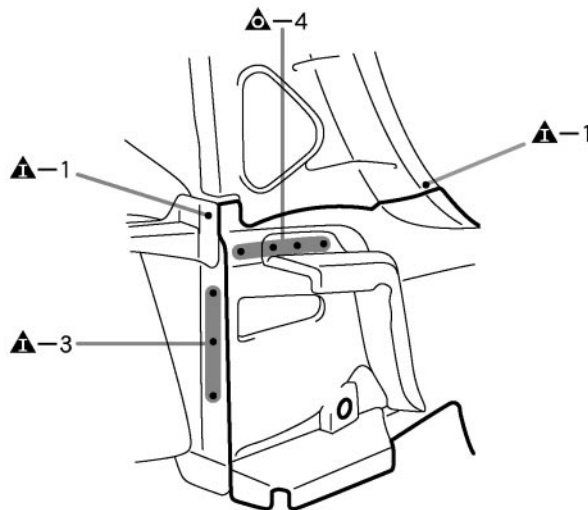
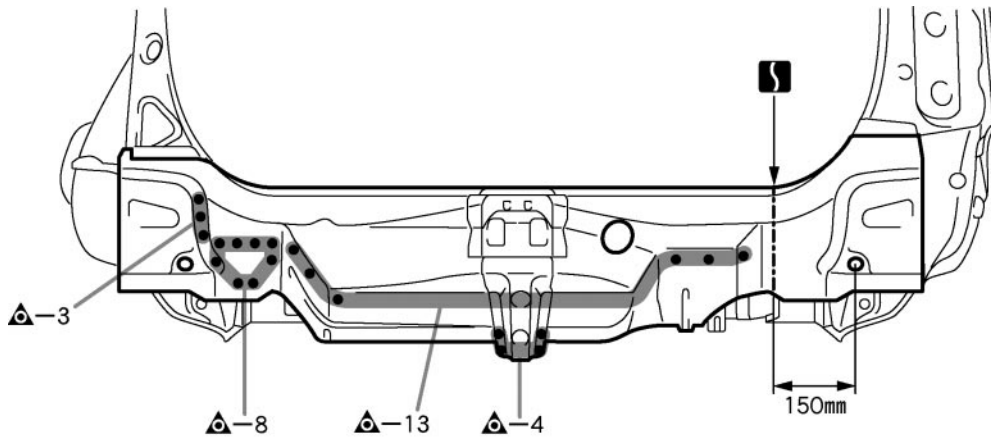


F15650

150mm (5.90in.)

INSTALLATION


- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

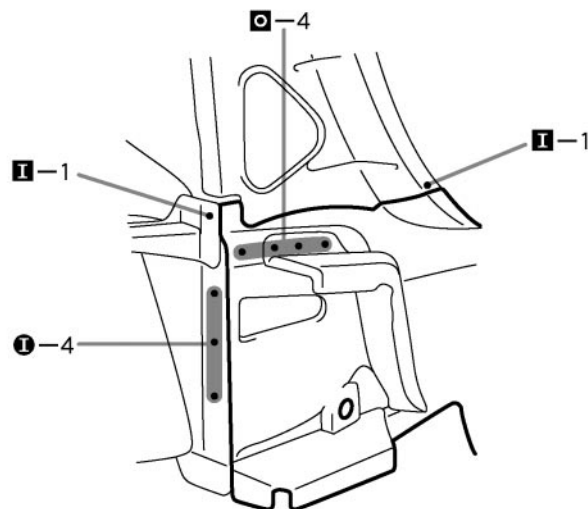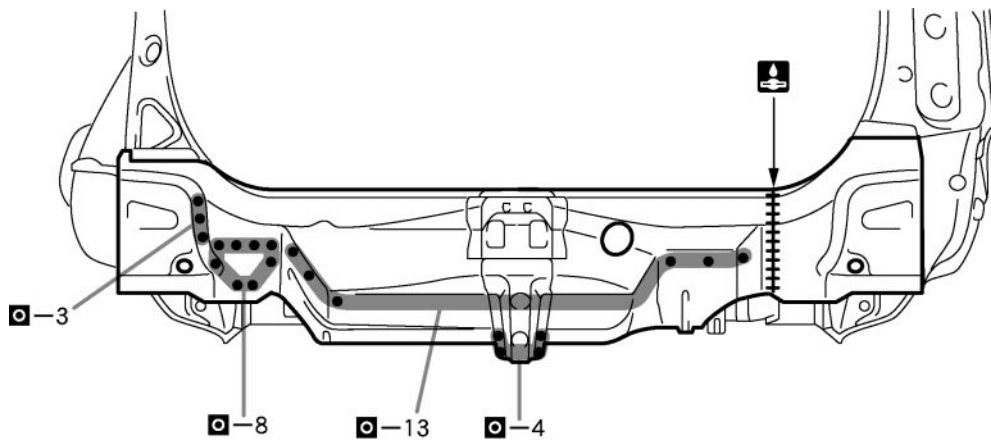

REAR FLOOR PAN (ASSY)



REPLACEMENT

With the rear floor crossmember No.5 (CUT-H) removed.

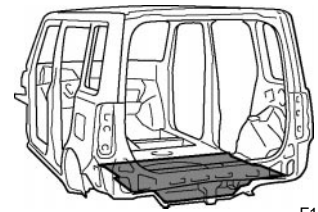

F15652A


REMOVAL

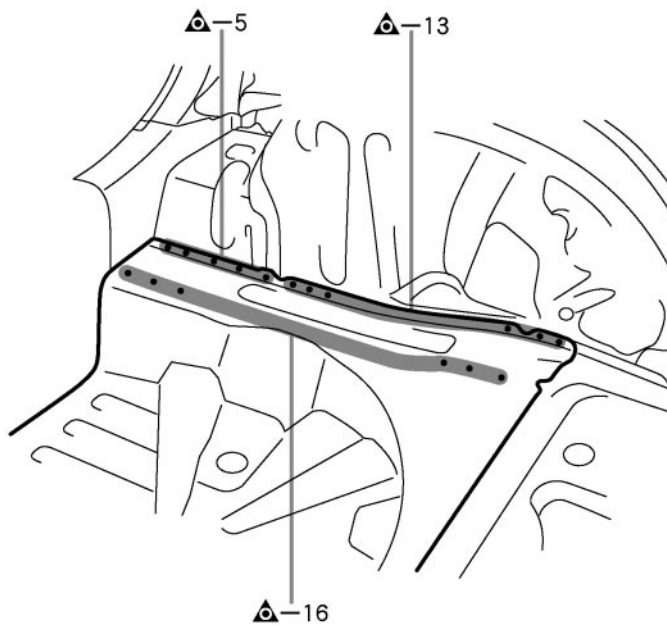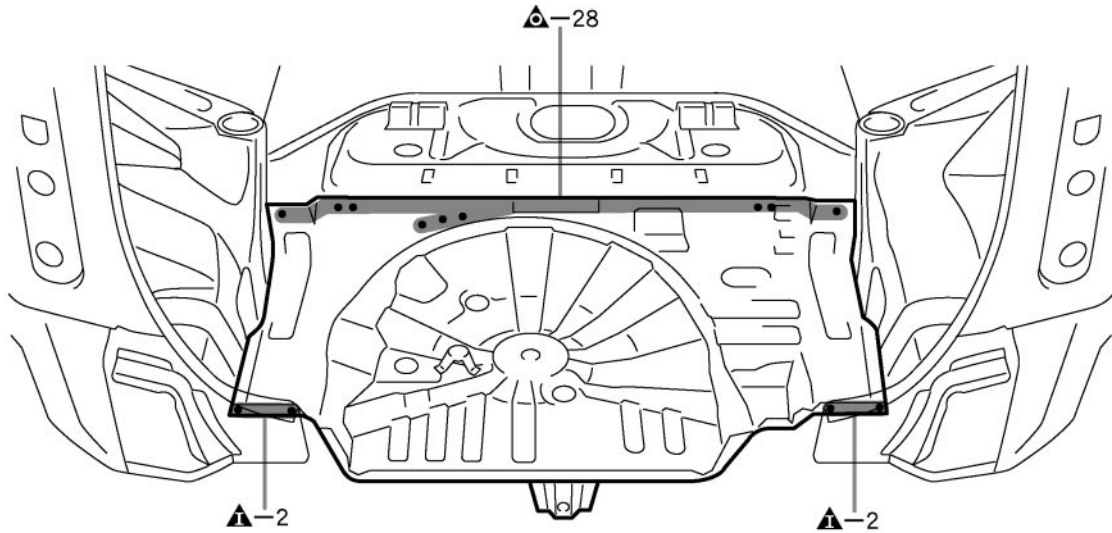

F15652

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

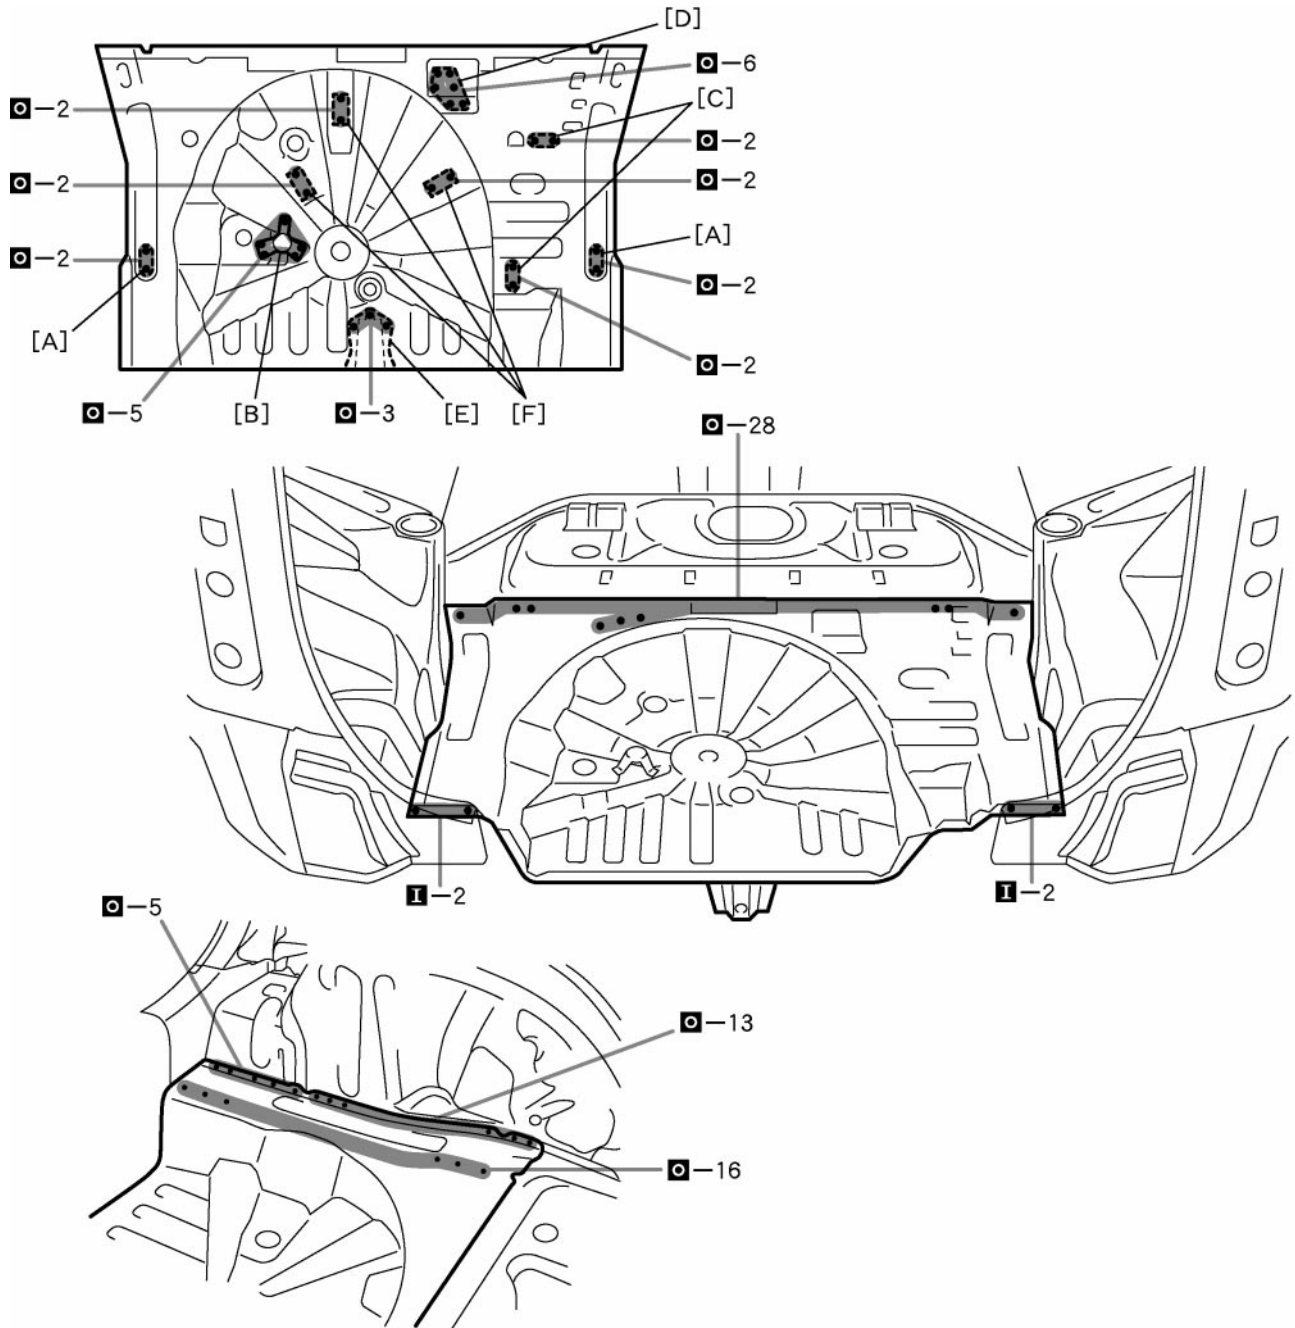

F15653

PART NAME

- | | |
|---|-------------------------------|
| [A] Rear Floor Pan Inner Reinforcement | [B] Spare Wheel Clamp Bracket |
| [C] Rear Floor Heat Insulator No.3 Bracket. | [D] Floor Clamp Bracket |
| [E] Jack Up Bracket | [F] Fuel Tube Bracket |

REAR FLOOR PAN EXTENSION (ASSY)



REPLACEMENT

With the rear floor No.5 crossmember removed.



F15654A



REMOVAL

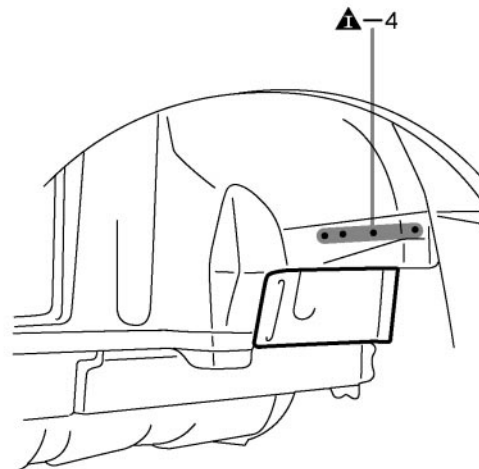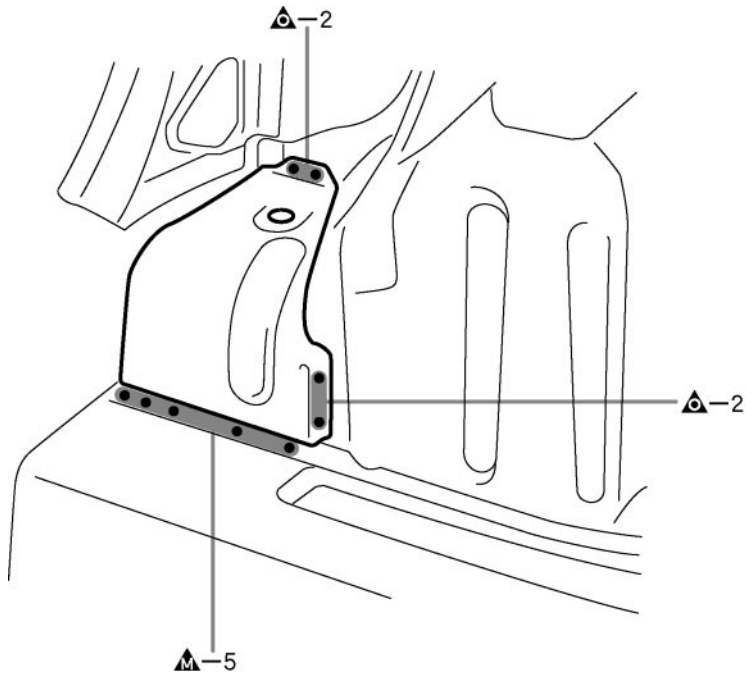

F15654

INSTALLATION


- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

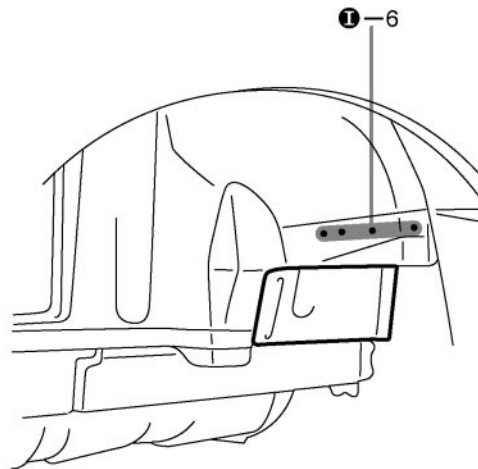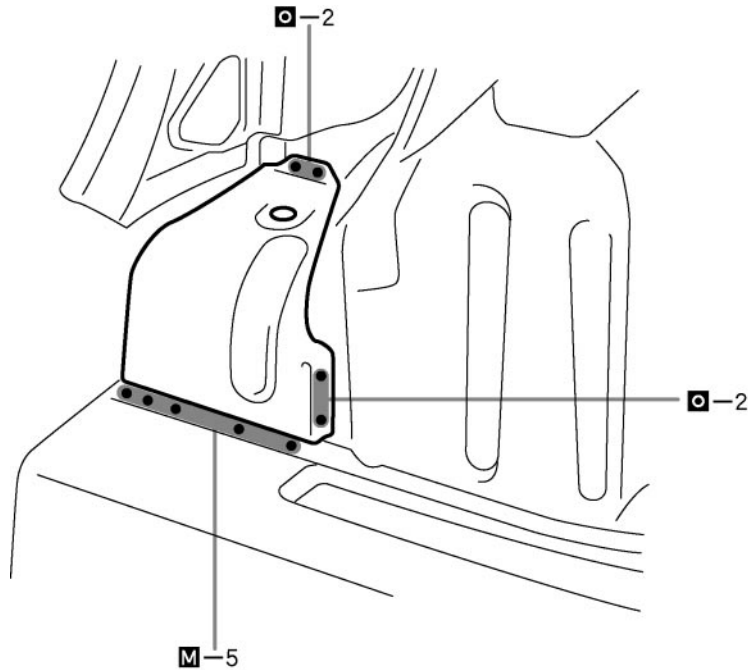

REAR FLOOR SIDE MEMBER REINFORCEMENT (ASSY)



REPLACEMENT

With the rear floor crossmember No.5 removed.

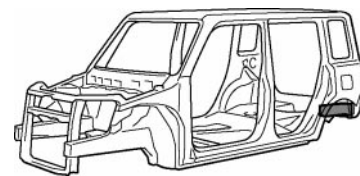

F15656A



REMOVAL

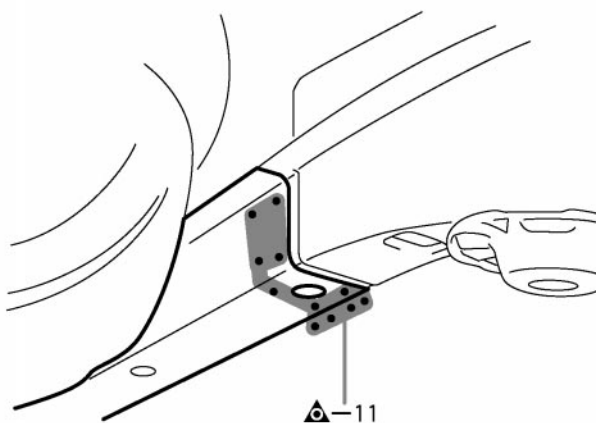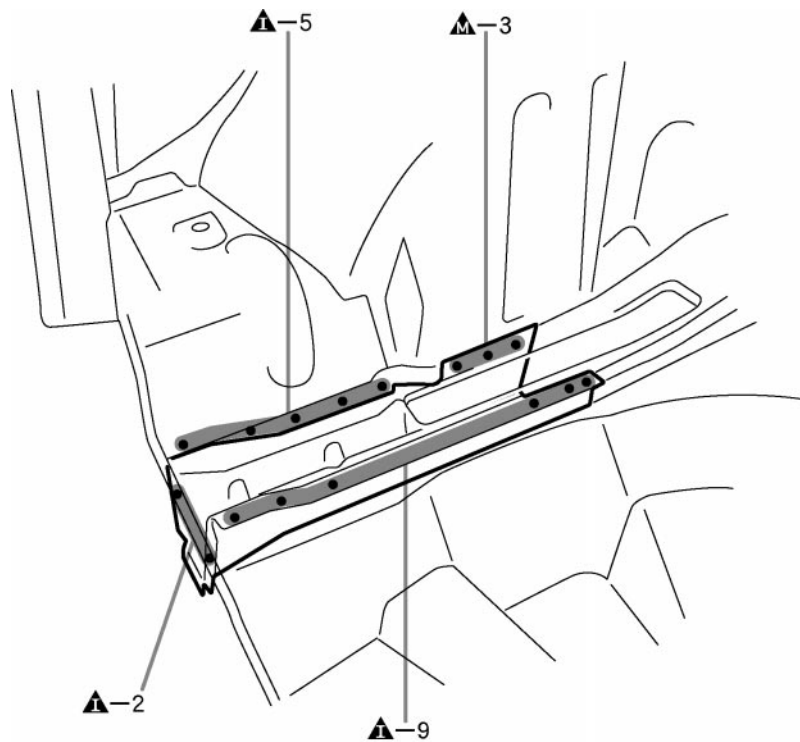

F15656

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

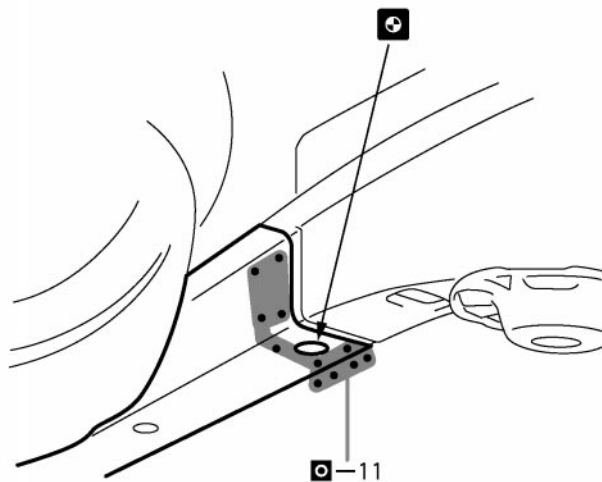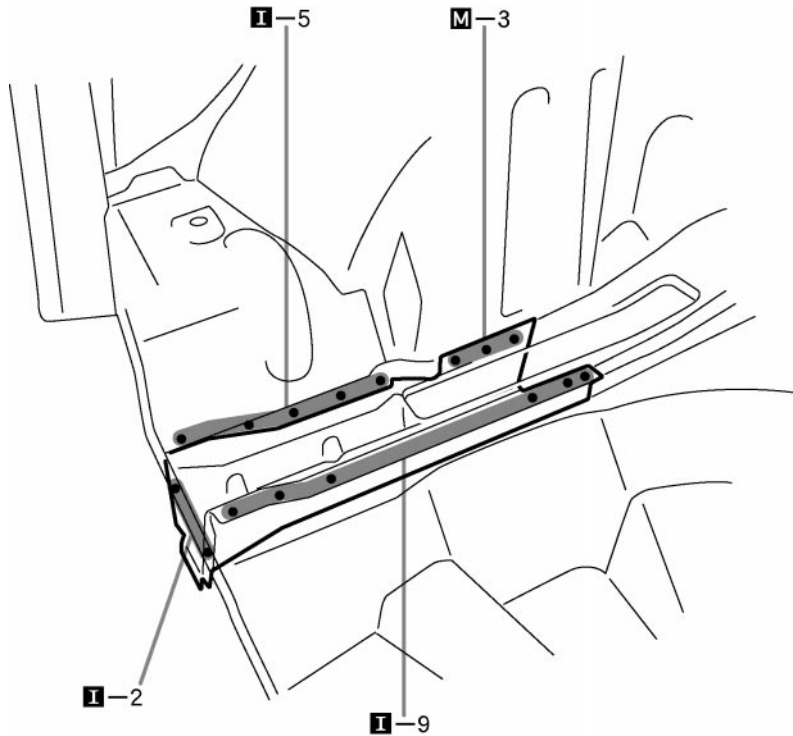



REAR FLOOR NO.2 CROSSMEMBER (ASSY)

REPLACEMENT



F15658A



REMOVAL

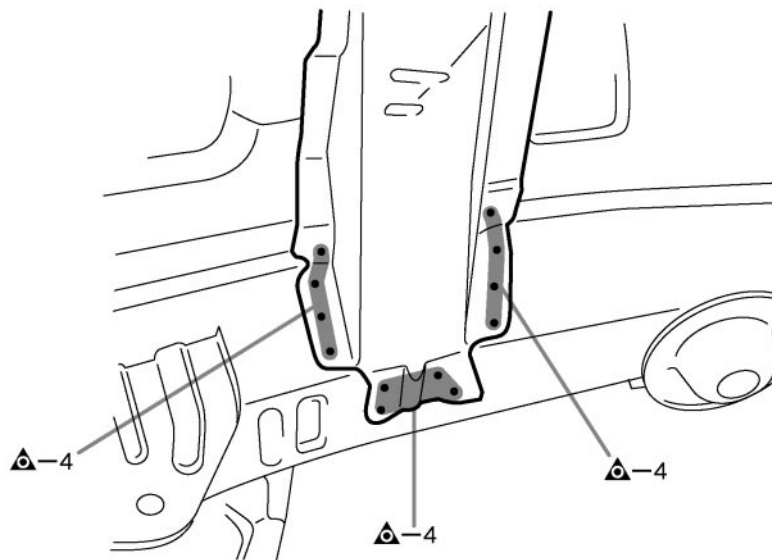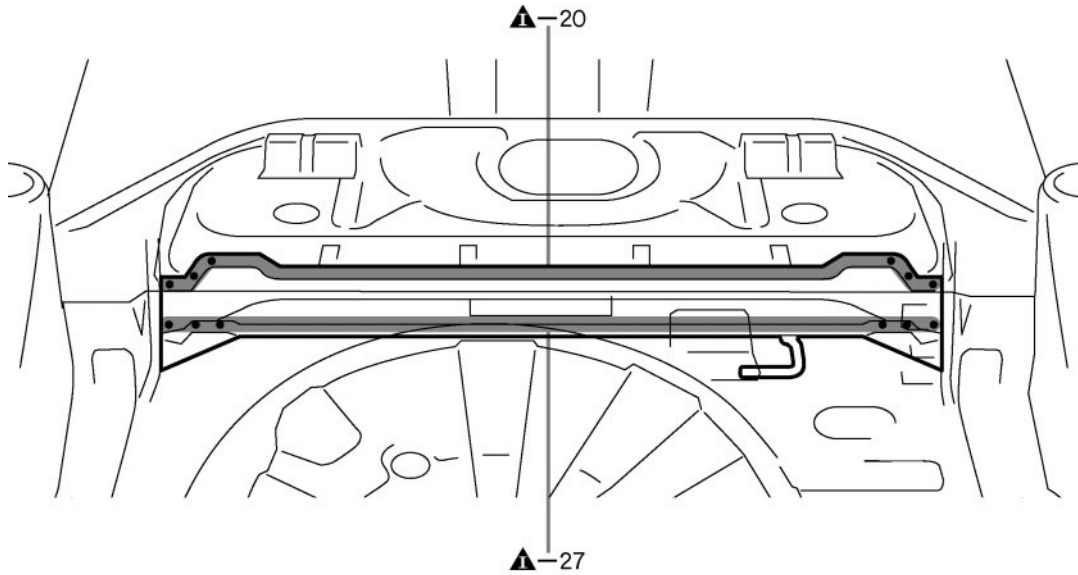

F15658

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

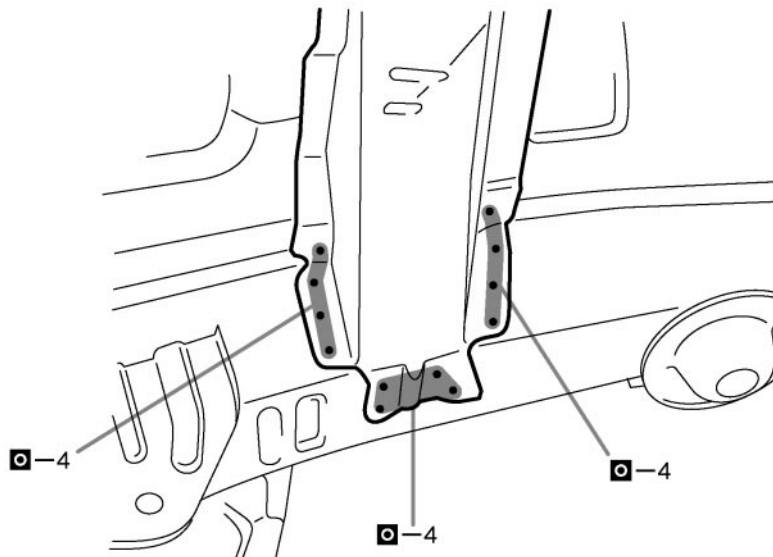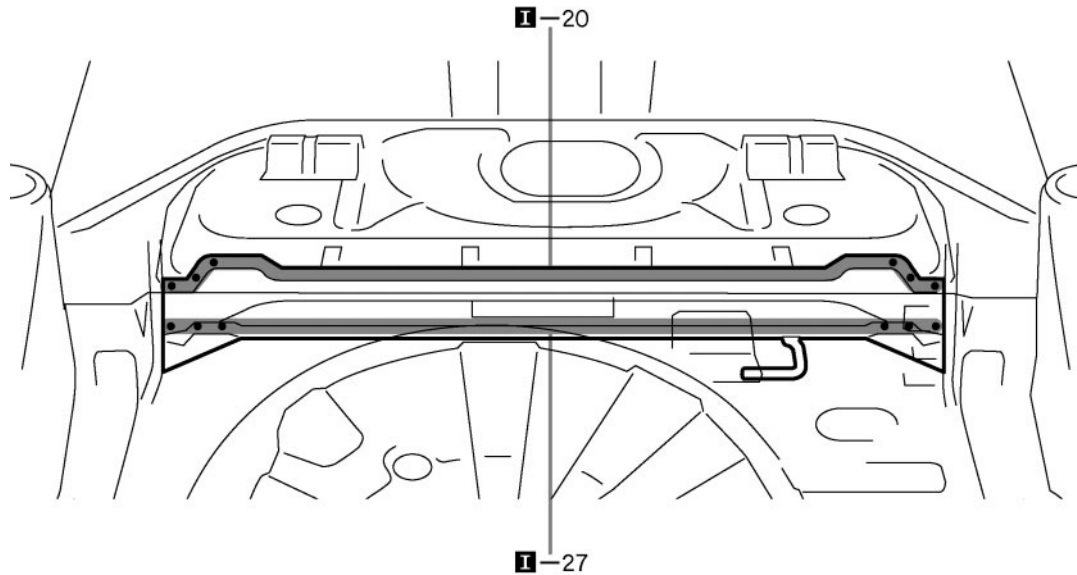

REAR FLOOR SIDE MEMBER (ASSY)


REPLACEMENT

With the rear floor pan, rear floor crossmember No.2 and rear floor side member reinforcement removed.



F15660A

REMOVAL

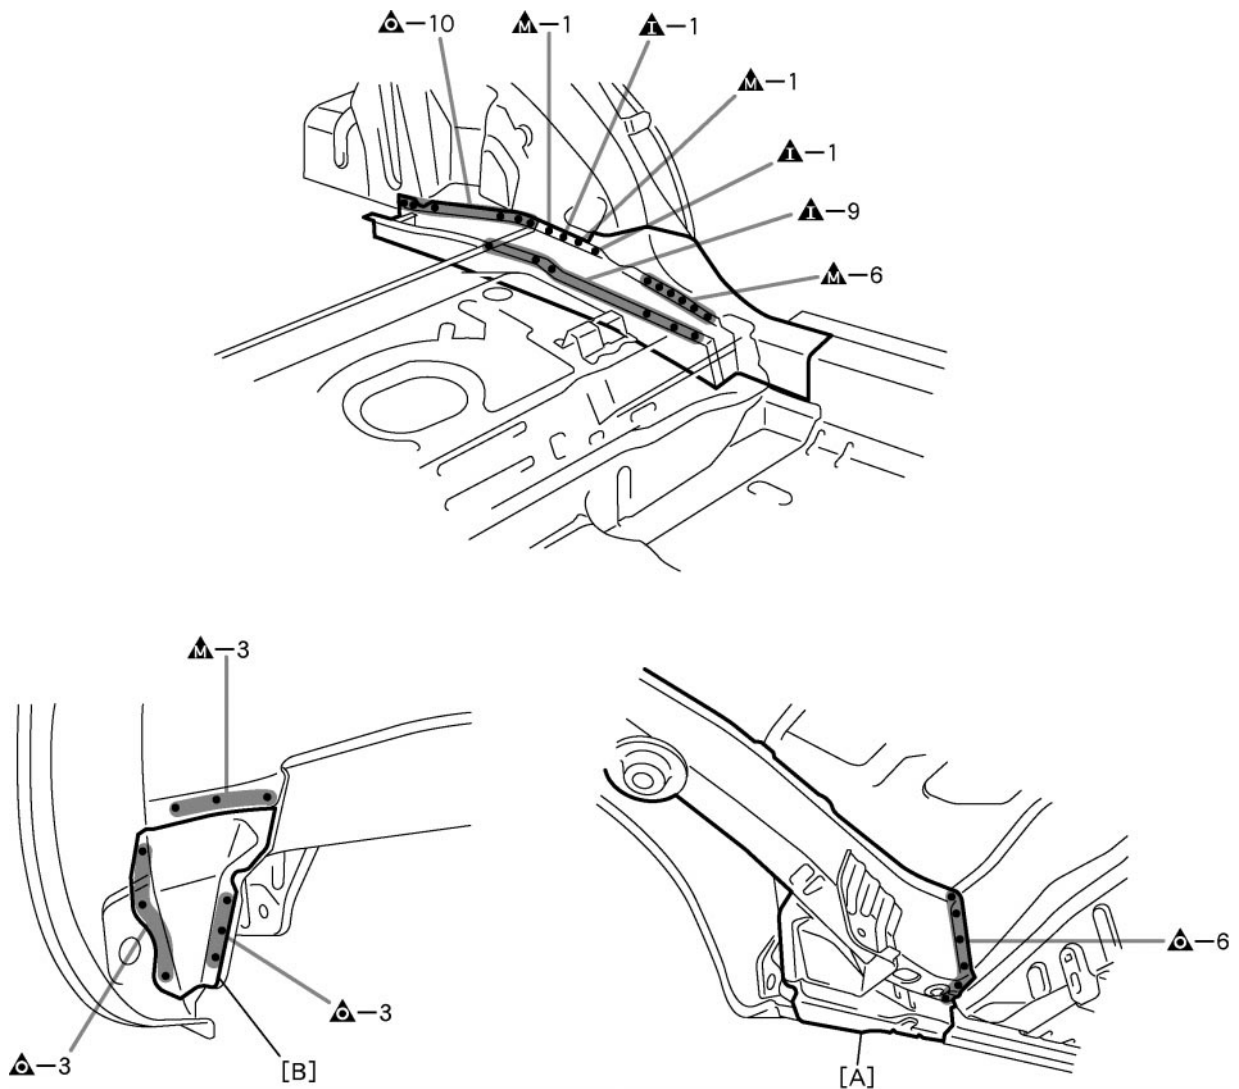


F15660

POINT

- 1 Leave the [A] to the vehicle.
- 2 [B] and [C] are reused.

PART NAME

- [A] Floor Side Inner Rear Member
- [B] Quarter Wheel Housing Front Gusset

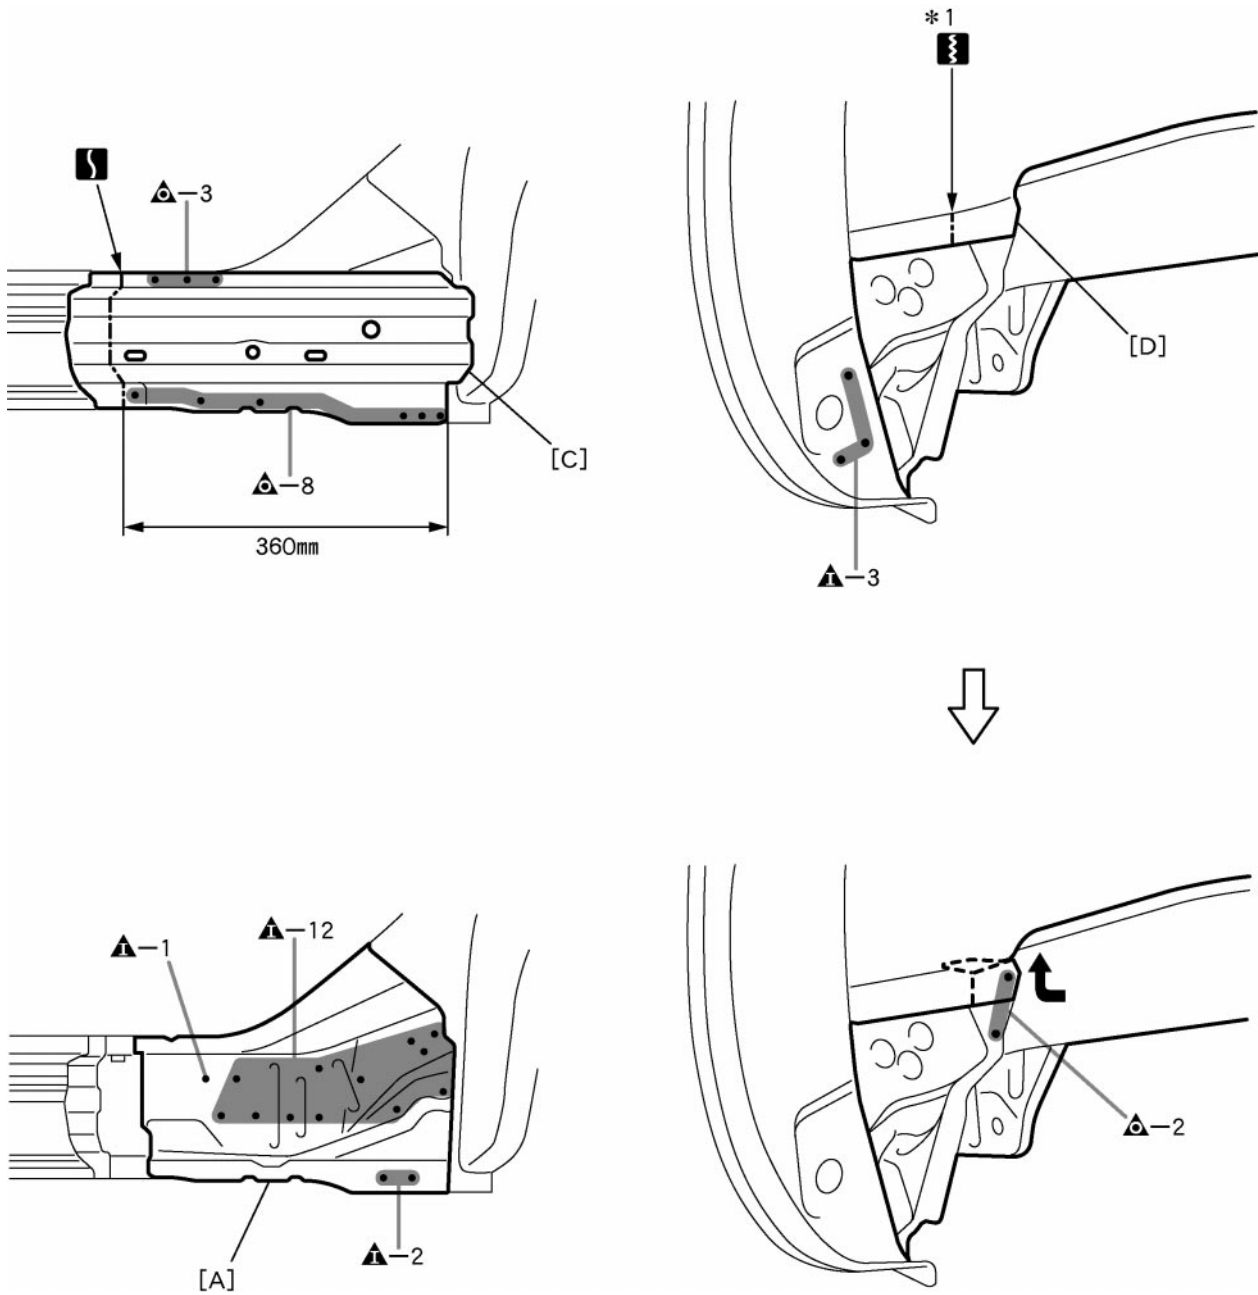

F15661

POINT

1 *1: Make an incision in the [D] and bend it upward.


PART NAME

[A] Floor Side Inner Rear Member [C] Rocker Outer Reinforcement
 [D] Quarter Wheel Housing Inner Panel

360mm (14.17in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

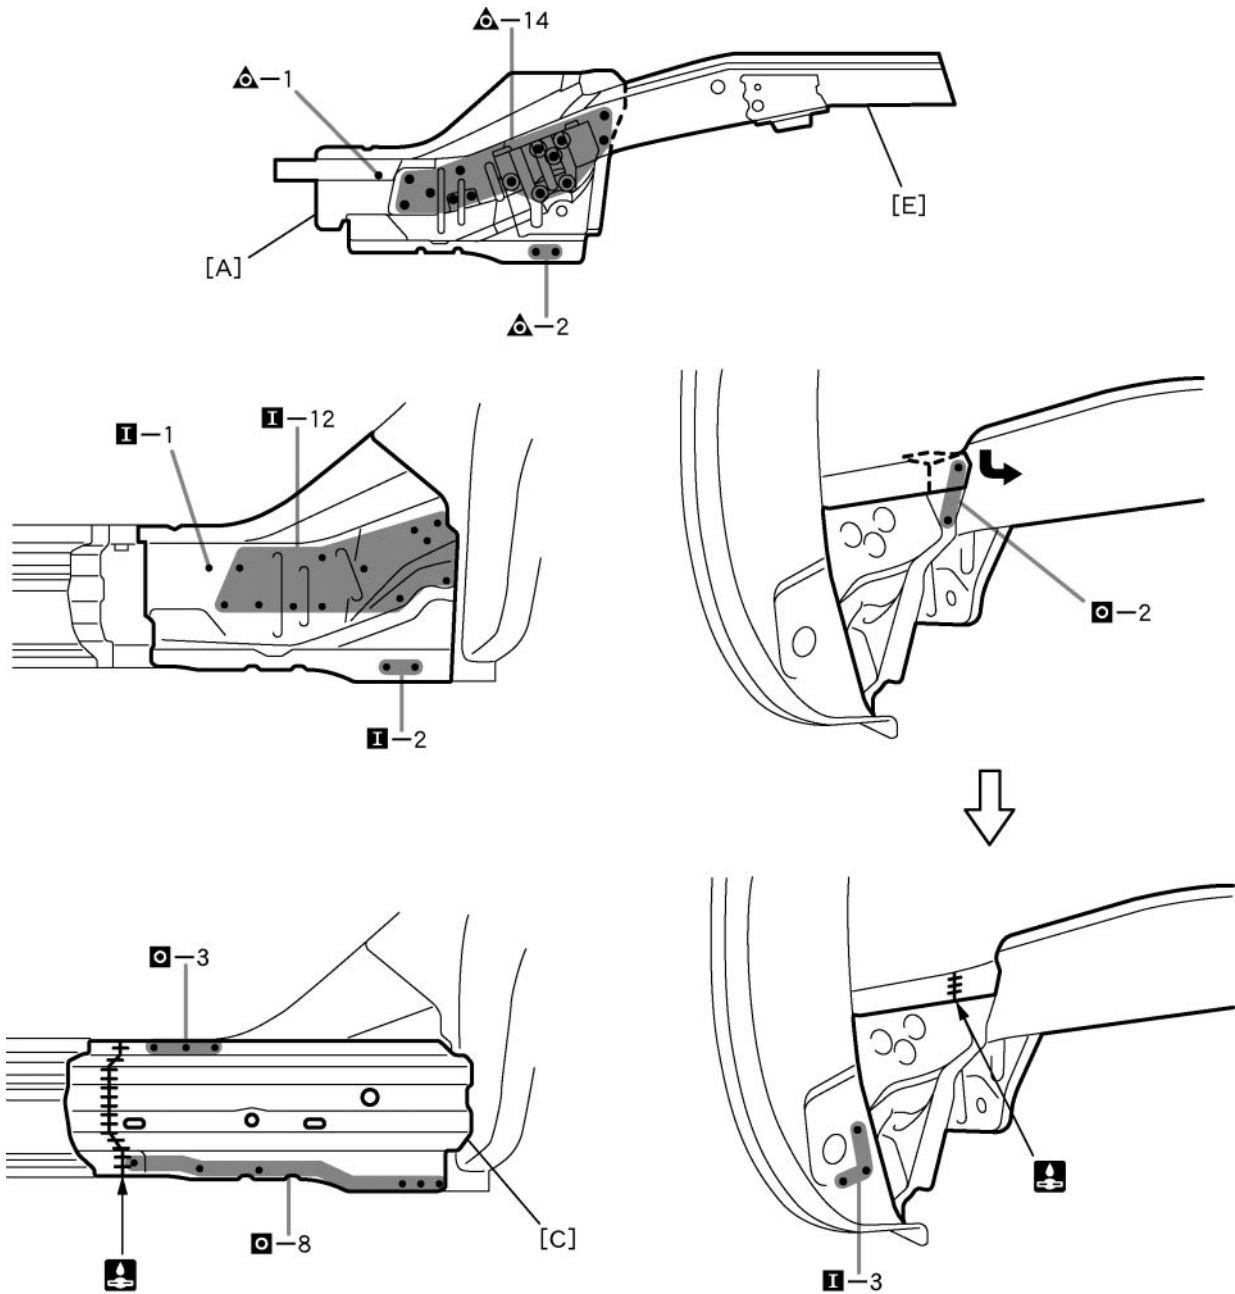




F15662

POINT

1 Remove the [A] from the [E] before the installation.

PART NAME

[A] Floor Side Inner Rear Member [C] Rocker Outer Reinforcement
 [E] Rear Floor Side Member

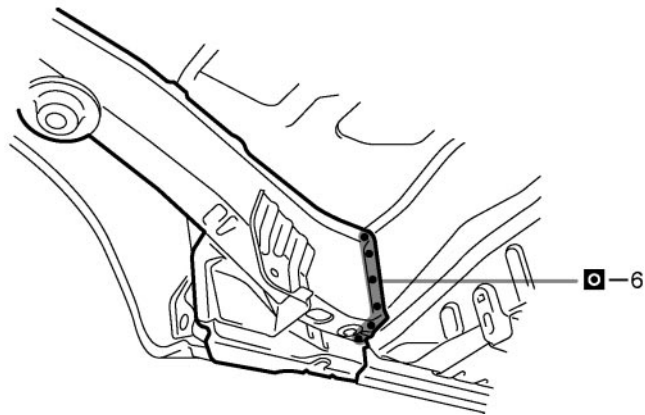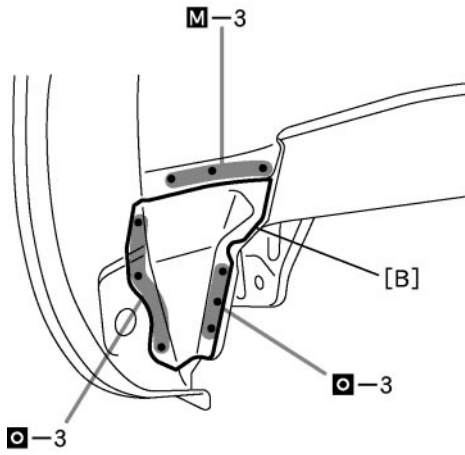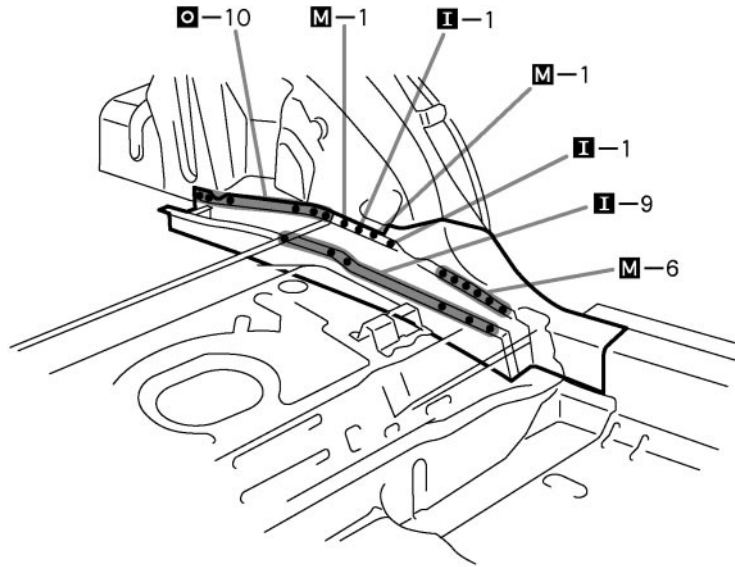


PART NAME

[B] Quarter Wheel Housing Front Gusset

REAR FLOOR NO.5 CROSSMEMBER (CUT-H)


REPLACEMENT

With the body lower back panel removed.

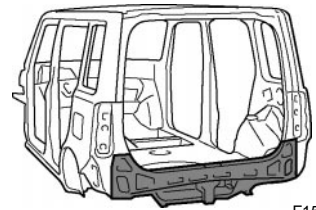

F15648A

REMOVAL

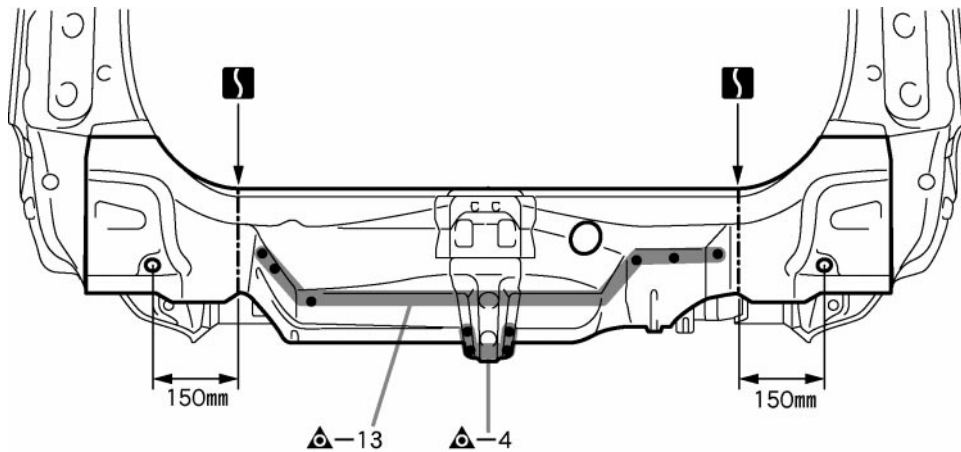


F15648

150mm (5.90in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

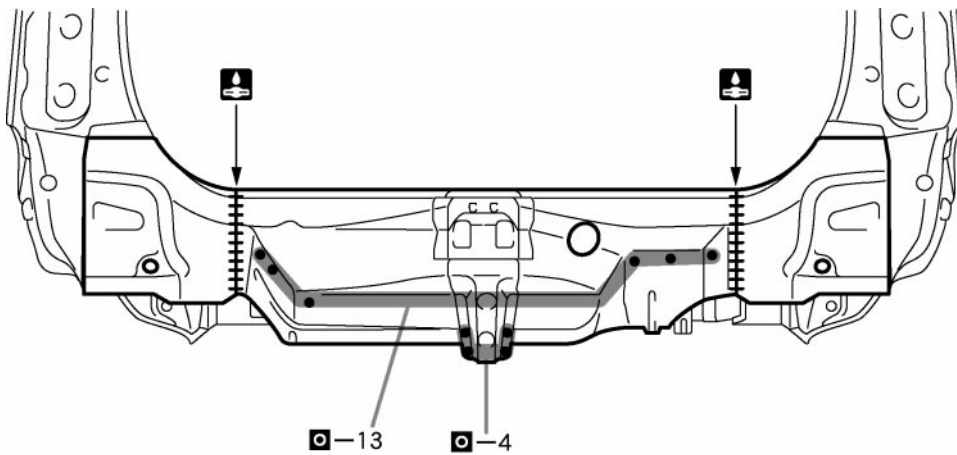

F15649

POINT

- 1 Inspect the fitting of the back door and rear combination light, etc., before welding, since this affects the appearance of the finish.







ROCKER OUTER PANEL (CUT)

REPLACEMENT



F15631A

REMOVAL

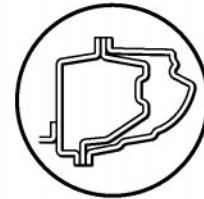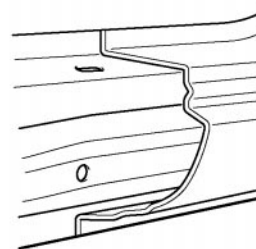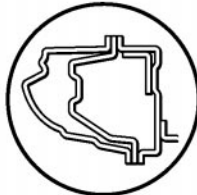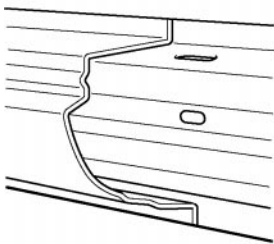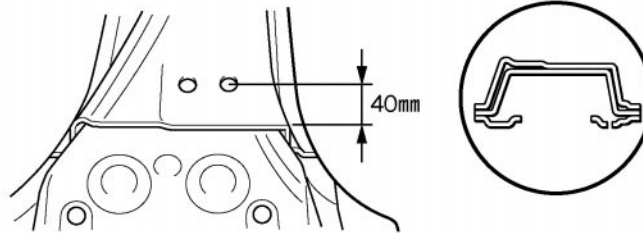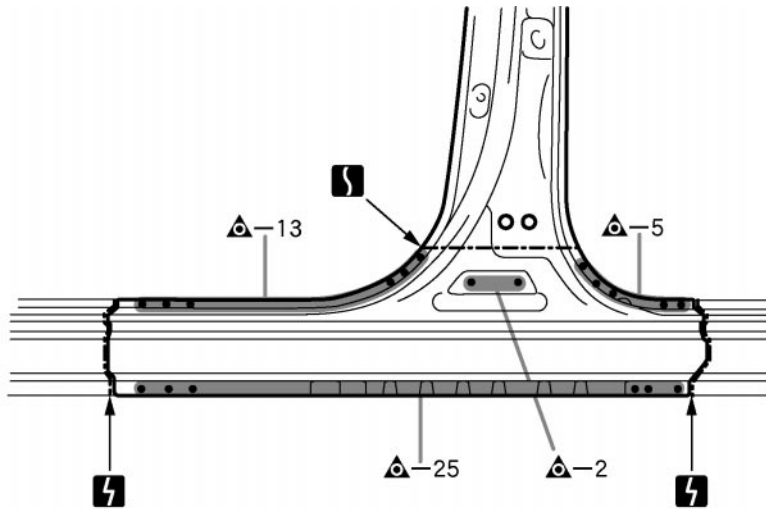


F15631

40mm (1.57in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

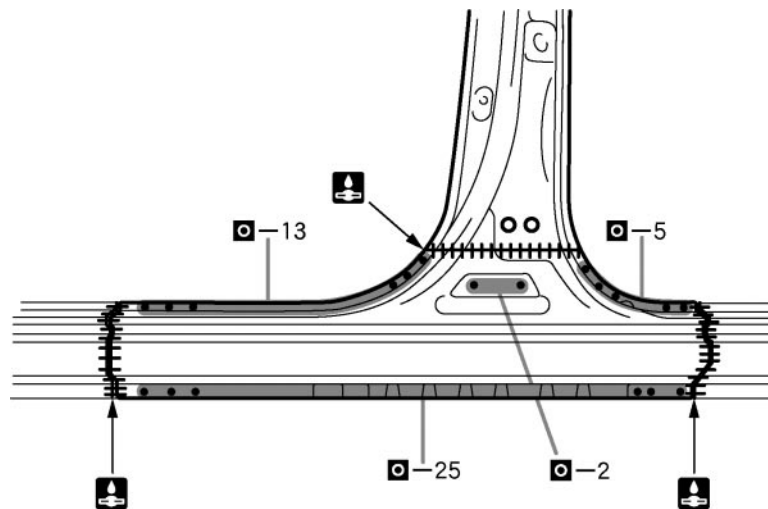

F15632

POINT

- 1 Inspect the fitting of the front door and rear door, etc., before welding, since this affects the appearance of the finish.



ROCKER OUTER PANEL (CUT-P)

REPLACEMENT



F15629-2A

REMOVAL

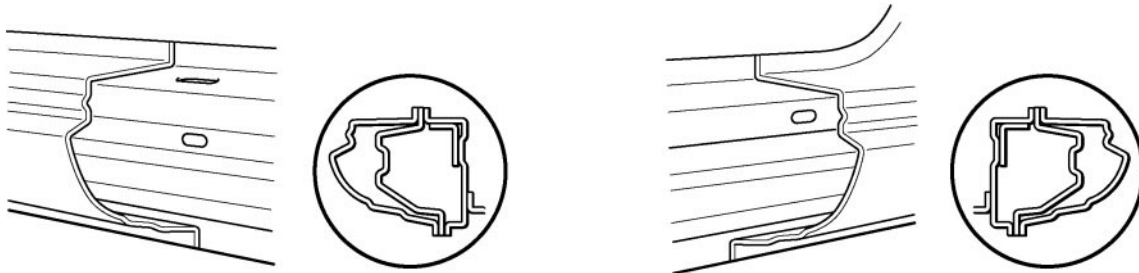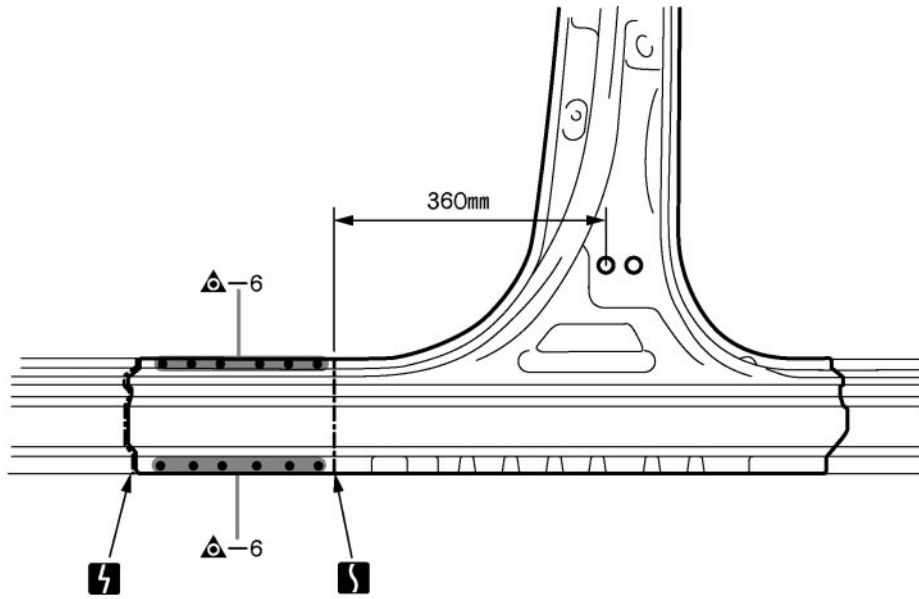


F15629-2

360mm (14.17in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

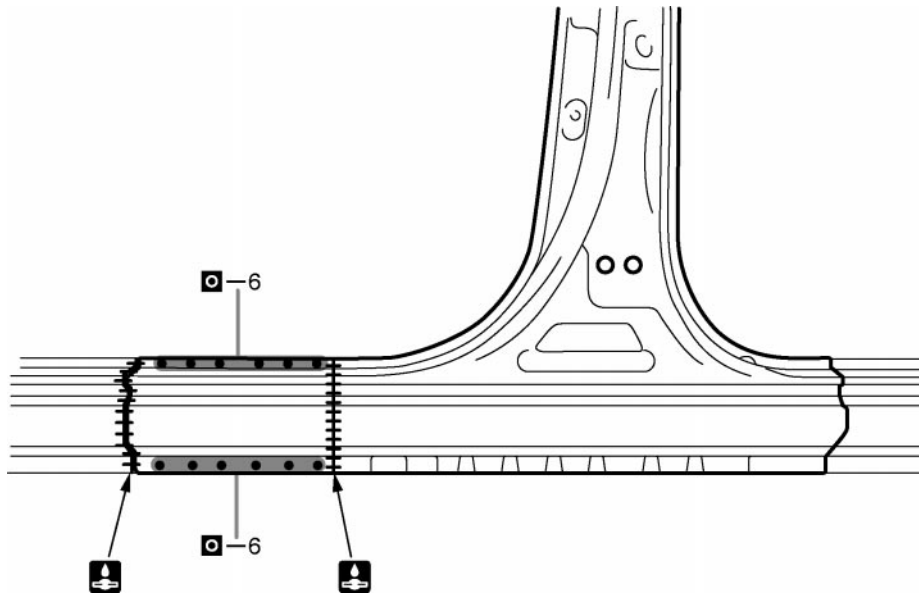

F15630

POINT

- 1 Inspect the fitting the front door, etc., before welding, since this affects the appearance of the finish.


ROOF PANEL (ASSY)


REPLACEMENT



F15664A



REMOVAL

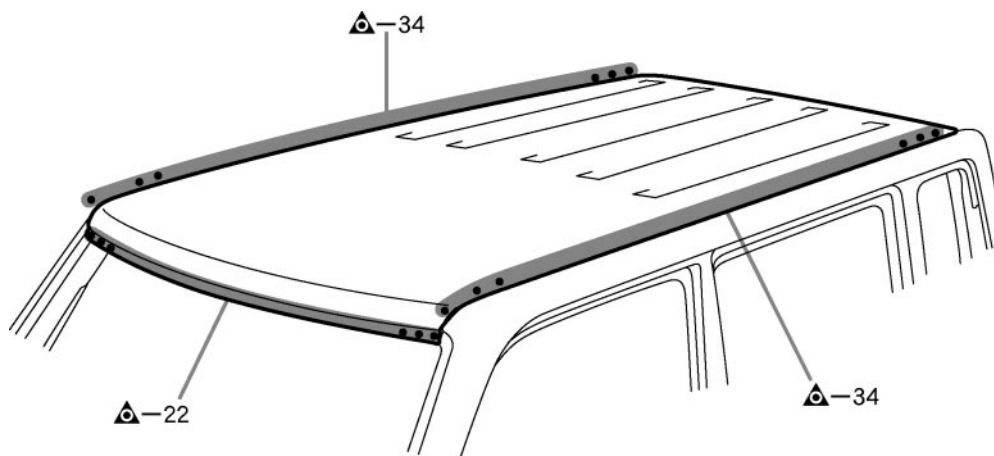

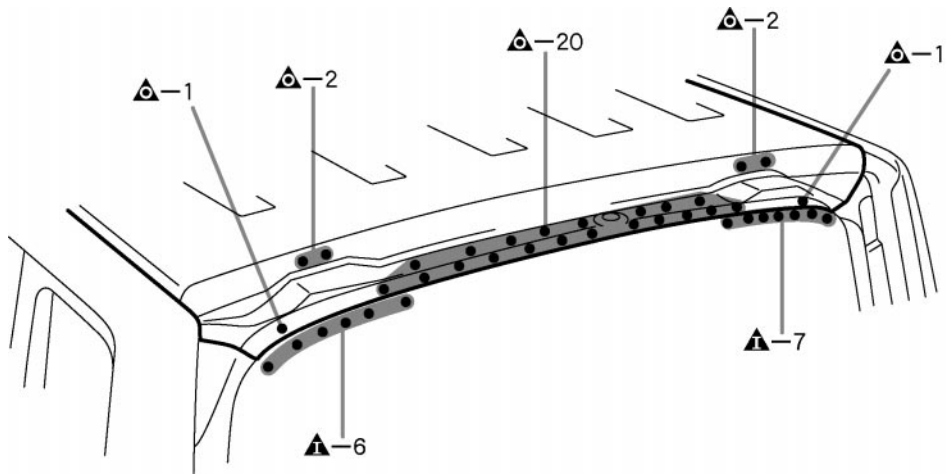

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

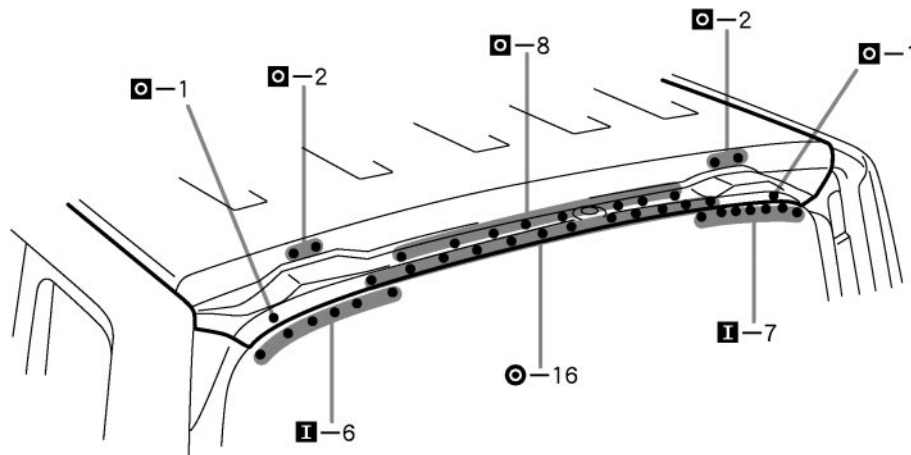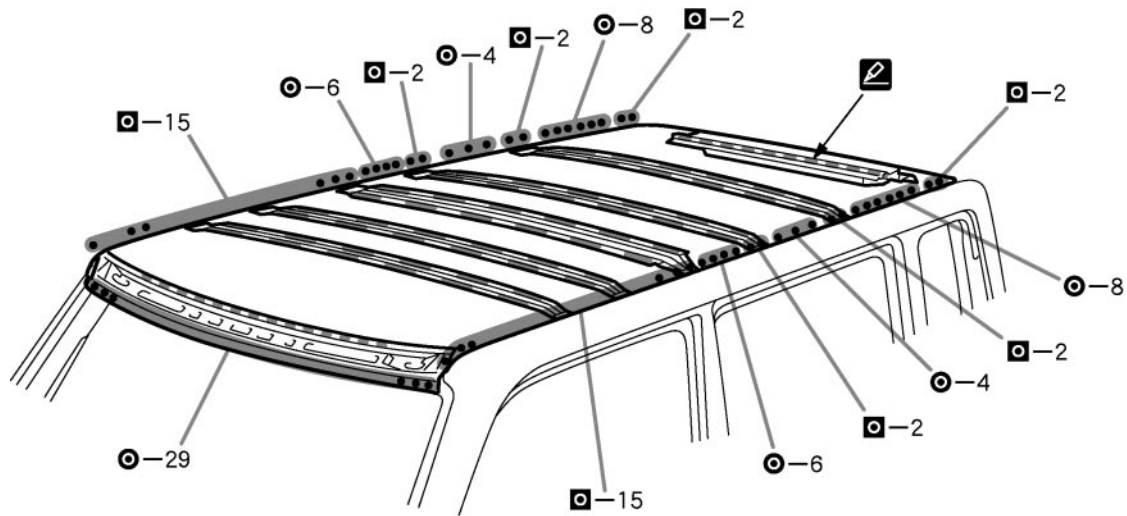

F15666

POINT

- 1 Apply just enough sealer for the new parts to make contact.

POINT

- 1 Before temporarily installing the new parts, apply body sealer to the windshield header panel, roof panel reinforcement and back window frame.


HINT:

- 1) Apply just enough sealer for the new parts to make contact.

ROOF SIDE INNER FRONT EXTENSION (ASSY)



REPLACEMENT

With the back door opening trough removed.

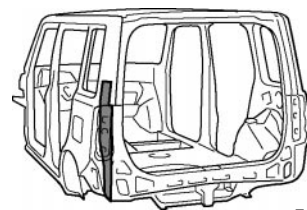

F15644A


REMOVAL

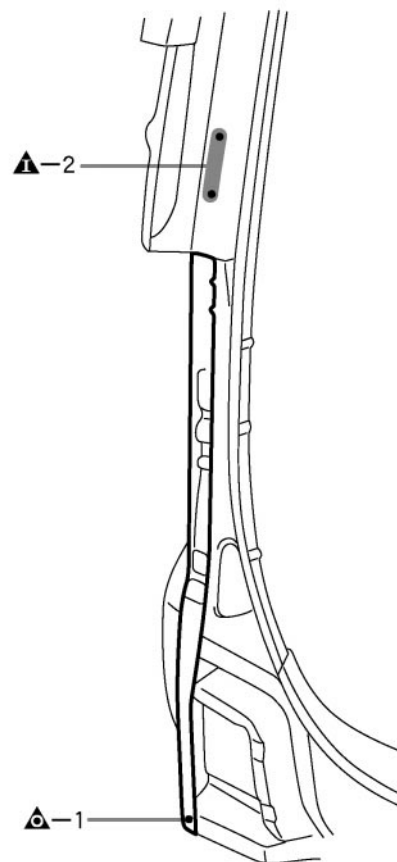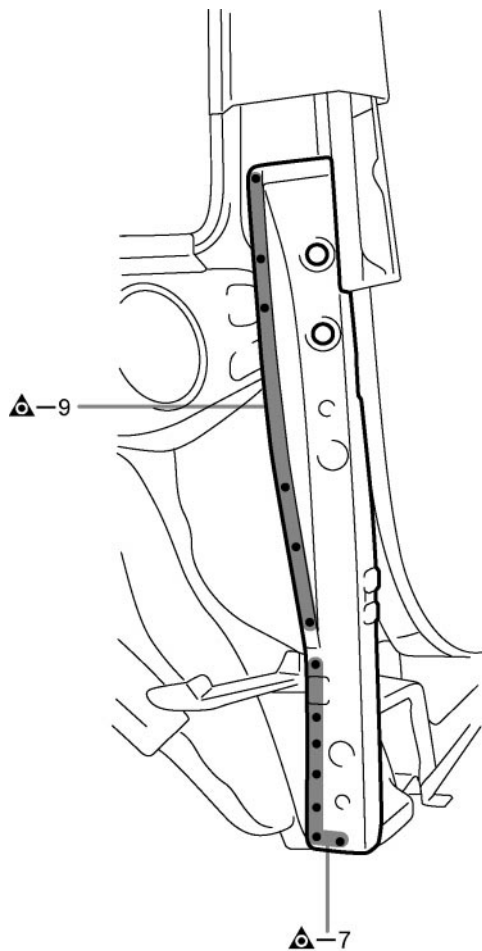

F15644

INSTALLATION


- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

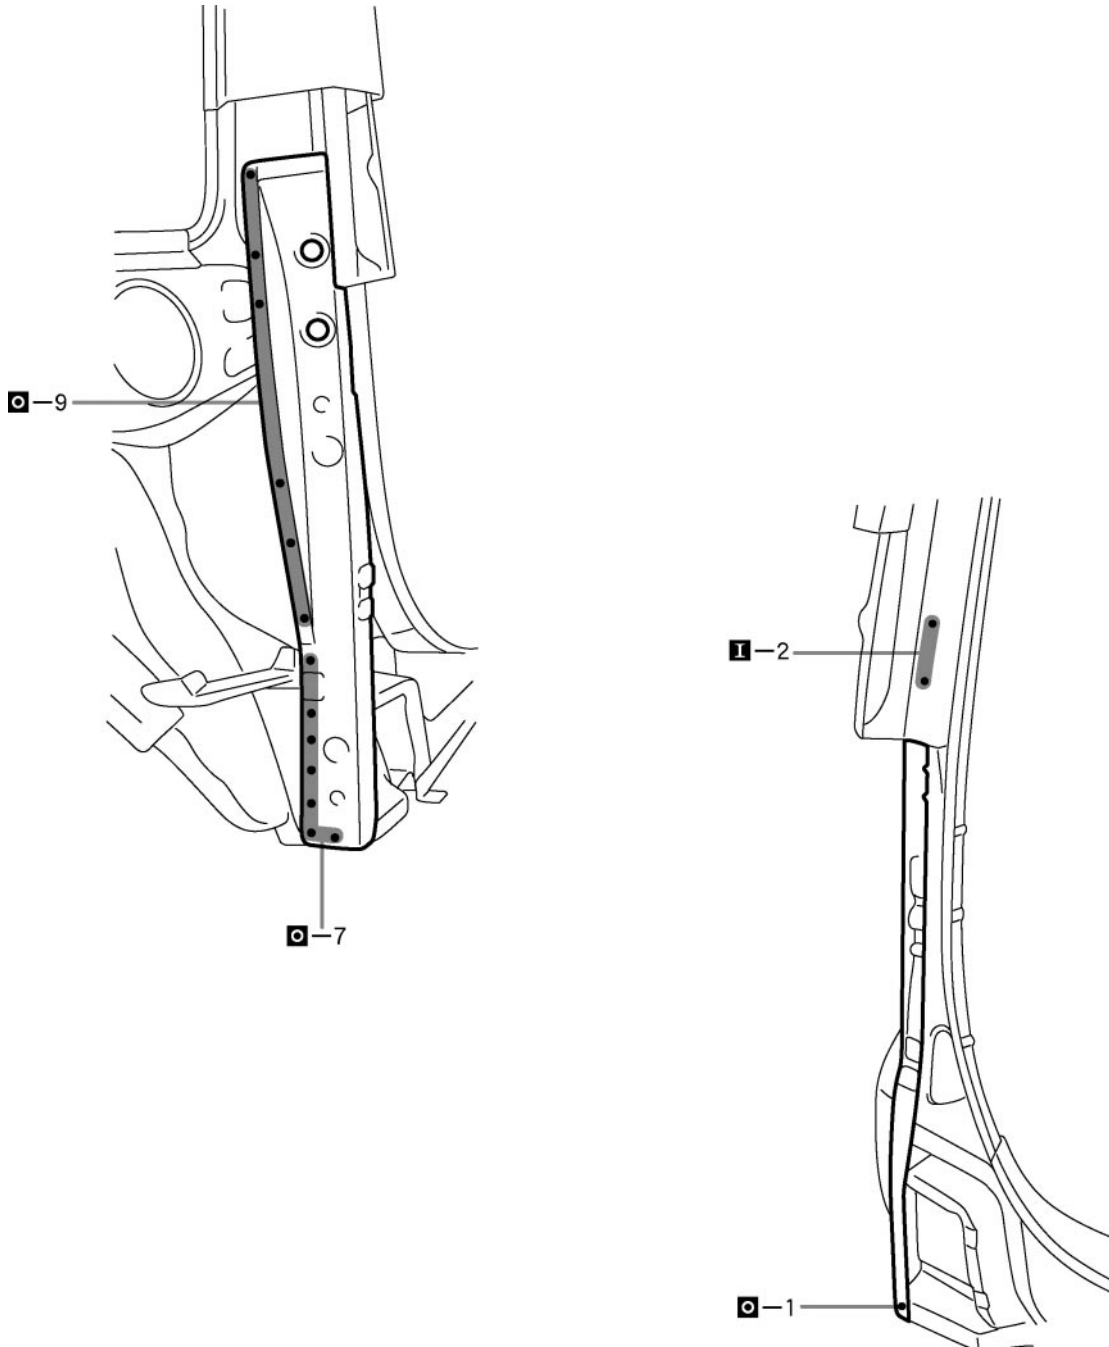

BODY PANEL UNDERCOATING AREAS

HINT:

- 1) First wipe off any dirt, grease or oil with a rag soaked in a grease, wax and silicone remover.
- 2) Cover the surrounding areas with masking paper to avoid coating unnecessary areas. If other areas are accidentally coated, wipe off the coating immediately.
- 3) Apply the first coating of undercoat to all welded areas and panel joints, then apply a second coat over the entire area.
- 4) Do not coat parts which become hot, such as the tailpipe, or moving parts, such as the propeller shaft.
- 5) Besides the locations described below, apply undercoating to all weld points under the body to insure corrosion prevention.
- 6) Be sure to seal the edge of the flange of the member and bracket with undercoating.
- 7) If undercoat is damaged by peeling, cracks, etc., be sure to repair as necessary.
- 8) Before the undercoat apply sealer allowing rust prevention to be attained.

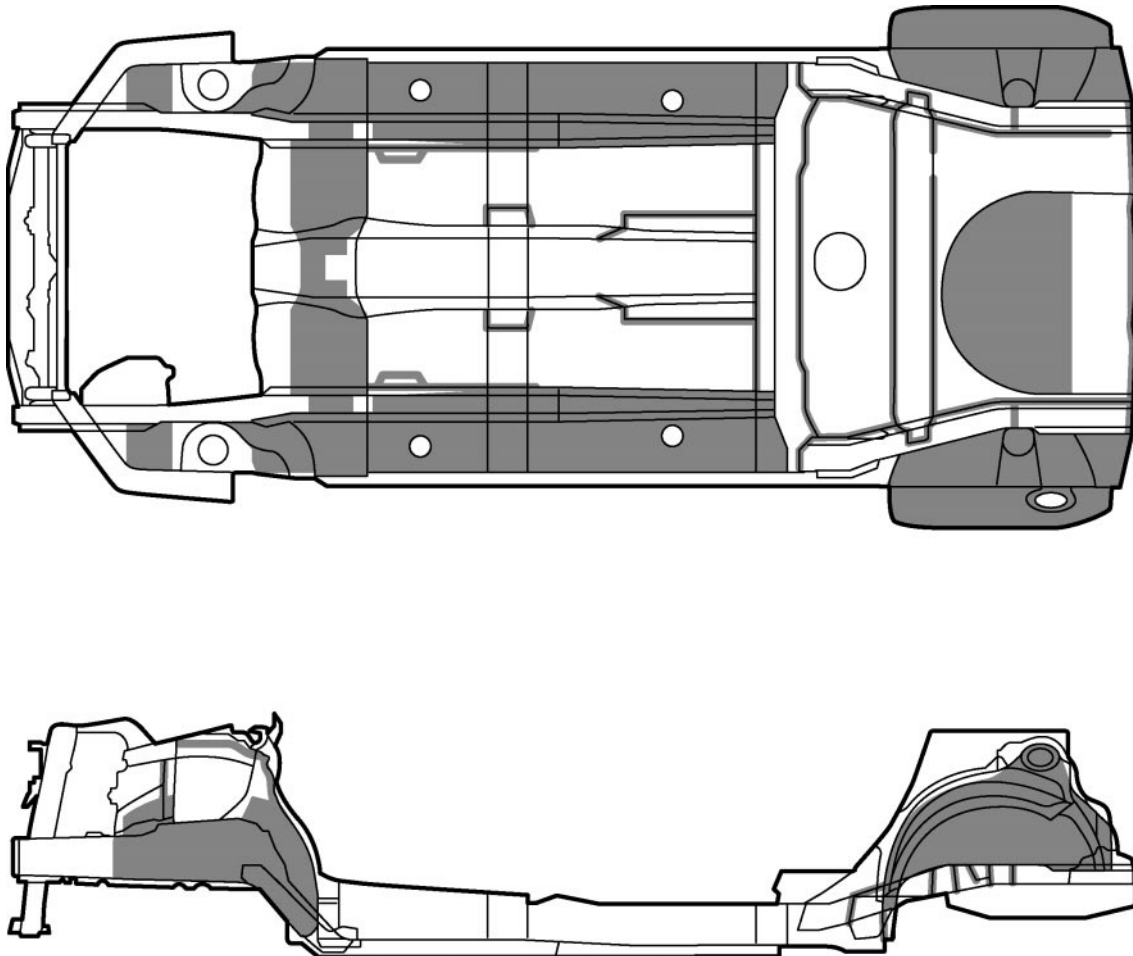

F15672








REFERENCE

Referring to the notes above, undercoating should be applied according to the specifications for your country.

BODY PANEL ANTI-RUST AGENT (WAX) APPLICATION AREAS

HINT:





- 1) Whenever adjusting the doors and hoods, apply anti-rust agent (wax) around the hinges.
- 2) Even if partially repairing a part, apply anti-rust agent (wax) over the entire application area of the part.
- 3) Wipe off the anti-rust agent immediately with a rag soaked in a grease, wax and silicone remover, if accidentally applied to other areas.

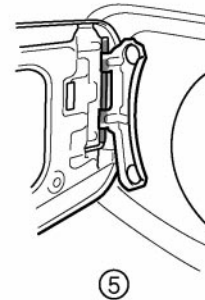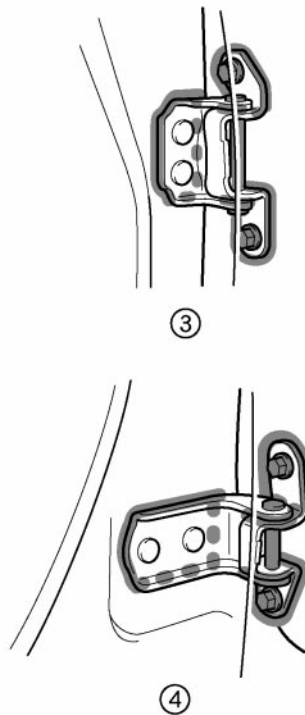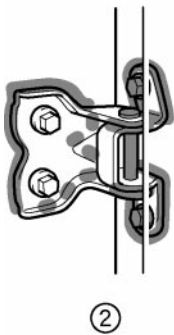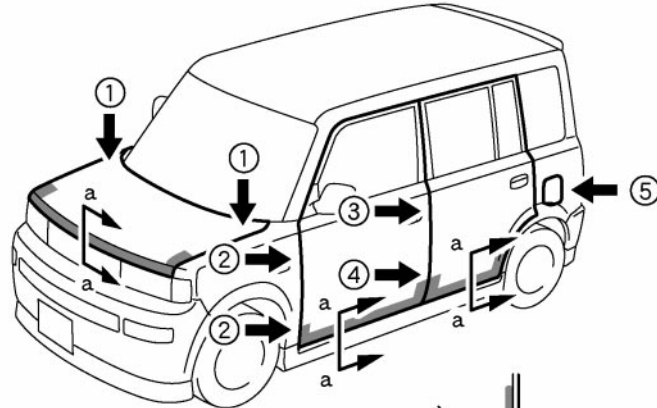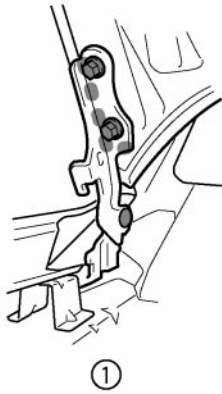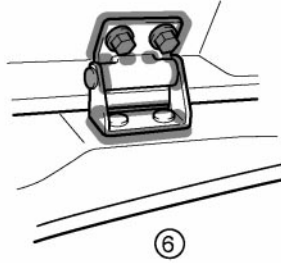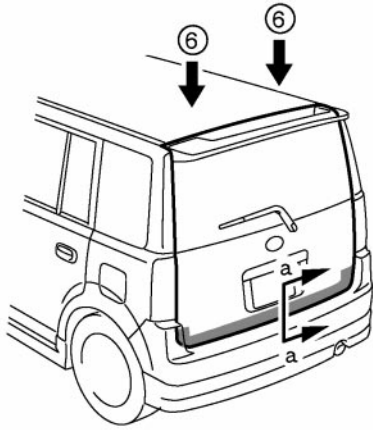

BODY PANEL ANTI-CHIPPING PAINT APPLICATION AREAS

HINT:

- 1) Anti-chipping paint should be applied to some areas before the second coat and to others after the top coat.
- 2) If other areas are accidentally coated, wipe off the paint immediately with a rag soaked in grease, wax and silicone remover.

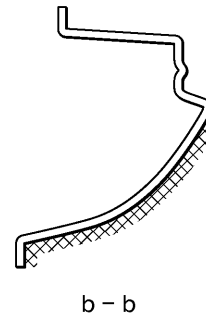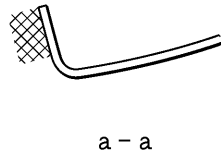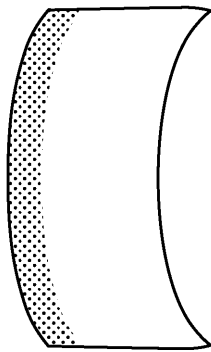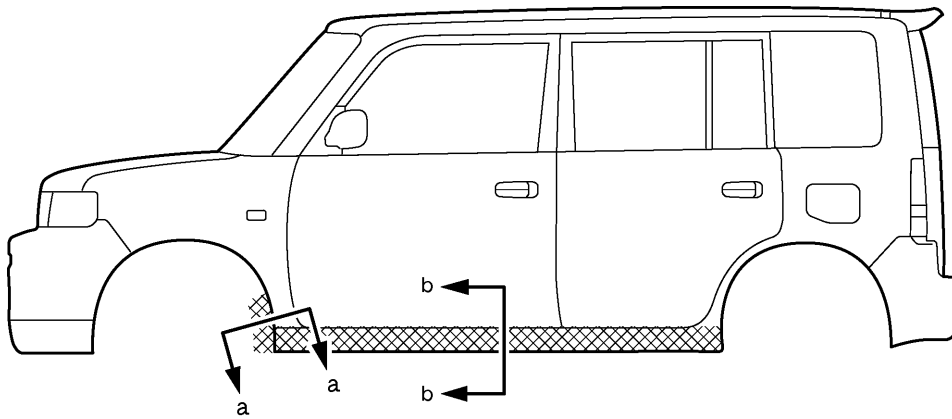

PVC




Urethan

BODY PANEL SEALING AREAS

HINT:

- 1) Prior to applying body sealer, clean the area with a rag soaked in grease, wax and silicone remover.
- 2) If weld-through primer was used, first wipe off any excess and coat with anti-corrosion primer before applying body sealer.
- 3) Wipe off excess body sealer with a rag soaked in a grease, wax and silicone remover.
- 4) If body sealer is damaged by peeling, cracks, etc., be sure to repair as necessary.




Flat Finishing




No Flat Finishing


1. ENGINE COMPARTMENT

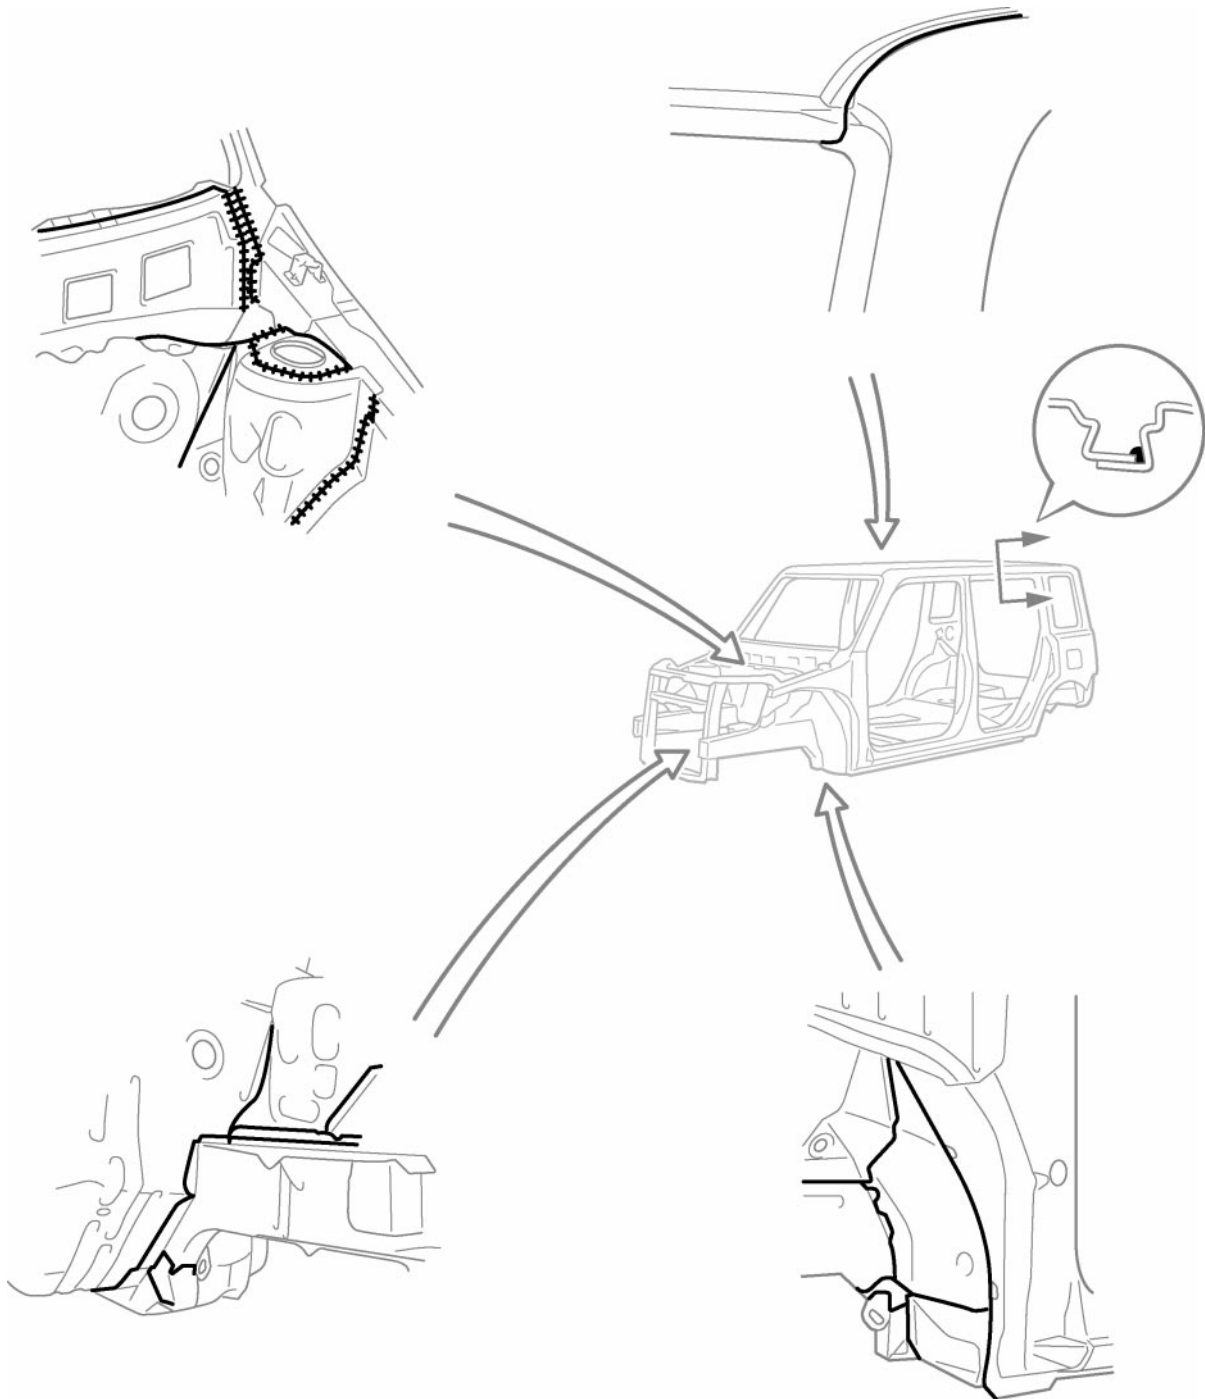



2. INSIDE


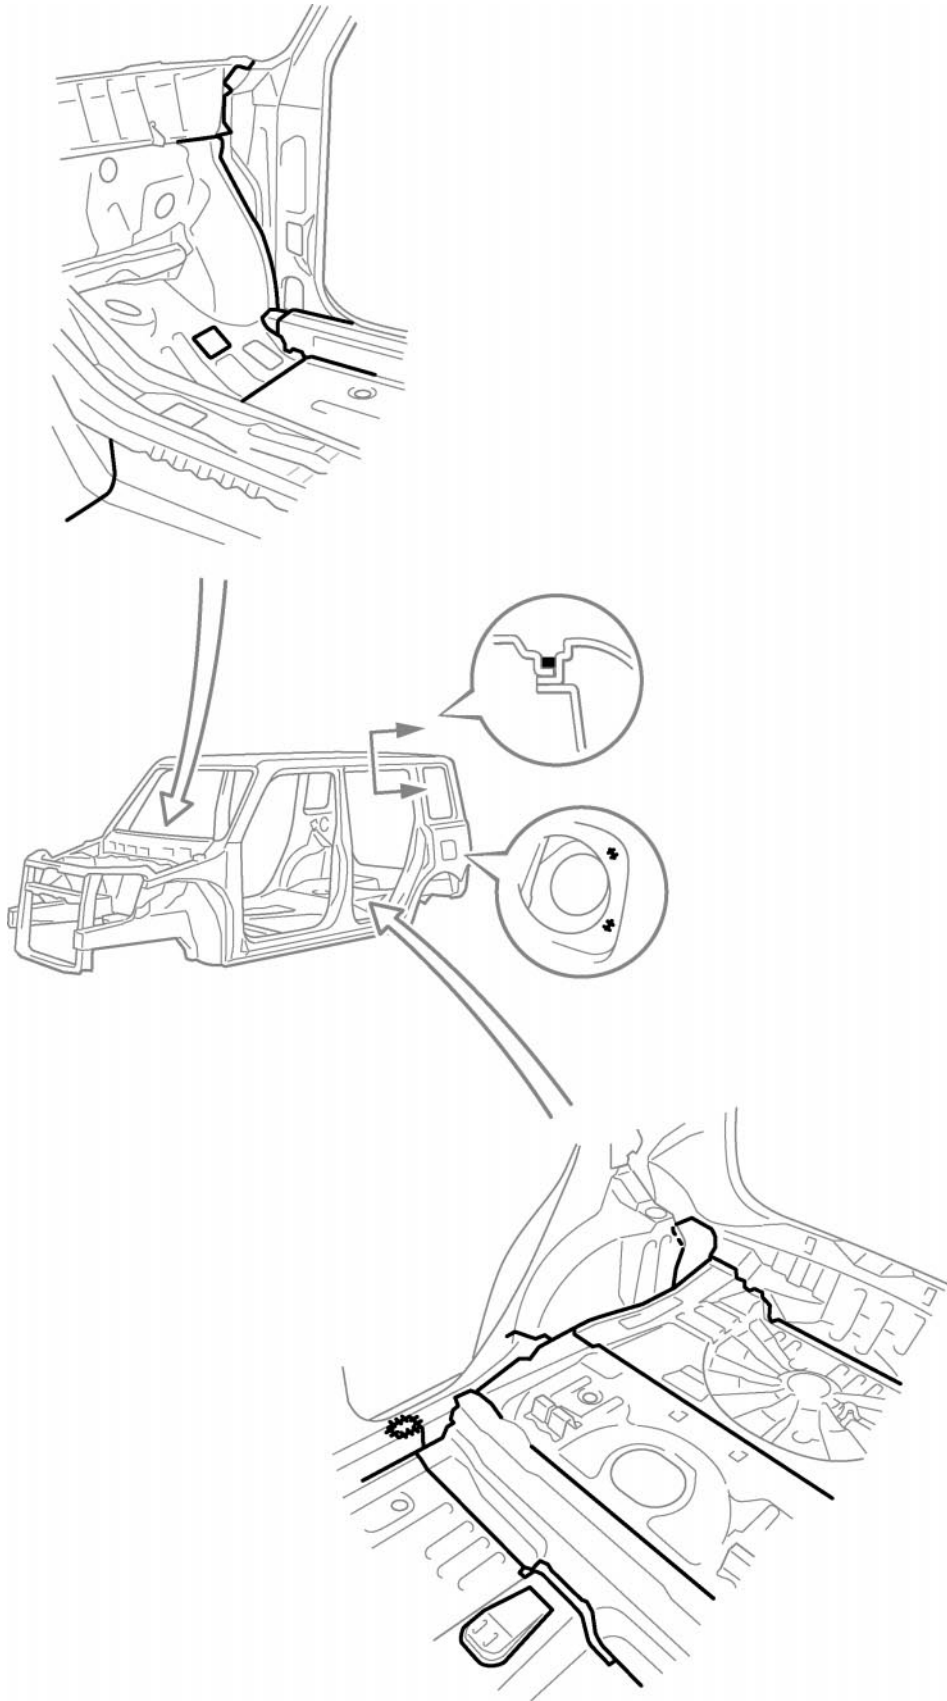


3. DEAR LUGGAGE COMPARTMENT

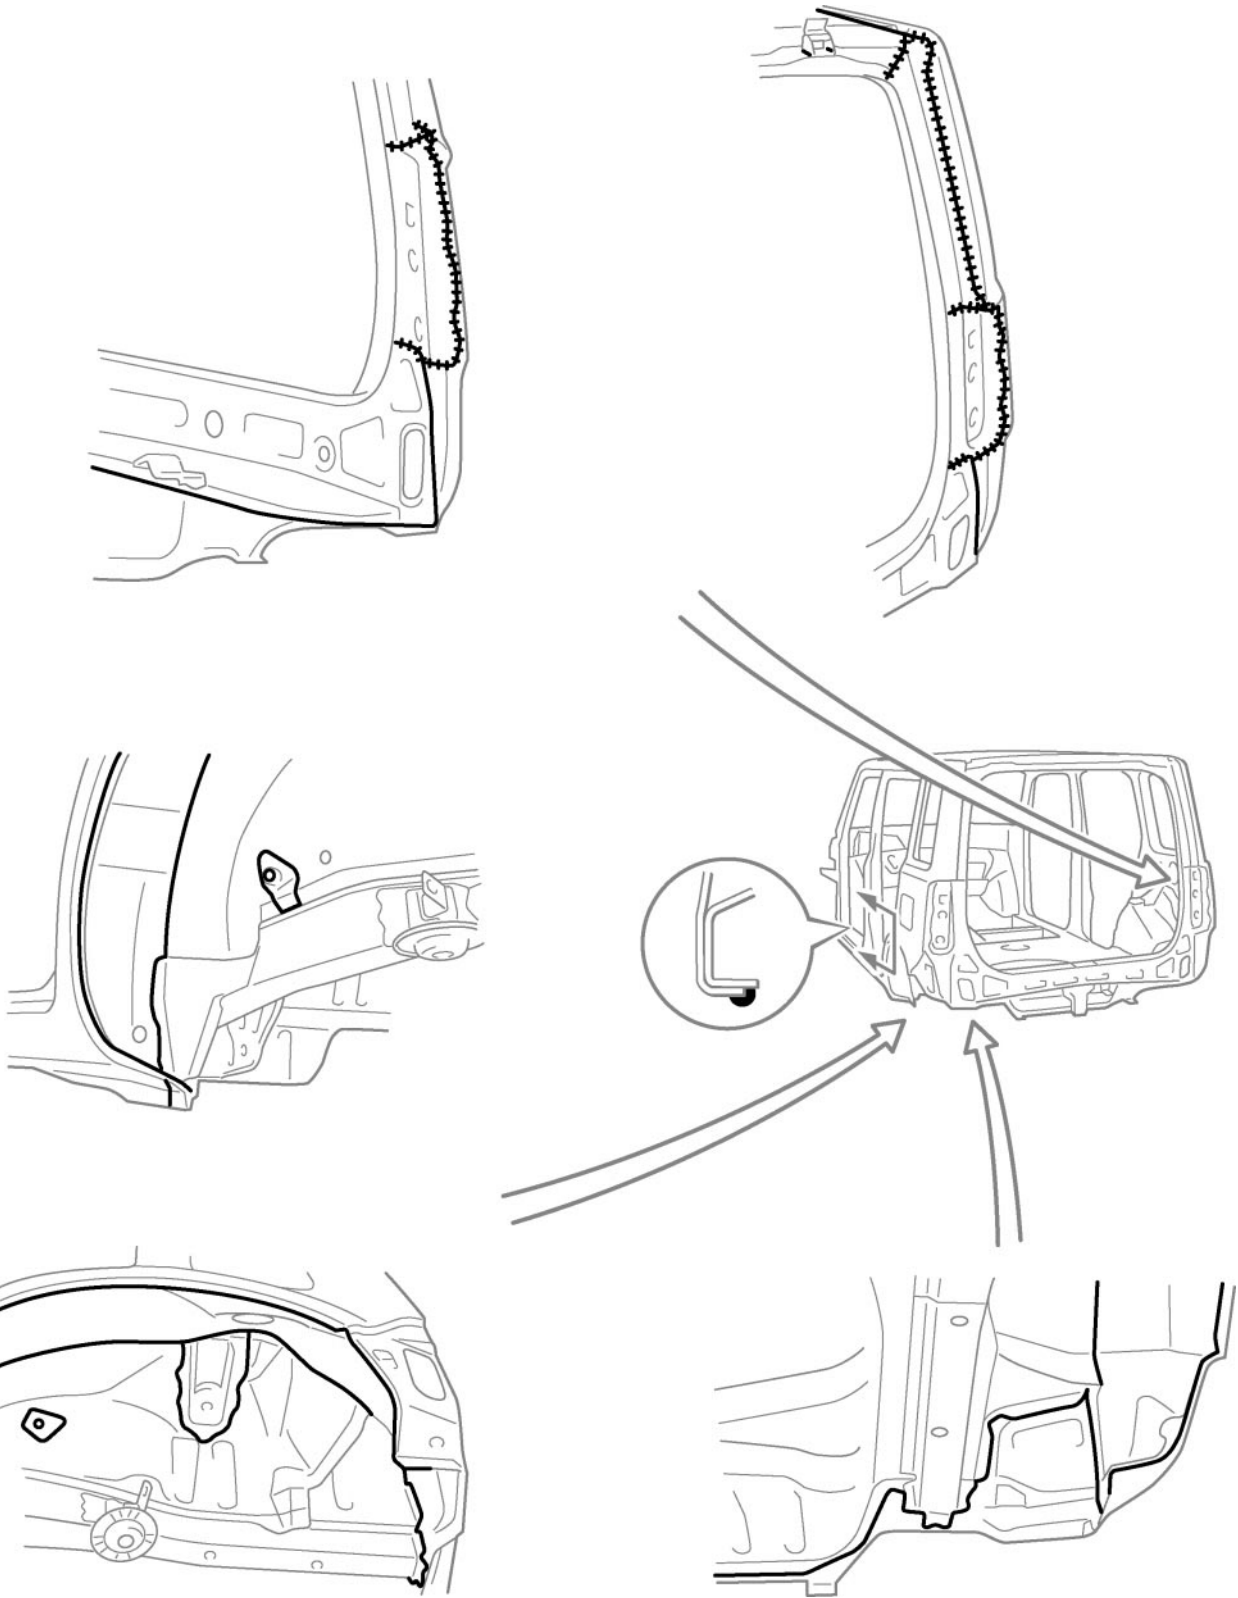

4. DOOR PARTS

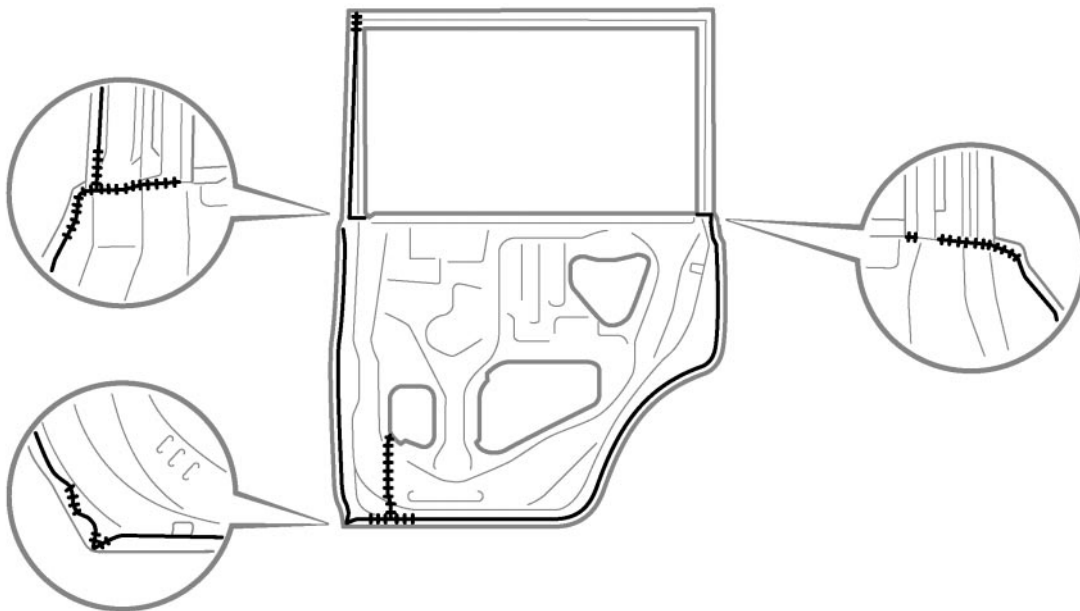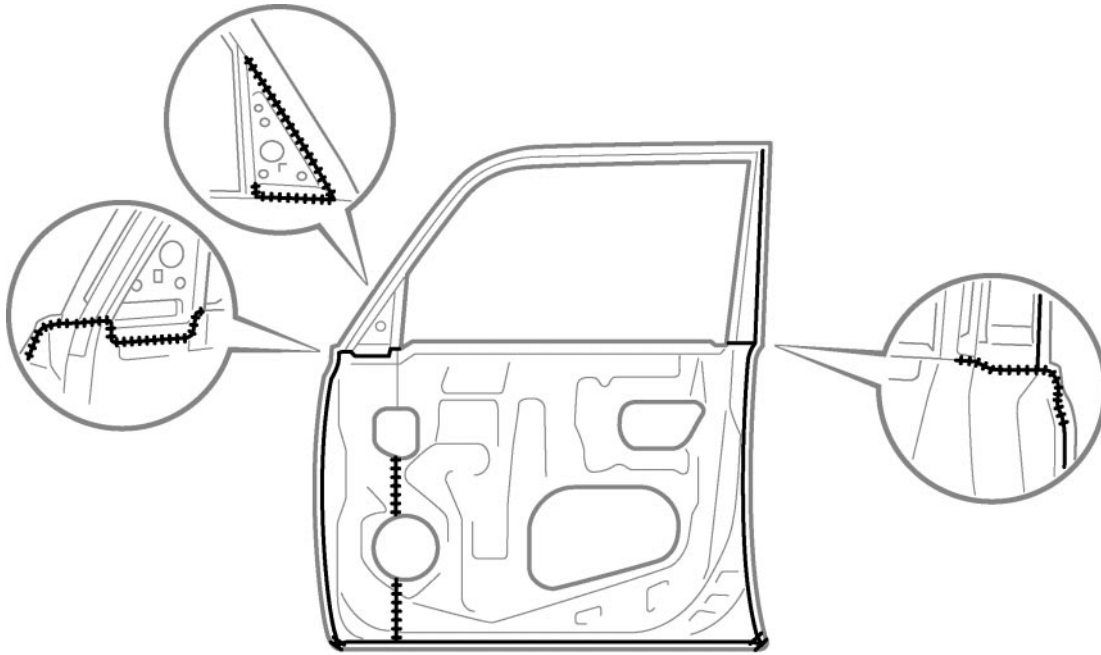

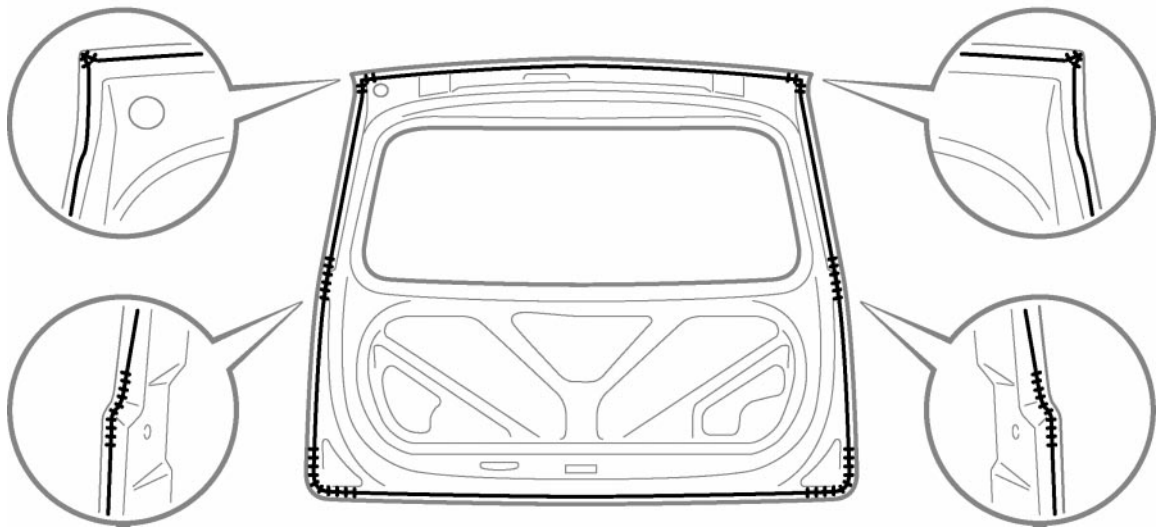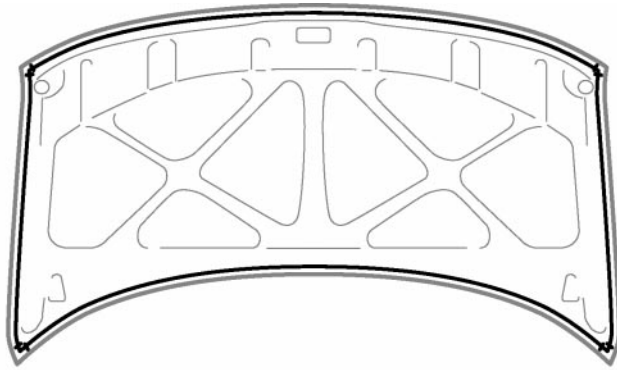


FOAMED MATERIAL APPLICATION AREAS


The sections shown in the figure below are filled with foamed material to provide noise insulation. After repairing these sections or their peripheries, refill with foamed materials

HINT:

- 1) Use the service holes located on the reverse side of the body panel to refill with foamed materials.
- 2) When handling foamed material, follow the directions of the material's manufacturer.

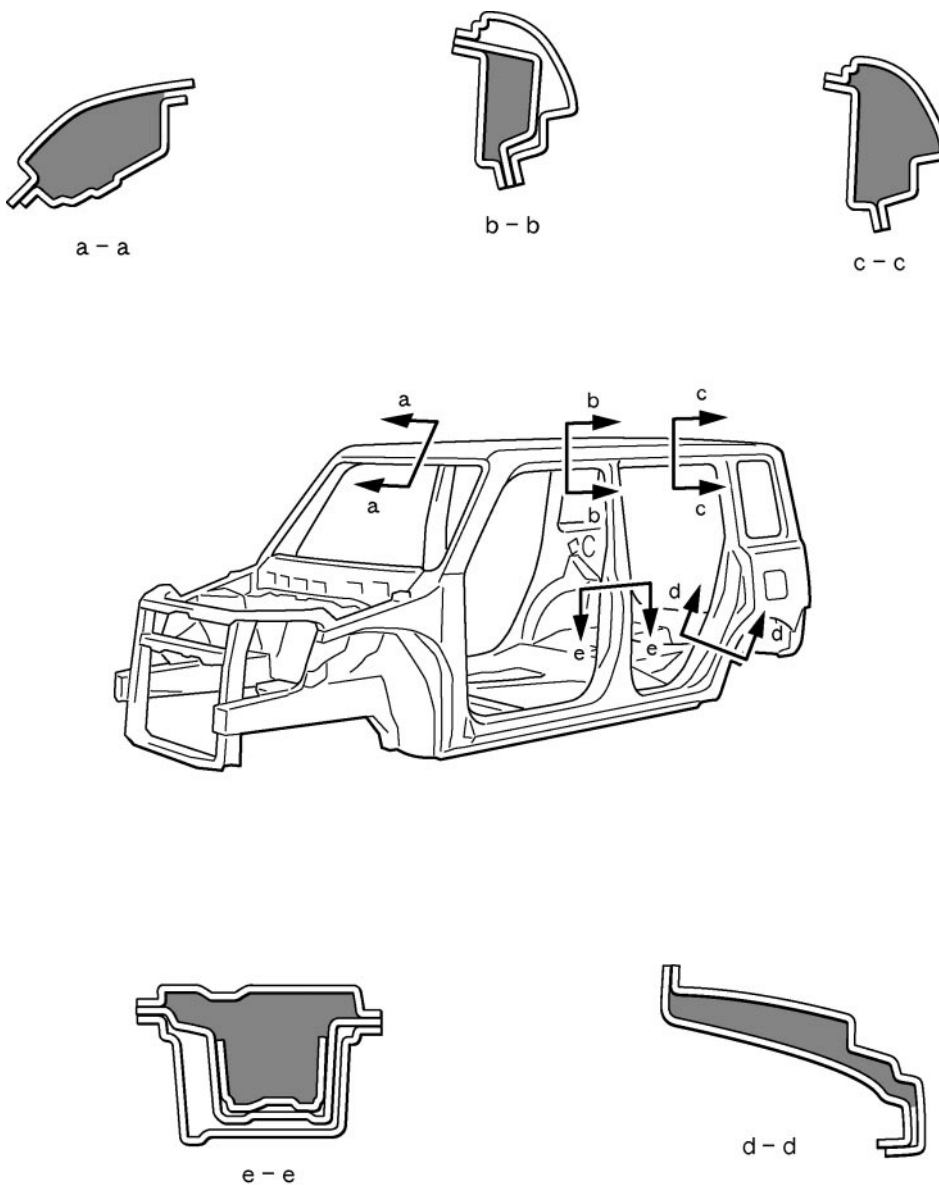


SILENCER SHEET INSTALLATION AREAS

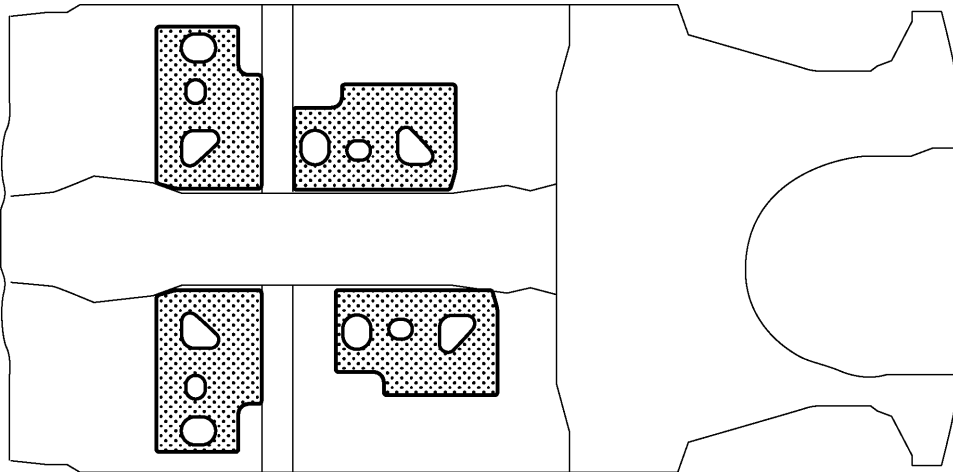

non-adhesive sheet

BODY OPENING AREAS (Side View: Rear)

(Three-Dimensional Distance)

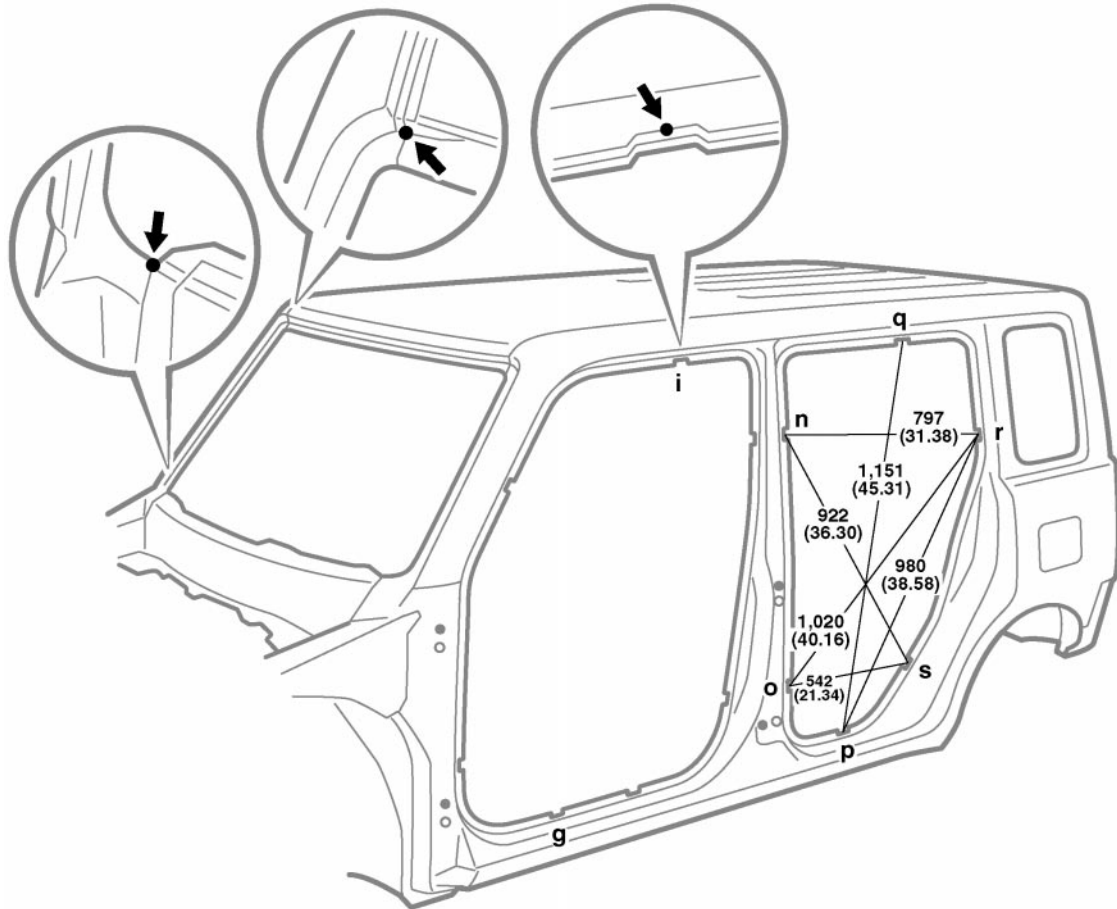

Vehicle Dimensions Left ↔ Right

N-n	O-o	P-p	Q-q	R-r	S-s
1,344 (52.91)	1,362 (53.62)	1,365 (53.74)	1,240 (48.82)	1,355 (53.35)	1,362 (53.62)


G-p or g-P	I-q or i-Q	N-r or n-R	N-s or n-S	O-s or o-S	P-q or p-Q	R-s or r-S
1,710 (67.32)	1,495 (58.86)	1,567 (61.69)	1,638 (64.49)	1,466 (57.72)	1,737 (68.39)	1,537 (60.51)

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
G, g	Rocker panel assembly mark	—	P, p	Rocker panel assembly mark	—
I, i	Roof side assembly mark	—	Q, q	Roof side rail assembly mark	—
N, n	Center body pillar assembly mark	—	R, r	Quarter panel assembly mark	—
O, o	Center body pillar assembly mark	—	S, s	Quarter panel assembly mark	—

BODY OPENING AREAS (Rear View)

(Three-Dimensional Distance)

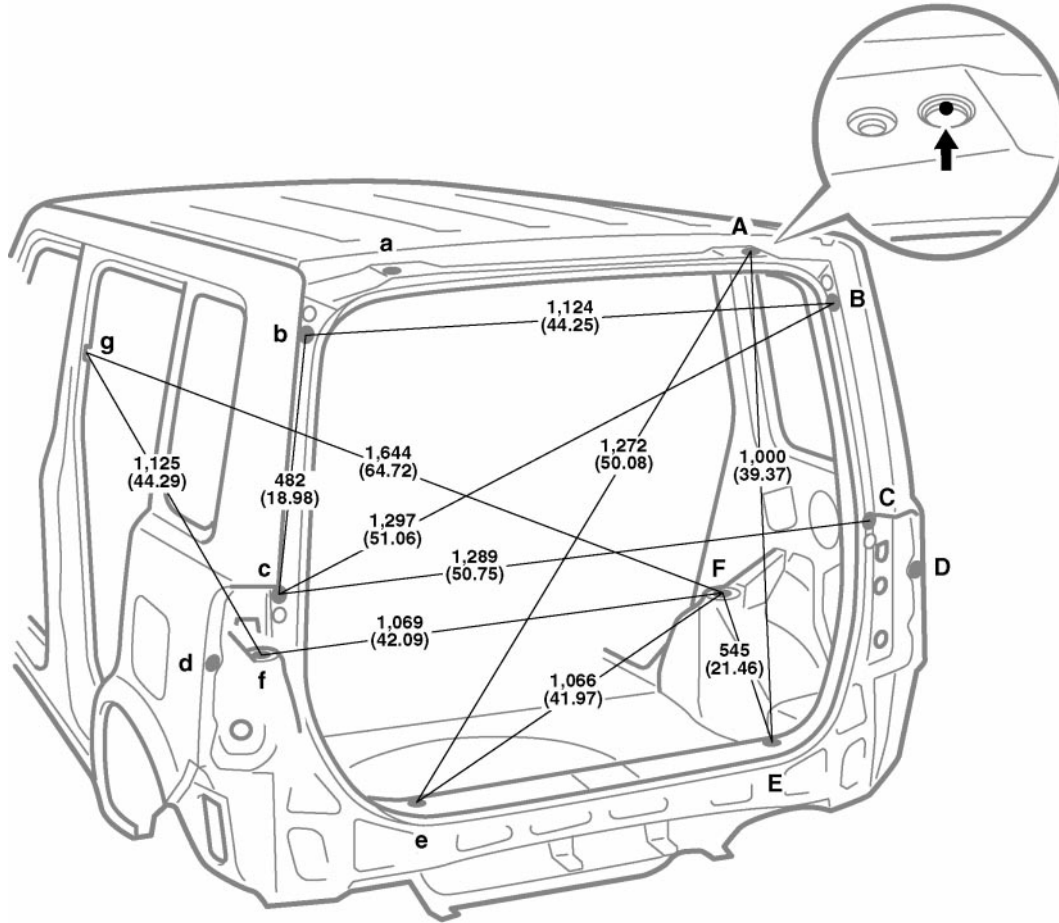

Vehicle Dimensions Left ↔ Right


D-d
1,547 (60.91)

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Back door hinge installation hole-outer	12 (0.47)	E, e	Deck trim rear cover installation hole	8.5 (0.335)
B, b	Back door damper stay installation nut-lower	6 (0.24) nut	F, f	Rear shock absorber installation hole	18 (0.71)
C, c	Back door side stopper installation nut	5 (0.20) nut	G, g	Center body pillar assembly mark	—
D, d	Rear combination light installation hole	10 (0.39)	—	—	—

BODY OPENING AREAS (Side View: Front)

(Three-Dimensional Distance)

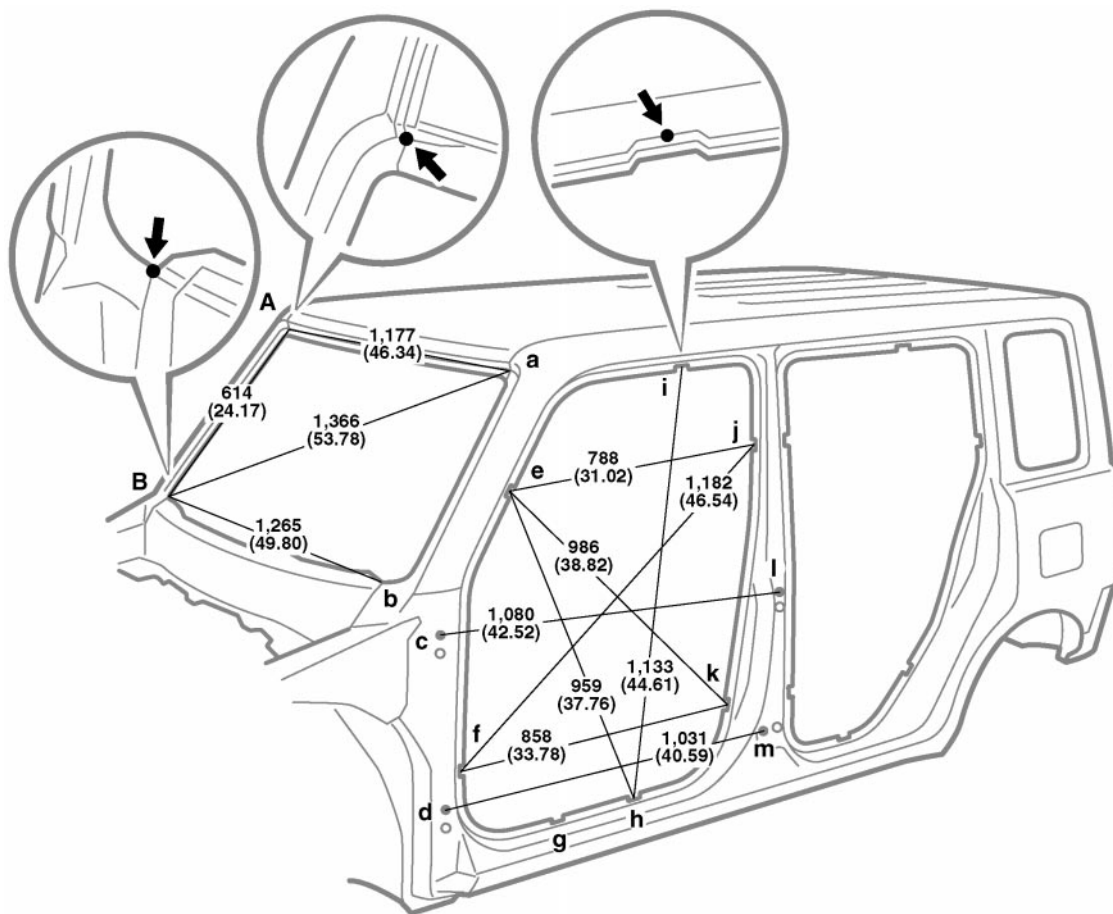

Vehicle Dimensions Left ↔ Right

E-e	F-f	G-g	H-h	I-i	J-j	K-k
1,337 (52.64)	1,358 (53.46)	1,366 (53.78)	1,366 (53.78)	1,247 (49.09)	1,344 (52.91)	1,358 (53.46)
E-f or e-F	E-h or e-H	E-j or e-J	F-j or f-J	F-k or f-K	H-i or h-I	J-k or j-K
1,522 (59.92)	1,657 (65.24)	1,555 (61.22)	1,795 (70.67)	1,607 (63.27)	1,729 (68.07)	1,531 (60.28)




mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Roof panel/Front body pillar adjoining portion	—	H, h	Rocker panel assembly mark	—
B, b	Cowl top inner panel/Front body pillar adjoining portion	—	I, l	Roof side rail assembly mark	—
C, c	Front door hinge installation nut	8 (0.31) nut	J, j	Center body pillar assembly mark	—
D, d	Front door hinge installation nut	8 (0.31) nut	K, k	Center body pillar assembly mark	—
E, e	Front body pillar assembly mark	—	L, l	Rear door hinge installation nut	8 (0.31) nut
F, f	Front body pillar assembly mark	—	M, m	Rear door hinge installation nut	8 (0.31) nut
G, g	Rocker panel assembly mark	—	—	—	—


GENERAL INFORMATION

1. BASIC DIMENSIONS

- (a) There are two types of dimensions in the diagram.
- (1) (Three-dimensional distance)
 - Straight-line distance between the centers of two measuring points.
 - (2) (Two-dimensional distance)
 - Horizontal distance in forward/rearward between the centers of two measuring points.
 - The height from an imaginary standard line.
- (b) In cases in which only one dimension is given, left and right are symmetrical.
- (c) The dimensions in the following drawing indicate actual distance. Therefore, please use the dimensions as a reference.
- (d) The line that connects the places listed below is the imaginary standard line when measuring the height. (The dimensions are printed in the text.)

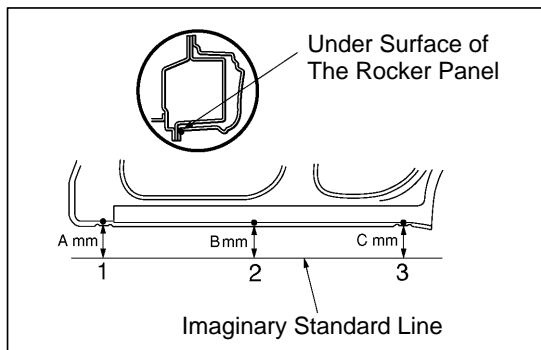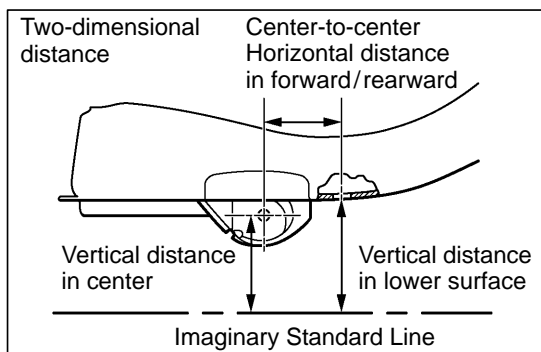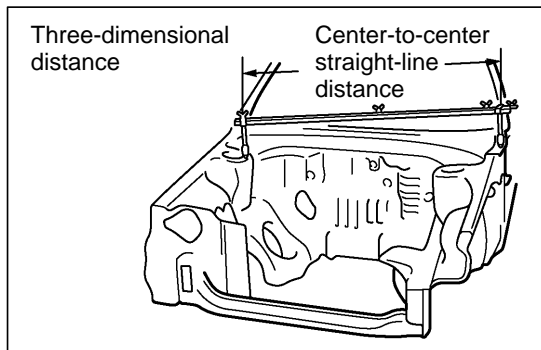


SYMBOL	Name
1	The place that was lowered A mm from the under surface of the rocker panel centered on the front jack up point.
2	The place that was lowered B mm from the under surface of the rocker panel centered between 1 and 3.
3	The place that was lowered C mm from the under surface of the rocker panel centered on the rear jack up point.

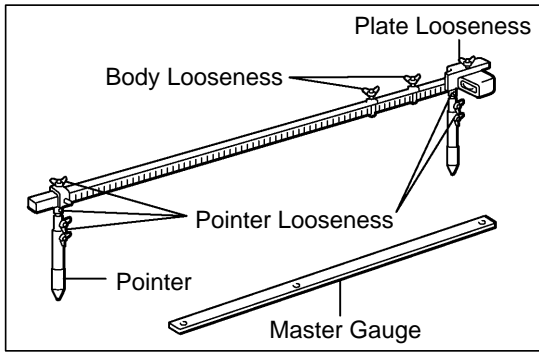

2. MEASURING

- (a) Basically, all measurements are to be done with a tracking gauge. For portions where it is not possible to use a tracking gauge, a tape measure should be used.
- (b) Use only a tracking gauge that has no looseness in the body, measuring plate, or pointers.

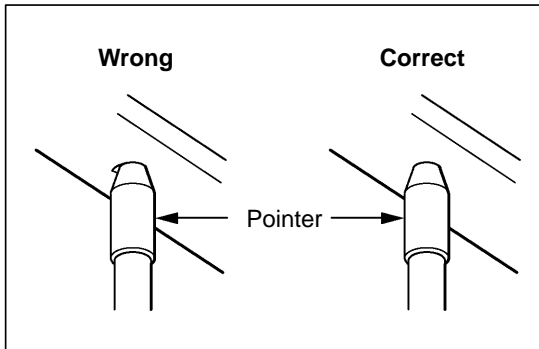


HINT:

- 1) *The height of the left and right pointers must be equal.*
 - 2) *Always calibrate the tracking gauge before measuring or after adjusting the pointer height.*
 - 3) *Take care not to drop the tracking gauge or otherwise shock it.*
 - 4) *Confirm that the pointers are securely in the holes.*
- (c) When using a tape measure, avoid twists and bends in the tape.


UNDER BODY

(Three-Dimensional Distance)

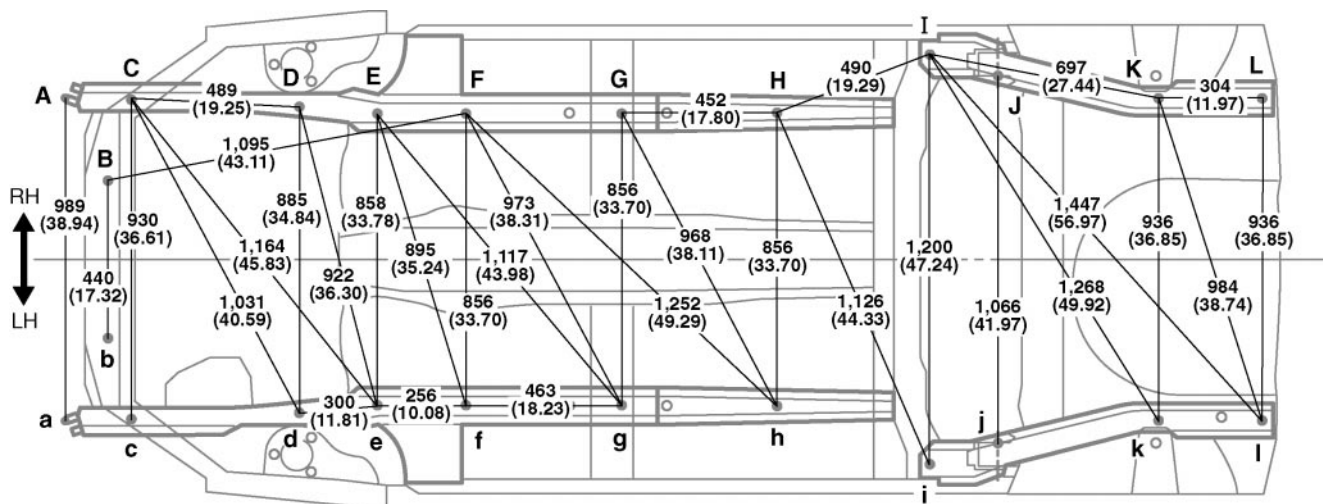

Front ←

1	2	3
101 (3.98)	100 (3.94)	100 (3.94)

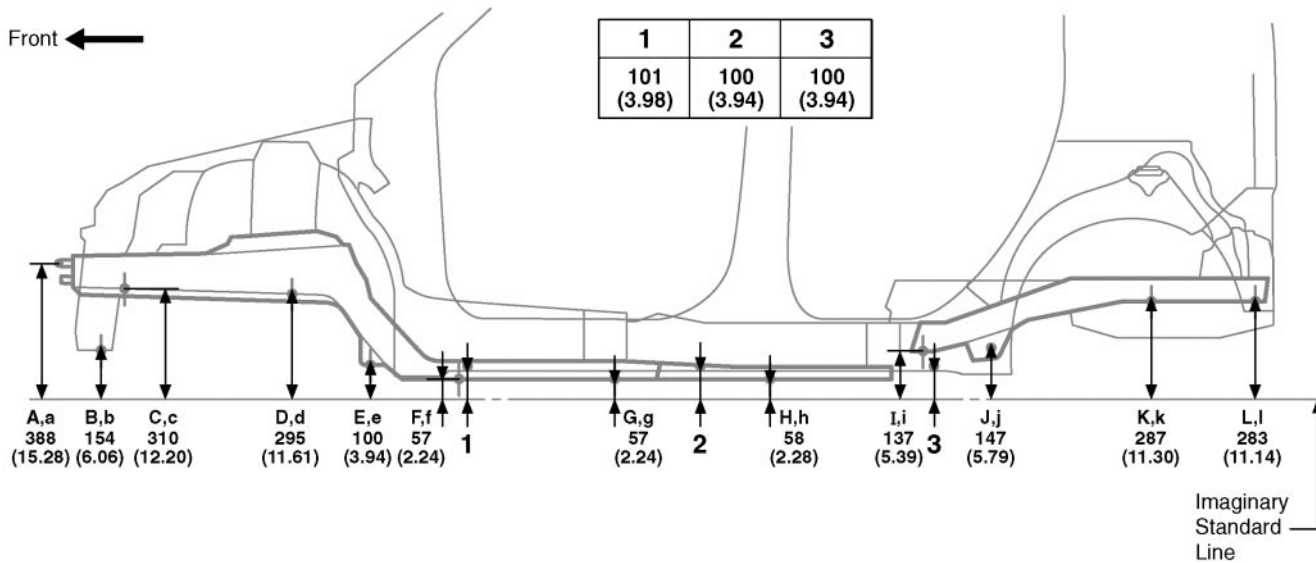


mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front bumper reinforcement installation bolt	8 (0.31) bolt	G, g	Front side member standard hole	18 (0.71)
B, b	Radiator lower support standard hole	15 (0.59)	H, h	Front floor under reinforcement standard hole	18 (0.71)
C, c	Front side member standard hole	18 (0.71)	I, i	Rear floor side member standard hole	18 (0.71)
D, d	Front suspension member installation nut	12 (0.47) nut	J, j	Trailing arm installation hole-inner	13 (0.51)
E, e	Front suspension member installation nut	14 (0.55) nut	K, k	Rear floor side member standard hole	18 (0.71)
F, f	Front side member standard hole	18 (0.71)	L, l	Transport hook installation nut	10 (0.39) nut

UNDER BODY

(Two-Dimensional Distance)

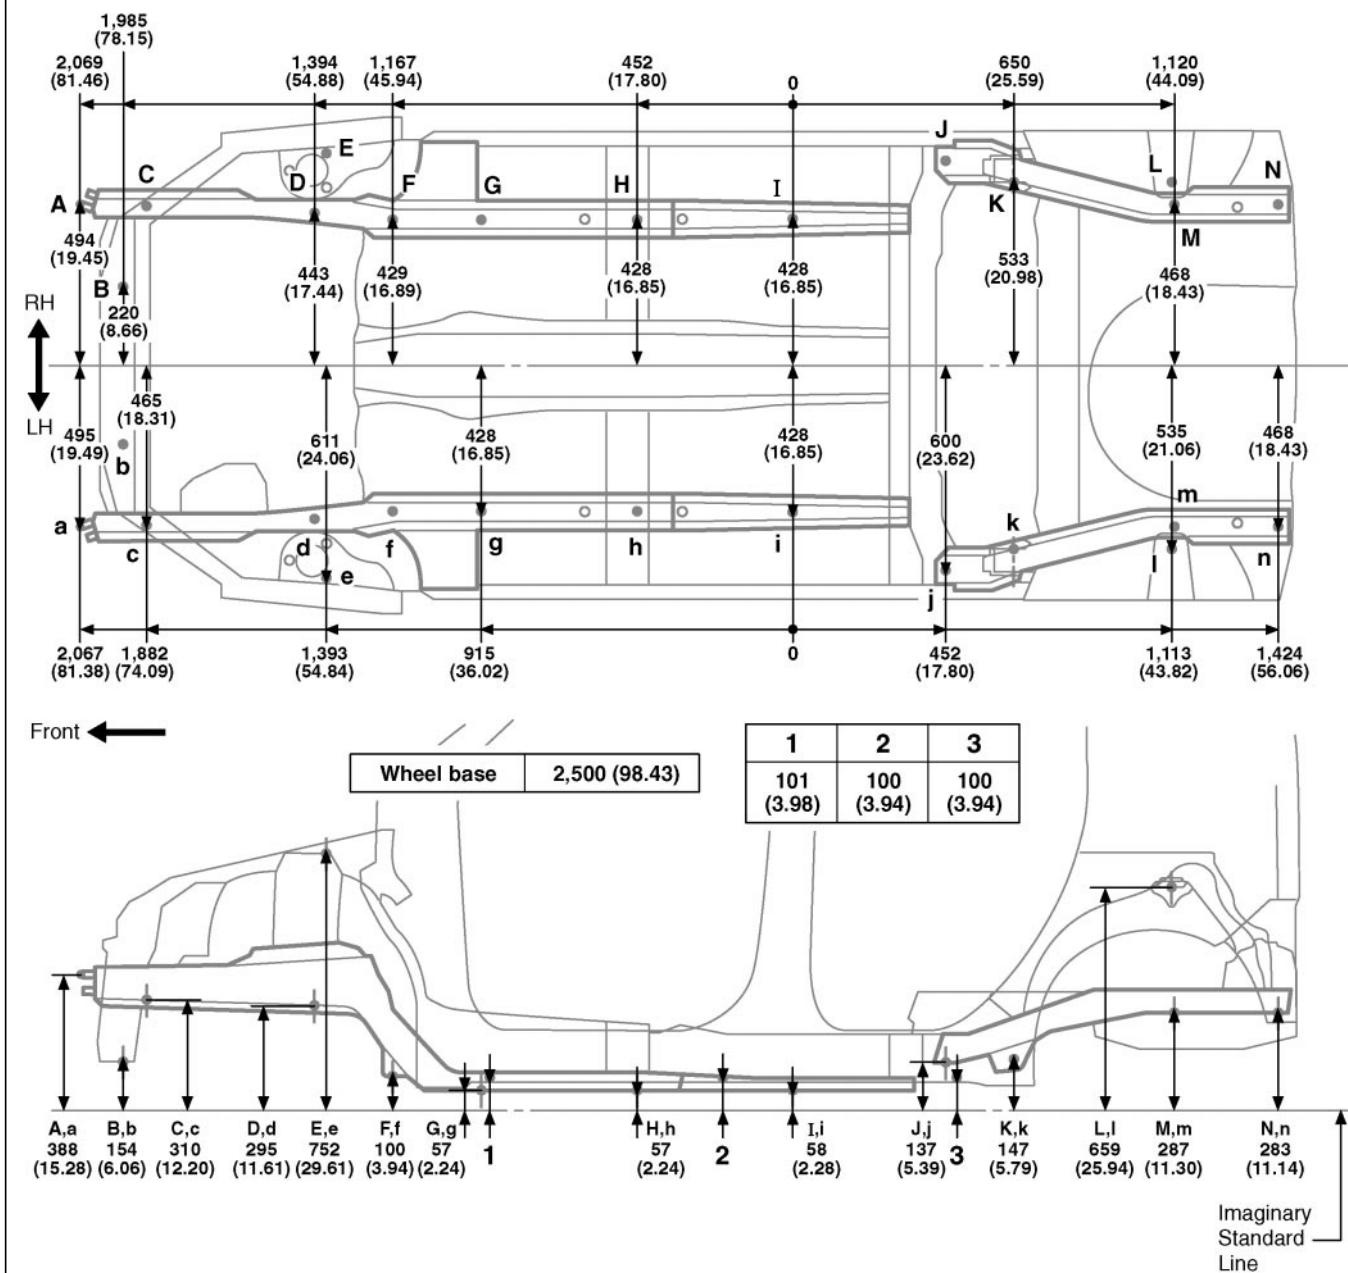

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front bumper reinforcement installation bolt	8 (0.31) bolt	H, h	Front side member standard hole	18 (0.71)
B, b	Radiator lower support standard hole	15 (0.59)	I, i	Front floor under reinforcement standard hole	18 (0.71)
C, c	Front side member standard hole	18 (0.71)	J, j	Rear floor side member standard hole	18 (0.71)
D, d	Front suspension member installation nut	12 (0.47) nut	K, k	Trailing arm installation hole-inner	13 (0.51)
E, e	Front spring support hole-outer	11 (0.43)	L, l	Rear shock absorber installation hole	18 (0.71)
F, f	Front suspension member installation nut	14 (0.55) nut	M, m	Rear floor side member standard hole	18 (0.71)
G, g	Front side member standard hole	18 (0.71)	N, n	Transport hook installation nut	10 (0.39) nut